



Industrial Controller KS 90-1/DP

KS 92-1/DP

KS 90-1programmer/DP,

KS 92-1programmer/DP




KS 90-1-1
KS 92-1
PROFIBUS-DP



**Interface Description
PROFIBUS - DP
Parameter transmission
9499 040 65311**

valid from: 8422

Explanation of symbols

-  General information
-  General warning
-  Attention: ESD sensitive devices

SIMATIC® is a registered trademark of Siemens AG

STEP® is a registered trademark of Siemens AG



PROFIBUS® is a registered trademark of
PROFIBUS Nutzerorganisation (PNO)

DAC® is a patented method and a registered trademark
of Regeltechnik Kornwestheim GmbH

SyCon® is a registered trademark of
Hilscher Gesellschaft für Systemautomation GmbH

BluePort® is a registered trademark of
PMA Prozeß- und Maschinen-Automation GmbH

BlueControl® is a registered trademark of
PMA Prozeß- und Maschinen-Automation GmbH

© 2005 PMA Prozeß- und Maschinen-Automation GmbH ● Printed in Germany
All rights reserved. No part of this document may be reproduced or published in any form
or by any means without prior written permission from the copyright owner.

A publication of PMA Prozeß- und Maschinen Automation GmbH
P.O. 310229
D-34058 Kassel
Germany

Contents

| | | |
|----------|--|-----------|
| 1 | General | 5 |
| 1.1 | GSD file | 5 |
| 1.2 | Engineering Set | 5 |
| 2 | Parameter transmission for DPV0 | 6 |
| 2.1 | Message elements | 7 |
| 2.2 | General communication structure | 8 |
| 2.3 | Data write procedure | 9 |
| 2.4 | Data read procedure | 9 |
| 2.5 | Examples | 10 |
| 2.5.1 | Example 1: single access, read, integer value | 10 |
| 2.5.2 | Example 2: Block access, read, float value. | 10 |
| 2.5.3 | Example 3: Single access, write, integer value | 11 |
| 2.5.4 | Example 4: Block access, write, float value | 12 |
| 3 | Getting started with SIMATIC® S7 | 13 |
| 3.1 | Simple access | 14 |
| 3.2 | Direct access | 15 |
| 4 | Function blocks for SIMATIC® S7 | 16 |
| 4.1 | FB106, FB107 structure. | 16 |
| 5 | Parameter transmission in DPV1 | 18 |
| 5.1 | Connection to DPV1 master | 19 |
| 5.1.1 | Hints for setting up the DP master | 19 |
| 5.1.2 | Available acyclical connections | 20 |
| 5.2 | Acyclical services Read, Write. | 20 |
| 5.2.1 | Read service | 20 |
| 5.2.2 | Write service | 21 |
| 5.2.3 | Data type and data format | 21 |
| 5.2.4 | Negative response telegram | 22 |
| 5.2.5 | Address structure | 23 |
| 6 | BlueControl® via PROFIBUS-DPV1 | 24 |
| 6.1 | CIF card setting. | 24 |
| 6.2 | BlueControl® settings | 25 |
| 7 | Address formats | 26 |
| 7.1 | Area definitions | 26 |
| 7.2 | Special values | 26 |
| 7.2.1 | Composition of the address tables. | 27 |
| 7.2.2 | Internal data types | 27 |
| 8 | Terms | 28 |

9 Index 29
10 Address tables 31
 10.1 Explanations for program addresses 31

1 General

Thank you very much for deciding for the industrial controller KS 90-1/DP / KS 92-1/DP respectively for the programmer KS 90-1 *programmer*/DP / KS 92-1 *programmer*/DP. The KS 90-1 format is 48x96 mm, the KS 92-1 format is 96x96 mm. The products are signified as "device" or "instrument" in the following text.

The instruments are equipped with a PROFIBUS-DP interface for transmission of process, parameter and configuration data. Connection is on the controller rear. The serial communication interface permits connection to supervisory systems, PC's, visualization tools, etc.

The possibilities of acyclical transmission of parameters, process data, etc. in the cyclical process data channel are described in this documentation. This feature is called parameter channel. Possibilities for instrument connection, process data channel structure and special KS 90-1 / KS 92-1 instrument functions are described in documentation "Interface description PROFIBUS-DP Process data" (9499-040-66611)".

1.1 GSD file

The actual version of the GSD-file you can find on the homepage www.pma-online.de keyword software.. The GSD-file is valid for both KS 90-1 and KS 92-1 as well as the programmer version of both.

i The GSD file is available as a standard file with English texts (PMA29402.gsd) and with German texts (PMA29402.gsg). For working with German texts with your PROFIBUS master configuration, please, install file PMA29402.gsg.


i Instruments from series date 8406 require GSD file PMA29402.gs* for using the DPV1 functionality.

1.2 Engineering Set

For easy comissioning there is an engineering set KS 90-1/DP (order-no.. 9407-999-10501). It can be used with KS 90-1 as well as with KS 92-1.

The Engineering set comprises:

- Interface description for PROFIBUS-DP – Process Data
Document "Interface description PROFIBUS-DP Process Data" (9499-040-66611) provides basic explanations for connection of KS 90-1/DP to PROFIBUS-DP networks. It contains hints for cyclical process data exchange.
- Interface description for PROFIBUS-DP Parameter Data
Document "Interface description PROFIBUS-DP Parameter Data" (9499-040-65311) describes additional functions for transfer of process values, parameters and configuration data via the parameter channel
- Floppy with GSD-data, example projects for Siemens STEP7-environment and Hilscher CIF/Sycon applications, functionblocks for parameterchannel transmission with S7-environment.

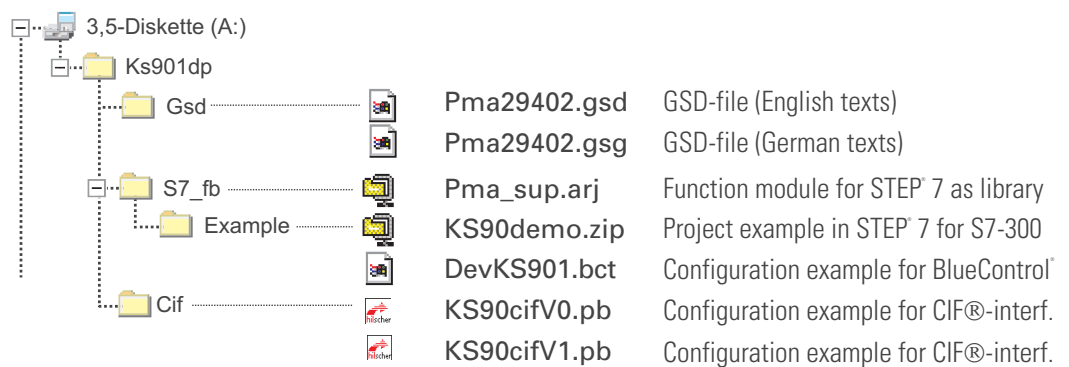


2 Parameter transmission for DPV0

For transmission of parameters, the 'parameter channel' via which data can be exchanged transparently via the function block protocol independent of controller is available. Thereby, all protocol access types are supported (single or block access, data formats integer (FixPoint or floating point). Communication to the controller is transparent, i.e. the user himself is responsible for monitoring adjustment ranges, operating modes (remote/local) etc.

The parameter channel is designed for large data quantities with low requirements on the transmission speed.

This message is handled during cyclical process data exchange (also called DPV0 (=standard) operation).

Fig.: 1 Parameter channel schematic drawing

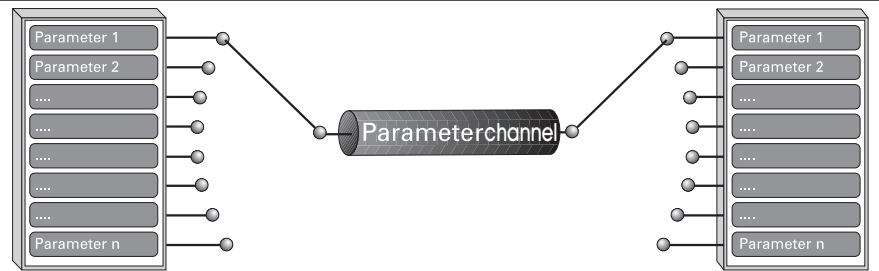

Parameter channel

Access to process, parameter and configuration data is possible via the parameter channel. These data are transmitted on request over several cycles.


The user can set up parameter channel transmission by selecting plug & GO module A.4 in its PROFIBUS configuration (see also documentation 9499-040-66611). Configuration is via the bus master bus configuration tool.

Module A.4:

General- Parameter channel:1)

| | | | |
|--------------------------|---|----------------|-------|
| Parameter channel | module-ID: F3 _{hex} / 243 _{dez} | | |
| Reading | Bytes | Writing | Bytes |
| Reply data | 8 | Requested data | 8 |

Fig.: 2 Hardware configuration example for SIMATIC S7

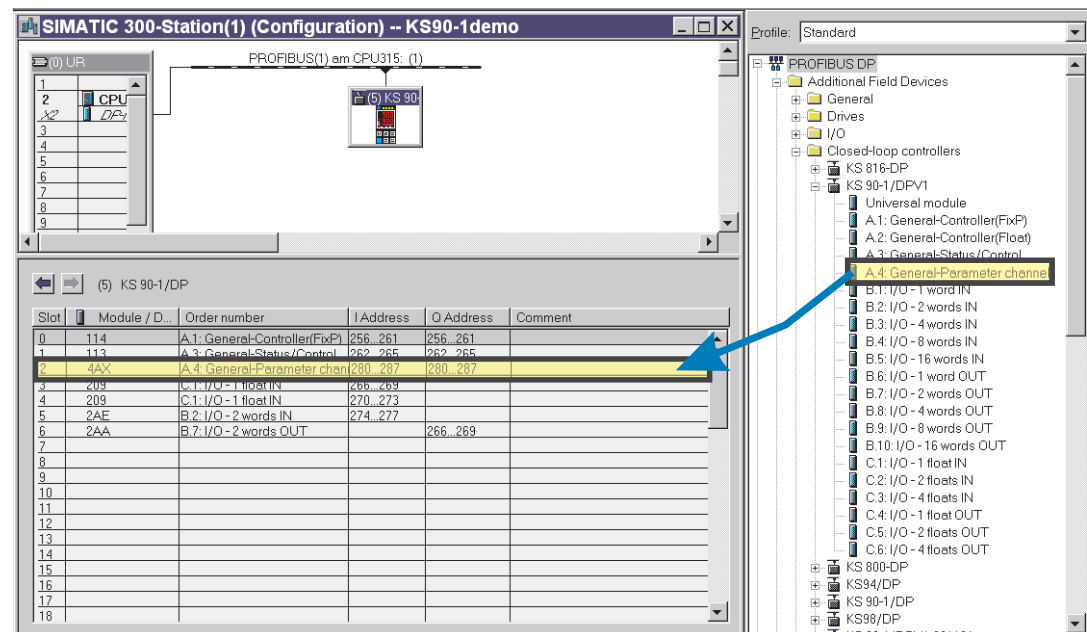

1) Please note the necessary consistency data transmission!

2.1 Message elements

Some terms which are explained below are used in the following paragraphs:

| Element | Description |
|------------------|---|
| ID | Telegram type identification |
| ID1 | Data format of the transmitted or received data |
| Rd.Cnt | Number of data which can be read |
| Adr.High | Start address High-Byte |
| Adr.Low | Start address Low-Byte |
| Cnt. Real | Number of float data which can be written |
| Cnt. Int | Number of integer data which can be written |

ID

The element ID identifies the telegram type:

| | | |
|---------------------------------|---|----------------|
| ID = 0x10 (16 _{dez}) | ≙ | Start telegram |
| ID = 0x68 (104 _{dez}) | ≙ | Data telegram |
| ID = 0x16 (22 _{dez}) | ≙ | End telegram |

ID1

The element ID1 identifies the data format:

| | | |
|------------|---|-----------------------------|
| ID1 = 0 | ≙ | Integer |
| ID1 = 1, 3 | ≙ | Float |
| ID1 = 2 | ≙ | single character(char) |
| ID1 = 4 | ≙ | character in compact format |

Integer format(0)

Data are transmitted as 2 integer bytes in the data telegram. The start address determines, if these data are integer, FixPoint1, FixPoint2 or FixPoint3 values. With a start address defined in the float address range, it will be converted into the corresponding integer range.

Float format(1,3)

Data are transmitted as 4 bytes with floating decimal point in the data telegram. Unless a start address in the float address range is defined, the start address is converted into the corresponding float range.

Character format(2)

Data are transmitted as 1 character byte in the data telegram. Unless a start address in the integer address range is defined, the start address is converted into the corresponding integer range.

Compact character format(4)

Data are transmitted as 4 character bytes in the data telegram. Unless a start address in the integer address range is defined, the start address is converted into the corresponding integer range. Unused digits in the data telegram are filled with value 0x00.

Rd.Cnt

Rd.Cnt defines the number of data to be read in the selected format (ID1).



For this, data Cnt.Real and Cnt.Int must be zero.

Adr.High/Adr.Low

Fields Adr.High and Adr.Low define the start address of data to be defined. The address is divided into a high byte and a low byte.



Example: The integer value of the address for set-point 5^P is 3180_{dec}, as float value, its address is 39128_{dec}.

| Name | Format | Adr. dez. | Adr. hex | Value in decimal format | | Value in hex format | |
|------|---------|-----------|----------|-------------------------|---------|---------------------|---------|
| | | | | Adr.High | Adr.Low | Adr.High | Adr.Low |
| SP | Integer | 3180 | 0C6C | 12 | 108 | 0C | 6C |
| SP | Float | 39128 | 98D8 | 152 | 216 | 98 | D8 |

Cnt.Real Value defined for the number of real values to be written (ID1 = 1, 3). The value for Cnt.Int must be 0.

Cnt.Int Value defined for the number of integer values to be written (ID1 = 0, 2, 4). The value for Cnt.Real must be 0.

2.2 General communication structure

For transmission of the required parameters via an 8-byte data window, the access comprises start, data and end telegram. The messages to be sent by the master are shown below.

 Please, note that consistent data transmission of 8 bytes for the parameter channel is required.

Start telegram Start telegram with specification of data format, start address and number to be transmitted.

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|----------|---------|--------|-----------|----------|
| ID | ID1 | Rd.Cnt | Adr.High | Adr.Low | 0 | Cnt. Real | Cnt. Int |

Data telegram n Data blocks with data to be transmitted

Structure of data telegram:

a) Transmission of floating point values (ID1 = 1,3)

format float

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|--------|--------|--------|--------|--------|
| ID | Count | | | Float | | | |

b) Transmission of integer values (ID1 = 0)

format integer

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|--------|--------|--------|---------|--------|
| ID | Count | | | | | Integer | |

c) Transmission of Char values (ID1 = 2)


format character

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|--------|--------|--------|--------|--------|
| ID | Count | | | | | | Char |

d) Transmission of four characters (ID1 = 4)

format string

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|--------|--------|--------|--------|--------|
| ID | Count | | | Char | Char+1 | Char+2 | Char+3 |

 The byte sequence for float and integer formats is as Motorola (default) or Intel format according to the user parameter setting. See also document "SB PROFIBUS-DP process data" (9499-040-66611).

End telegram an end block, provides the result of the operation

End telegram structure:

| Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|--------|--------|--------|--------|--------|--------|--------|--------|
| ID | | Result | | | | | |

| Signification of Result | |
|-------------------------|-------------------|
| 0 | OK |
| 2 | erroneous address |
| 3 | invalid value |
| 4 | buffer overflow |

A read or write operation is always started by the master. If the values of Cnt.Real or Cnt.Int \neq 0, a write, otherwise a read service is started; a value Rd.Cnt \neq 0 is a prerequisite of the latter.

2.3

Data write procedure

Start telegram:

| | | | | | | | | |
|---------------------|--------|--------|--------|-----------|---------|--------|-----------------------|----------------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| Master sends: | 0x10 | ID1 | 0 | Adr.High. | Adr.Low | 0 | Cnt.Real ¹ | Cnt.Int ¹ |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| Controller replies: | 0x10 | | | | | | | |

Data telegrams:

| | | | | | |
|---------------|--------|--------|--------|--------|------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
| Master sends: | 0x68 | Count | | | Value |

| | | | | | |
|---------------------|--------|--------|--------|--------|------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
| Controller replies: | 0x68 | Count | | | |

Thereby, the first value is sent with Count = 1, for flow checking, Count is mirrored by KS 90-1/DP (1 ≤ Count ≤ Cnt.Real resp. Cnt.Int).

End telegram:

| | | | | | |
|---------------|--------|--------|--------|--------|------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
| Master sends: | 0x16 | | | | |

| | | | | |
|---------------------|--------|--------|----------|------------|
| | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
| Controller replies: | 0x16 | | Result | |

2.4

Data read procedure

Start telegram:

| | | | | | | | | |
|---------------------|--------|--------|--------|----------|---------|--------|-----------------------|----------------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| Master sends: | 0x10 | ID1 | Rd.Cnt | Adr.High | Adr.Low | 0 | 0 | 0 |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| Controller replies: | 0x10 | | | | | | Cnt.Real ¹ | Cnt.Int ¹ |

Data telegrams:

| | | | | | |
|---------------|--------|--------|--------|--------|------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
| Master sends: | 0x68 | Count | | | |

| | | | | | |
|---------------------|--------|--------|--------|--------|------------|
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
| Controller replies: | 0x68 | Count | | | Value |

With Count = 1, the first value is requested, for flow control, Count is mirrored by the controller and the value is also sent (1 ≤ Count ≤ Cnt.Real resp. Cnt.Int).

1) Selection: only one of values Cnt.Real and Cnt.Int may be ≠ 0.

□ End telegram:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x16 | | | | |

| Controller | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
|------------|--------|--------|----------|------------|
| replies: | 0x16 | | Result | |

2.5 Examples

2.5.1 Example 1: single access, read, integer value

The controller proportional band (P_b) is to be read out in FixPoint1format (address = 13192_{dec}).

Start telegramm:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|---------------|--------|--------|--------|--------|--------|--------|--------|--------|
| Master sends: | 0x10 | 0x0 | 0x1 | 0x33 | 0x88 | 0 | 0 | 0 |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|------------|--------|--------|--------|--------|--------|--------|--------|--------|
| replies: | 0x10 | | | | | | 0 | 1 |

Data telegram 1:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x68 | 1 | | | |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|------------|--------|--------|--------|--------|------------|
| replies: | 0x68 | 1 | | | Value |

End telegram:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x16 | | | | |

| Regler | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
|----------|--------|--------|----------|------------|
| replies: | 0x16 | | 0 | |

2.5.2 Example 2: Block access, read, float value

The set-point adjustment parameters ($SP.L$, $SP.H$, $SP.2$, $r.SP$) are to be read in float format (address = 38968_{dec}, 4 values).

Start telegram:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|---------------|--------|--------|--------|--------|--------|--------|--------|--------|
| Master sends: | 0x10 | 0x1 | 0x4 | 0x98 | 0x38 | 0 | 0 | 0 |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|------------|--------|--------|--------|--------|--------|--------|--------|--------|
| replies: | 0x10 | | | | | | 4 | 0 |

Data telegram 1:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x68 | 1 | | | |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|------------|--------|--------|--------|--------|------------|
| replies: | 0x68 | 1 | | | Value |

...

Data telegram 4:

| Master sends: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| | 0x68 | 4 | | | |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|------------|--------|--------|--------|--------|------------|
| replies: | 0x68 | 4 | | | Value |

End telegram:

| Master sends: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| | 0x16 | | | | |

| Controller | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
|------------|--------|--------|----------|------------|
| replies: | 0x16 | | 0 | |

2.5.3 Example 3: Single access, write, integer value

Derivative action time 1 (t_{d1}) of the controller shall be written in integer format (address = 5004_{dec}).

Start telegram:

| Master sends: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|---------------|--------|--------|--------|--------|--------|--------|--------|--------|
| | 0x10 | 0x0 | 0x0 | 0x13 | 0x8C | 0 | 0 | 1 |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|------------|--------|--------|--------|--------|--------|--------|--------|--------|
| replies: | 0x10 | | | | | | | |

Data telegram 1:

| Master sends: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| | 0x68 | 1 | | | Value |

| Controller | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|------------|--------|--------|--------|--------|------------|
| replies: | 0x68 | 1 | | | |

End telegram:

| Master sends: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| | 0x16 | | | | |

| Controller | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
|------------|--------|--------|----------|------------|
| replies: | 0x16 | | 0 | |

2.5.4 Example 4: Block access, write, float value

The parameters of limit value 1 (L. 1, H. 1, HYS. 1) shall be written in float format (address = 36968_{dec}, 3 values).

Start telegram:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|---------------------|--------|--------|--------|--------|--------|--------|--------|--------|
| Master sends: | 0x10 | 0x1 | 0x0 | 0x90 | 0x68 | 0 | 3 | 0 |
| Controller replies: | 0x10 | | | | | | | |

Data telegram 1:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x68 | 1 | | | Value |

| Controller replies: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------------|--------|--------|--------|--------|------------|
| | 0x68 | 1 | | | |

...

Data telegram 3:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x68 | 3 | | | Value |

| Controller replies: | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------------|--------|--------|--------|--------|------------|
| | 0x68 | 3 | | | |

End telegram:

| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 - 7 |
|---------------|--------|--------|--------|--------|------------|
| Master sends: | 0x16 | | | | |

| Controller replies: | Byte 0 | Byte 1 | Byte 2-3 | Byte 4 - 7 |
|---------------------|--------|--------|----------|------------|
| | 0x16 | | 0 | |

3 Getting started with SIMATIC® S7

The disk enclosed in the engineering set contains the GSD file and project examples for a SIMATIC® S7. Communication with a process controller can be built up easily by means of configuration and project.

Test environment

The following components are required for the exemplary test set-up:

- Programming unit (PG) or PC with PC adaptor
- Programming tool STEP®7 ≥ V5.0
- PLC

e.g. CPU S7 315-2 DP, latest revision

Components

- KS 90-1/DP, (e.g. order no. KS90-100-2000D-000)
- Sub-D adaptor (e.g. order no. 9407-998-07001)
- Engineering set (e.g. order no. 9407 999 10511)
- Cable
 - PROFIBUS cable PLC ↔ KS90-1/DP with PROFIBUS connector and integrated termination resistors
 - PG ↔ PLC

Test environment example:

Task

- A KS 90-1/DP with address 5 shall be connected to CPU315-2 DP via PROFIBUS-DP.
- The parameter channel shall be set up. For this, process data module A.4 must be included.



Before take the test environment into operation, you should ensure that the PLC do not contain any user software ("clear/reset").

Procedure:

Procedure

- Make the connections (PROFIBUS)
- Configure the instruments
 - Load the example engineering from the floppy into KS 90-1/DP
 - Adjust address 5 to KS 90-1/DP (via front keys or BlueControl)
 - connect instruments to PROFIBUS network
 - Activate the bus termination resistors.
- PROFIBUS-network configuration
 - Insert disk (Engineering Set) into PG.
 - Retrieve the example project (A:\KS901DP\S7_FB\EXAMPLE\KS90demo.zip)
 - Open project KS90-1demo.
 - if necessary adapt addresses and CPU hardware configuration and download it to the DP master (CPU315-2 DP).
 - Switch PLC to run mode.

After taking the test set-up into operation, testing the parameter channel by means of the variable tables (VAT 2, VAT3) enclosed in the project is possible.

3.1 Simple access

Access to the parameter channel is possible using a simplified input function via variable table VAT2. In the program example, the relevant conversions in FC104 are carried out, i.e. only the following values must be defined for manual data transmission:

- Read / write selection
- Data type selection
- Start address definition
- Number of data to be transmitted
- Execution start

Procedure

For data transmission testing, proceed as follows:

- Select, if you want to read or to write data (0 or 1)
- Select the transmission data type (integer, float, character; 0,1,2)
- Specify a start address; if you have adjusted a float transmission, you should define the address in hex format.
- Select the number of data to be transmitted with Count.
- Define Write values within DB37.Dxxx; as a word or double word dependent of selected data type.
- Start message handling with value Start = 1.
- The message is finished, if the result is 0x0002 (positive) or 0x0004 (negative). Read values are within DB37.Dxxx.

Result

Display word shows the current status of transmission for the selected data range. The structure of the display word is:

| | | | | | | | | | | | | | | | |
|--------------|----------------|----|----|----|---|---|---|---|-----------------------|---------------------------|-------------|--------------------------|---------------------------|------------------------------|------------|
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Timeout (FB) | Faulty service | | | | 000 : ok 010 : faulty address 011 : invalid value 100: buffer overflow | | | | wait for end telegram | Service (0=Read; 1=Write) | Reset order | wait for acknowledgement | Order finished with fault | Order finished without fault | Order busy |

Fig. 3: VAT 2: Example for simple parameter operation, here: read 4 real values

The screenshot shows the SIMATIC Manager interface for the VAT2 parameter table. The table has columns for Address, Symbol, Symbol comment, Status value, and Modify value. Callouts point to specific fields:

- read, float**: Points to the 'View' field (M 0.2).
- address**: Points to the 'Address' field (MW 116).
- read 4 values**: Points to the 'Count' field (MW 118).
- result read access**: Points to the 'Result' field (MW 120).
- start**: Points to the 'Start' field (M 0.0).
- result values**: Points to the 'DB37.DBW' and 'DB37.DBD' fields.

| Address | Symbol | Symbol comment | Status value | Modify value |
|---------|--|----------------|-----------------------|--------------|
| 1 | //KS 90-1/DP.Adr.5 - Demonstration parameter channel - simplified view | | | |
| 2 | M 0.2 | "View" | 0 | 0 |
| 3 | M 0.3 | "Read/Write" | 0 | 0 |
| 4 | MW 2 | "Data type" | 1 | 1 |
| 5 | MW 116 | "Address" | -26568 | |
| 6 | MW 116 | "Address" | VW#16#9838 | VW#16#9838 |
| 7 | MW 118 | "Count" | 4 | 4 |
| 8 | MW 110 | "Count_real" | 4 | |
| 9 | MW 112 | "Count_int" | 0 | |
| 10 | MW 114 | "Count_char" | 0 | |
| 11 | MW 120 | "Result" | 2#0000_0000_0000_0010 | |
| 12 | M 0.0 | "Start" | 0 | 1 |
| 13 | M 121.4 | "ResetFB" | 0 | //Z#1 |
| 14 | M 0.1 | "Selected_FB" | 2#1 | |
| 15 | // data value in integer format | | | |
| 16 | DB37.DBW 0 | | 0 | //300 |
| 17 | DB37.DBW 2 | | 0 | |
| 18 | DB37.DBW 4 | | 17505 | |
| 19 | DB37.DBW 6 | | 0 | |
| 20 | DB37.DBW 8 | | 16800 | |
| 21 | DB37.DBW 10 | | 0 | |
| 22 | //data value in real format | | | |
| 23 | DB37.DBW 0 | | 0.0 | //55.0 |
| 24 | DB37.DBW 4 | | 900.0 | |
| 25 | DB37.DBW 8 | | 20.0 | |
| 26 | DB37.DBW 12 | | -32000.0 | |
| 27 | DB37.DBW 16 | | DW#16#000A0001 | |
| 28 | DB37.DBW 20 | | 4.398047e+013 | |
| 29 | | | | |

3.2 Direct access

Alternatively, direct access to function blocks FB106, FB107 (see below) via variable table VAT3 is possible.

Fig. 4: Example for direct access to the FBs of the parameter channel

| # | Address | Symbol | Symbol comment | Status value | Modify value | |
|----|---------------------------------|--|--------------------------|-----------------------|--------------|--|
| 1 | //KS 90-1/DP | Adr. 5 - Demonstration parameter channel - detailed view | | | | |
| 2 | M 0.2 | "View" | 0=simplified, 1=detailed | 1 | 1 | |
| 3 | MW 100 | "Service" | | W#16#0000 | W#16#0000 | |
| 4 | MW 102 | "RdCnt" | | 1 | 1 | |
| 5 | MW 104 | "AdrHighByte" | | W#16#002C | W#16#002C | |
| 6 | MW 106 | "AdrLowByte" | | W#16#006C | W#16#006C | |
| 7 | MW 108 | "Type" | | 0 | 0 | |
| 8 | MW 110 | "Count_real" | result | 0 | | |
| 9 | MW 112 | "Count_int" | result | 1 | //1 | |
| 10 | MW 114 | "Count_char" | result | 0 | | |
| 11 | MW 120 | "Result" | | 2#0000_0000_0000_0010 | | |
| 12 | M 0.0 | "Start" | | 0 | 1 | |
| 13 | M 121.4 | "ResetFB" | | 2#0 | //2#1 | |
| 14 | M 0.1 | "Selected_FB" | 0= FB106, 1= FB107 | 2#0 | 2#0 | |
| 15 | // data value in integer format | | | | | |
| 16 | DB37.DBW 0 | | | 300 | //300 | |
| 17 | DB37.DBW 2 | | | 0 | | |
| 18 | DB37.DBW 4 | | | 17505 | | |
| 19 | DB37.DBW 6 | | | 0 | | |
| 20 | DB37.DBW 8 | | | 16800 | | |
| 21 | DB37.DBW 10 | | | 0 | | |
| 22 | //data value in real format | | | | | |
| 23 | DB37.DBD 0 | | | 3.159141e-038 | //55.0 | |
| 24 | DB37.DBD 4 | | | 900.0 | | |
| 25 | DB37.DBD 8 | | | 20.0 | | |
| 26 | DB37.DBD 12 | | | -32000.0 | | |
| 27 | DB37.DBD 16 | | | DW#16#000A0001 | | |
| 28 | DB37.DBD 20 | | | | | |

For parameter description, see chapter 4.1.

4 Function blocks for SIMATIC® S7

S7 function blocks FB106 (PMA-FIX) and FB107 (PMA float) are used for easy access to parameter and configuration data of KS 90-1.

Calling up the FB is indispensable when starting an order and as long as the order is active.

Dependent of S7-CPU and DP master, there are differences in the I/O handling. When using the on-board DP interface of a CPU315-2 DP, SFC modules 14 and 15 must be used for transmitting data consistently. SFC modules 14 and 15 copy the I/O areas into the marker or data module area. When using an external CP (CP 342-5 DP), the relevant SEND and RECEIVE FB's at the cycle start and end must be used. The FB has an instance DB which must be specified with function block call.

Every FB has an instance DB, which must also be specified when calling up the FB.

4.1 FB106, FB107 structure

Function blocks FB106, FB107 have the call parameters given below. In FB106, the data are stored in word width in the associated data block, in double word width with FB107.

| Name | Typ | Description / function | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--------------|----------------|--|----|----|----|----------------------|----|----|---|-----------------------|---------------------------|-------------|--------------------------|---------------------------|------------------------------|------------|----------------------|---|--------------|----------------|--|--|--|--|----------|--|--|--|-----------------------|---------------------------|-------------|--------------------------|---------------------------|------------------------------|------------|--|--|--|--|----------------------|--|--|--|----------------------|
| A-Anfang | Pointer | Start address range of output words (e.g. address of data range 'RECORD' of SFC 15, Ax, y when using an external CP). When specifying a data word, the DB no. must also be transmitted (e.g. DB4.DBX0.0). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E-Anfang | Pointer | Start address range of input words (e.g. address data range 'RECORD' of SFC 15, Ex, y when using an external CP). When specifying a data word, the DB no. must also be transmitted (e.g. DB4.DBX0.0). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DB-Para | Pointer | Specification of data block with the parameter data. Entry comprises the data block no. and the data word no. where the parameter data start. Thereby, no offset needs to be taken into account. The data are interpreted as parameter data by the specified address. Specification of the DB must be in the following form, e.g. DB6.DBX10.0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Service | WORD | Service (Read/Write) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Code_nr | WORD | Read access: number of values to be read | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FB_nr | WORD | Address, high byte | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FKT_nr | WORD | Address, low byte | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Typ | WORD | d.c. (always '0') | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Timeout | DWORD | Timeout value, is decremented at each call. With a value = 1, the order is cancelled with error message 'timeout'. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DWLR | WORD | Length of real values; definition when writing | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DWLI | WORD | Length of integer values; definition when writing | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DWLC | WORD | Length of Char values; definition when writing | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ANZW | W | The display word shows the current status of transmission for the selected data range. The display word structure is: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | <table border="1"> <thead> <tr> <th>15</th> <th>14</th> <th>13</th> <th>12</th> <th>11</th> <th>10</th> <th>9</th> <th>8</th> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Timeout (FB)</td> <td rowspan="2">Faulty service</td> <td colspan="4"></td> <td>000 : ok</td> <td colspan="3"></td> <td rowspan="2">wait for end telegram</td> <td rowspan="2">Service (0=Read; 1=Write)</td> <td rowspan="2">Reset order</td> <td rowspan="2">wait for acknowledgement</td> <td rowspan="2">Order finished with fault</td> <td rowspan="2">Order finished without fault</td> <td rowspan="2">Order busy</td> </tr> <tr> <td colspan="4"></td> <td>010 : faulty address</td> <td colspan="3"></td> <td>100: buffer overflow</td> </tr> </tbody> </table> | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | Timeout (FB) | Faulty service | | | | | 000 : ok | | | | wait for end telegram | Service (0=Read; 1=Write) | Reset order | wait for acknowledgement | Order finished with fault | Order finished without fault | Order busy | | | | | 010 : faulty address | | | | 100: buffer overflow |
| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Timeout (FB) | Faulty service | | | | | 000 : ok | | | | wait for end telegram | Service (0=Read; 1=Write) | Reset order | wait for acknowledgement | Order finished with fault | Order finished without fault | Order busy | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | 010 : faulty address | | | | | | | | | | | 100: buffer overflow | | | | | | | | | | | | | | | | | | | | | | | | | | | |

The function module reads or writes KS 90-1/DP parameter/configuration data.

- A-Anfang, E-Anfang
Enter the input addresses or output addresses of the parameter channel in these parameters. The addresses are determined when configuring the PROFIBUS unit. (STEP 7 - hardware configuration)
- DB-Para
DB-Para is a pointer to the data module into which read data are written or from which data are removed when writing..

- Service
This parameter determines the access mode (write / read).

| | | | |
|----------------------|-------------------------|---------------------|------------------------|
| Write access: | F0 \triangleq Integer | Read access: | 0 \triangleq Integer |
| | F1 \triangleq Real | | 1 \triangleq Real |
| | F2 \triangleq Char | | 2 \triangleq Char |
- Code_nr
With read accesses, Code_nr defines the the number of data to be read. In this case, the data DWLR, DWLI, DWLC must be zero. When writing, Code_nr = 0 must be set.
- FB_nr
Specify the high byte of the parameter to be addressed.
Example: parameter **L. f**, address 2100_{dec} \triangleq 0834_{hex}


| | |
|------------------|--|
| FB_nr contains: | 08 _{hex} \triangleq 8 _{dec} |
| FKT_nr contains: | 34 _{hex} \triangleq 52 _{dec} |
- FKT_nr
Specify the low byte of the parameter to be addressed.
- DWLR (Real), DWLI (Integer), DWLC (Char)
These parameters contain the relevant number of received data after a read access. With a write access, the relevant number of data to be transmitted is specified. Only one of these parameters may contain a value \neq 0.
- ANZW
This display word provides the mapping for the current transmission status. Bit 4 can be used as an input for resetting the B 206 / FB 207.

5 Parameter transmission in DPV1

In a first extension (DPV1), the standard PROFIBUS functions were completed by standard functions for acyclical parameter reading and writing. Thus e.g. slave parameter changing during operation is possible. This acyclical data communication is in parallel to the cyclical data exchange, but with lower priority, in the remaining time of the programmed communication cycle.

The instrument supports DPV1 functions. Additionally, loading a complete engineering into the instrument or reading it from the instrument into the PC are possible using PROFIBUS-DPV1 via BlueControl®. In this way, central engineering stations can be built up, e.g. without transferring the data e.g. via a PLC.

Fig.: 5 DPV1 Connecting possibilities

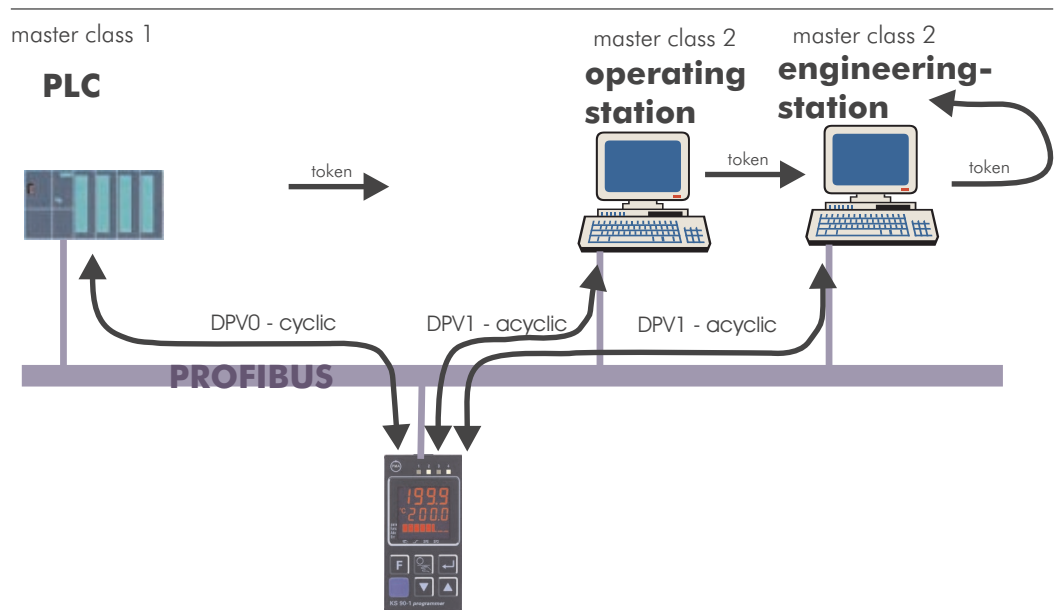

From DP firmware version \geq V2.0, the instrument supports:

- an acyclical connection class 1 master
- two acyclical connections to class 2 masters
- up to a data length of 240 bytes per communication
- the acyclical services to class 1 master
 - Read reading a data block
 - Write writing a data block
 - Alarm explicitly acknowledged alarm which is transmitted from instrument to the master
 - Alarm_Ack The master acknowledges reception of an alarm
- the acyclical services to class 2 master
 - Read reading a data block
 - Write writing a data block
 - Initiate build-up of a data connection to instrument
 - Abort build-up of data connection to instrument

5.1 Connection to DPV1 master

Class 1 master

The two classes of PROFIBUS-DP masters are:

- Class 1 master (DPM1):
With a class 1 master, fast changing process data are exchanged cyclically with the associated slaves, e.g. KS 90-1/DP. Typical class 1 masters are PLCs, Soft PLCs (PC) or supervisory systems.

Class 2 master

- Class 2 master (DPM2):
Acyclical access to slaves in the PROFIBUS network is possible by class 2 masters. These slaves can be allocated to another class 1 master. Examples are operating systems and engineering stations which exchange data with slaves only on request.

Multi-master,
Mono-master


- Systems with more than one master integrated in a PROFIBUS network are called multi-master systems. A typical case is a PLC as a class 1 master for processing of the decentral data and a PC as an operating/engineering station (class 2 master).
Systems with only one master are called mono-master systems.

5.1.1 Hints for setting up the DP master

For smooth operation, we recommend using the following DP master settings:

- The active master supports DPV1 - services
- Enable the DPV1 functionality at the master and for the selected instrument
- If applicable, specify the max. channel size (240 bytes)
- Check or adjust the Token target rotation time.

Fig.: 6 Token access

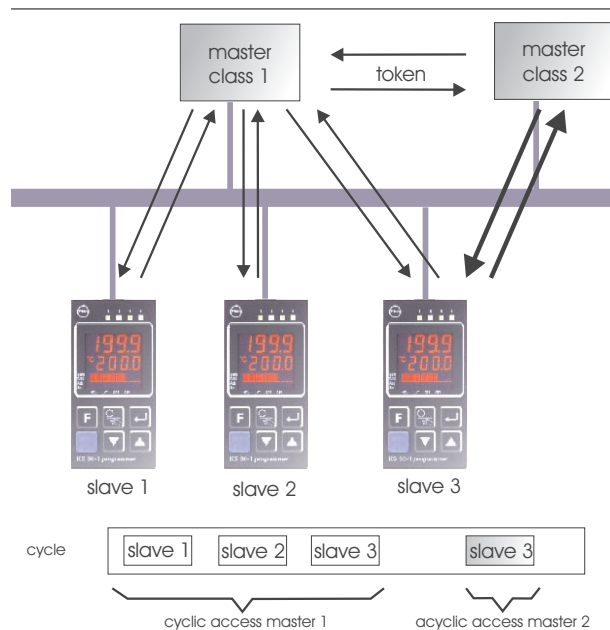

Token target rotation time



The Token time (T_{tr}) must not be too low, otherwise, the acyclic message cannot be handled. This time defines the maximum available time for one Token rotation, within which all active DP masters get the permission for bus access once



When using one or several class 1 masters and one or several class 2 masters in a multi-master system, the token target rotation time must be set to the same value on all masters, e.g. the sum of all individual times.



At low Profibus transfer-rates (9.6 bzw. 19.2 kBit/s) the preset target rotation time is to be enlarged at least by factor 5.

transmission
time



An incorrectly adjusted token target rotation time can cause communication troubles.

The DPV1 transmission times are determined from Baudrate, overall number of data to be transmitted and size of data to be transmitted in the addressed instrument. Example: typical values for transmission of an instrument engineering are within 15 sec. and 3 min.



For access to an instrument via a class 2 master for acyclical services, the instrument can be allocated to and exchange cyclical data with another class 1 master (e.g. PLC). Thereby, it is unimportant whether the class 1 master has defined the instrument as DPV0 or DPV1 slave. However, the allocation of the instrument to another class 1 master is not a prerequisite for acyclical data exchange.

5.1.2 Available acyclical connections

In total, the instrument supports three acyclical connections which can be active simultaneously:

- a class 1 master connection
 - max. two class 2 master connections
- These connection must be built up and cancelled explicitly using services Initiate and Abort.

5.2 Acyclical services Read, Write

Acyclical services Read and Write can be described only generally in this paragraph. With PROFIBUS DPV1, acyclical data addressing is done using a slot number and an index, which can be used for addressing all data enabled for transmission. The maximum number of transmitted data of 240 bytes can be limited by specifying a length.

Before Read and Write service handling, communication must be built up using an initiate command at first with a class 2 master. After finishing the transfer, the communication can be stopped by means of the abort command.



Further information is given in the PROFIBUS master manual, or from the PROFIBUS user organization under www.profibus.com.

The instrument uses parameters slot number and index for instrument parameter addressing via DPV1. For definitions, see chapter "Address structure", page 23.

5.2.1 Read service

Service Read (read dataset) comprises a request telegram sent by the master and a reply telegram returned by the slave after data transfer. In the meantime, the master polls the slave until reception of a reply.

Read request

Parameters for the request telegram:

| Parameter | Range | Signification |
|-------------|-----------|--|
| Slot number | 0 ... 254 | Forms the higher byte of the start address |
| Index | 0 ... 254 | Forms the lower byte of the start address |
| Length | 1 ... 240 | Indicates the number of requested bytes |

Reply

Reply telegram with positive result:

| Parameter | Range | Signification |
|-----------|-----------|-----------------------------|
| Length | 1 ... 240 | Actual number of read bytes |
| Data | | Read data bytes |

5.2.2 Write service

The Write service (write dataset) comprises a request telegram sent by the master and a response telegram returned by the slave after data transfer. In the meantime, the master polls the slave until reception of a reply.

Write request

Parameters for the request telegram:

| Parameter | Range | Signification |
|-------------|-----------|--|
| Slot number | 0 ... 254 | Forms the higher byte of the start address |
| Index | 0 ... 254 | Forms the lower byte of the start address |
| Length | 1 ... 240 | Indicates the number of requested bytes |
| Data | | Data bytes to be written |

Reply

Response telegram with positive result:

| Parameter | Range | Signification |
|-----------|-----------|--------------------------------|
| Länge | 1 ... 240 | Actual number of written bytes |

5.2.3 Data type and data format

Data type

The type of data to be written is determined by the predefined address range (see chapter 7.1).

Example:

If you specify address (slot number + index) $2100_{\text{dec}} = 0834_{\text{hex}}$ for
low limit value 1 (L. f)

this value and all following ones of this message are transmitted as integer value without digits behind the decimal point. When specifying $10292_{\text{dec}} = 2834_{\text{hex}}$
for lower limit value 1 (L. f)

this value and all following values of this message are transmitted as integer value with one digit behind the decimal point. When specifying $36968_{\text{dec}} = 9068_{\text{hex}}$
for lower limit value 1 (L. f)

this and all following values of this message are transmitted als float value.

Data format

The transmitted integer and float values can be different as to the order of bytes. This is Motorola (also IEEE 754 - def. for float values) or Intel format. The PROFIBUS standard (IEC 61158) is based on the Motorola format.

The applicable rules are:

- for class 1 master communication:
 - according to the selected definition in the user parameter setting (Motorola or Intel)
- for class 2 master communication:
 - always Motorola format.

5.2.4 **Negative response telegram**

Unless a service can be handled without error, a negative response telegram is returned from the master to the slave.

Error reply

Response telegram with negative result, supported error messages:

| Parameter | Values | Meaning |
|-------------------------------------|---------------------------------------|---|
| Error identification (Error_Decode) | 128 _{dec} | Describes the protocol system; in this case 128 = DPV1 |
| Error code 1 (Error_Code 1) | Error_Class 0xAy (10 _{dez}) | Application error class Error y: 0x9 "feature not supported" functionality not supported |
| | Error_Class 0xBz (11 _{dez}) | Access error class Error y: 0x0 "invalid index" - faulty address calculation 0x2 "invalid slot" - faulty address calculation 0xA "MODADR invalid" - faulty address calculation (faulty index, slot number) 0xB "Value_invalid" - values not accepted (e.g. no write access permitted, out-of-limits) |
| Error code 2 (Error_Code 2) | 0x00 | Reserved |

5.2.5 Address structure

For addressing individual data, service parameters Slot number and Index are used in common as an address. The slot number is formed by the higher address byte, whilst the index is formed by the lower byte.

Example:

Index \neq FF_{hex}

Parameter **P b 1** (proportional band 1) as integer value (without digits behind the decimal point)

Address: 5000_{dez} = 1388_{hex}
 Slot number: 19_{dez} = 13_{hex}
 Index: 136_{dez} = 88_{hex}



Since value 255 (FF_{hex}) for Slot and Index according to the PROFIBUS standard is not available, the following conversions are necessary.

- Slot number:
No actions are necessary, because no addresses higher than or equal to 65280 (FF00_{hex}) are defined.
- Index:
The following conversion are necessary:
 - ① address = xxFF_{hex} \Rightarrow slot number xx_{hex} & index FF_{hex}
 - ② set index to 1: 01_{hex}
 - ③ add to slot number 80_{hex} (128_{dez}), the result is the substitute address

Example:

Index = FF_{hex}

Parameter **dEL.3** (alarm delay with limit value 2) as integer value (without digits behind the decimal point)

Address: 2303_{dez} = 08FF_{hex}
 Slot number: 8_{dez} = 08_{hex}
 Index: 255_{dez} = FF_{hex}
 add to slot number 80_{hex} (128_{dez}):
 Slot number: 136_{dez} = 88_{hex}
 Set index to 1:
 Index: 1_{dez} = 01_{hex}
 new address: 34817_{dez} = 8801_{hex}

The conversion concerns e.g. the following addresses (selection):



| Adr (dez) | Parameter | Function |
|-----------|-----------|--------------------|
| 2303 | dEL | Lim3 |
| 4351 | Y_1 | Out2 |
| 6143 | SegTyp05 | ProG; 1st program |
| 6655 | SegTyp11 | ProG; 6th program |
| 6911 | Pt05 | ProG; 9th program |
| 7167 | Pt11 | ProG; 11th program |



This address conversion is necessary only, if the start address starts at the addresses listed in the table. If an access to this address is made in a block request, conversion is not necessary.

6 BlueControl® via PROFIBUS-DPV1

The instrument offers the possibility to load a complete engineering into the instrument by means of BlueControl® via PROFIBUS-DPV1, or to read it from the instrument into the PC. Thus central engineering can be built up, without e.g. transmitting the data via a PLC. A complete engineering, operating functions and trend recording are possible and can be transmitted.

-  From version 1.5, the BlueControl® engineering tool presently supports the PROFIBUS PC cards made Hilscher, e.g. CIF50-PB, CIF60-PB, firmware version $\geq 1.0.71$.
-  From version 2.4, the BlueControl® engineering tool additionally supports the PROFIBUS PC cards made by Siemens, e.g. CF5613.

For transmission, settings in the engineering tool and for the PROFIBUS card (Tool SyCon®) are required.

Following, the necessary settings in the engineering-tool and for the PROFIBUS-card are shown by example of a pc-card by Fa. Hilscher.

6.1 CIF card setting

Case 1:

The instrument is not integrated into a PROFIBUS network.
The CIF card must be initialized with the master address and the baudrate.(for example, see fig. 9.).

Case 2:

The instrument is integrated into a network with other DP masters, e.g. S7.


A free master address must be allocated to the CIF card. The Baudrate already used at the bus must be adjusted. The target rotation time must be adapted and adjusted on all masters connected to the PROFIBUS (s. below). Only the CIF card needs to be defined as C2 master (no instrument required as slave).

Case 3:

The instrument is integrated into an engineering with the selected CIF card as a slave.
Access to the instrument is in the form of C1 communication.

Subsequently, the instrument must be connected with the CIF card.

Fig.: 7 DPV1 - Parameter settings CIF

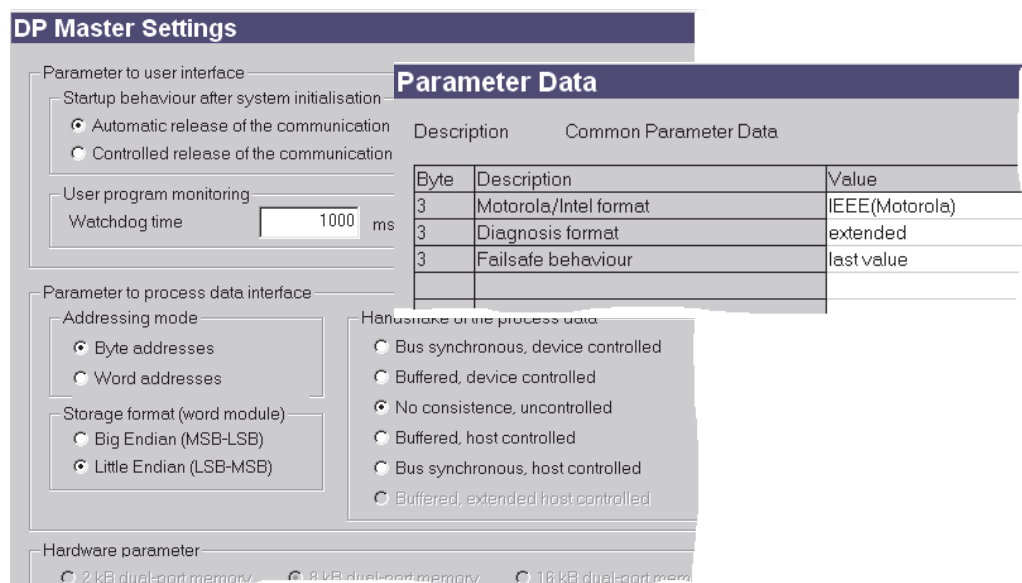

The screenshot shows the 'DP Master Settings' window with a 'Parameter Data' table. The table lists three parameters related to communication format and failsafe behavior.

| Byte | Description | Value |
|------|-----------------------|----------------|
| 3 | Motorola/Intel format | IEEE(Motorola) |
| 3 | Diagnosis format | extended |
| 3 | Failsafe behaviour | last value |

Other visible settings include:

- Startup behaviour after system initialisation: Automatic release of the communication
- User program monitoring: Watchdog time: 1000 ms
- Addressing mode: Byte addresses
- Storage format (word module): Little Endian (LSB-MSB)
- Hardware parameter: 2 KB dual-port memory

6.2 BlueControl® settings

- Select the transfer channel to BlueControl® by selecting field “Settings” with PROFIBUS 1 to 4 (max. 4 PROFIBUS cards can be fitted in the PC).
- Define the KS 90-1/DP to be selected by specification of the address (PROFIBUS address).



For transmission from BlueControl®, we recommend using the basic settings for the Hilscher interface card:

- Instrument: user parameters
- Set Motorola/Intel format to “Motorola = 0” .
- Set DP master storage format to “little Endian” (LSB/MSB).



An engineering download via DPV1 functions is available from DP firmware version 2.0.


If building up of a transmission channel by means of the Hilscher interface cards is not possible, the cause may be e.g.:

- The instrument contains an earlier software version (error message -7).
- The instrument is defined as a DPV0 slave and access to the instrument by the engineering tool is via a class 1 master access (error message 1132).
- The maximum channel data length in the DPV1 settings of the instrument is too low (error message 1132). The instrument is designed for 240 bytes.
- There is no communication with the instrument (error message 1129).
- The target rotation time is too low (error message 1129).



Only one engineering tool per instrument at a time may be busy exchanging data.

Fig.: 8 Selecting the transfer channel

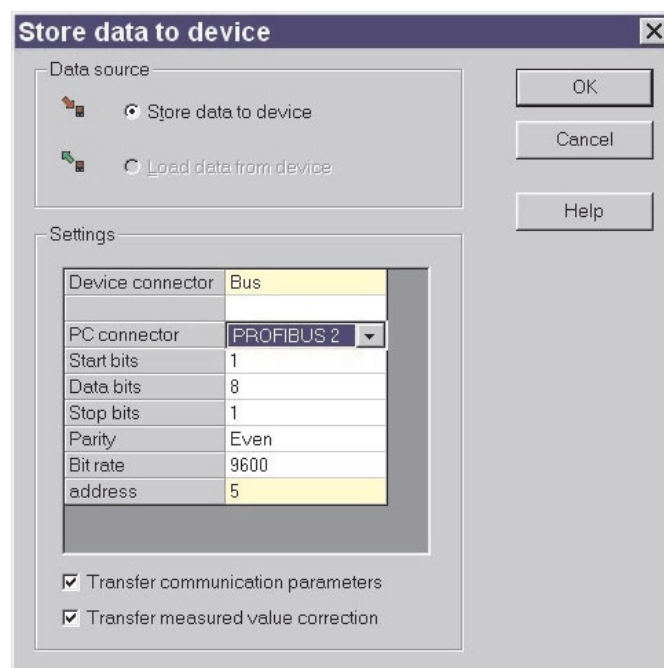

7 Address formats

7.1 Area definitions

The address is coded in 2 bytes (= 1 word). The 3 most significant bits are used for definition of the format in which the data are written or read.

For BluePort[®] devices the following formats are available:

Für Geräte stehen folgende Formate zur Verfügung

- **Integer**
- **Integer with 1, 2, 3 digit(s)**
- **Floating point format (Float to IEEE)**

| Address range | Data format | Transmissible min. value | Transmissible max. value | Resolution |
|------------------|--|--------------------------|--------------------------|-------------|
| 0x0000 to 0x1FFF | Integer without digits behind the decimal point | -30000 | +32000 | +/- 1 |
| 0x2000 to 0x3FFF | Integer with 1 digit behind the decimal point | -3000.0 | +3200.0 | +/- 0.1 |
| 0x4000 to 0x5FFF | Integer with 2 digits behind the decimal point | -300.00 | + 320.00 | +/- 0.01 |
| 0x6000 to 0x7FFF | Integer with 3 3 digits behind the decimal point | -30.000 | + 32.000 | +/- 0.001 |
| 0x8000 to 0xBFFF | Float (IEEE format) | -1.0 E+037 | +1.0 E+37 | +/- 1.4E-45 |

 With the integer numbers without and with digits behind the decimal point, value range -30000 to 32000 is transmitted via the interface. Scaling with factors 1, 10, 100 or 1000 must be done by both the sender and the receiver.

To make polling and presetting of processdata, parameter- and configurationdata as easy as possible, the relevant ranges are grouped.

 Processdata can be defined multiple in different groupings.

7.2 Special values

With transmission in integer format, the following special values are defined:

- -31000 This datum or a dependent value has a sensor failure.
- -32500 This datum is not defined. This value is returned by the controller, if a datum in the block is not defined with a block request..
- -32000 The function is switched off.
- -32768 Corresponds to 0x8000 hex; the value to be transmitted is out of the transmissible integer range.

The following special values are defined with transmission in float format:

- -1.5E37 This datum is not defined. This value is returned by the controller, if a datum within the block is not defined with a block request.

 Data with a switch-off value (-32000) are marked "off" in column "Value" of the following tables.

7.2.1 Composition of the address tables

In the address tables shown in Section 5, the addresses for every parameter of the corresponding data format are specified in decimal values.

The tables are structured as follows:

| Name | R/W | Address | Integer | Real | Type | Value/off | Description |
|------|-----|-------------|---------|------|------|-----------|-------------|
| | | base 1dP | | | | | |

- Name Description of the datum
- R/W permitted type of access: R = read, W = write
- Address integer Address for integer values
- base Integer without decimals
- 1 dP Integer with 1 decimal
- 2 dP Integer with 2 decimals
- 3 dP Integer with 3 decimals
- Real Floating point number / Float (IEEE format)
- Type internal data type
- Value/off permissible value range, switch-off value available
- Description Explanations

7.2.2 Internal data types

The following data types are assigned to data used in the device:

- Float
Floating point number
Value range: -1999 ... -0.001, 0, 0.001 ... 9999
- INT
Positive whole integer number
Value range: 0 ... 65535
Exception: Switch-off value '-32000'
- Text
Text string consisting of n characters, currently defined n = 5
Permissible characters: 20H...7FH
- Long
Positive whole Long number
Value range: 0 ... 99999
- Enum
Selection value

8 Terms

| | |
|----------------------|---|
| BlueControl® | Engineering tool software for BluePort® controller |
| BluePort®- interface | interface at the front of the controller to connect an engineering tool |
| DPV0 | zyklischer Datenaustausch, Grundfunktionen |
| DPV1 | azyklische Dienste zusätzlich zu DPV0 |
| ET | Abbreviation of engineering tool |
| Fail-safe | behaviour of a device in case of PROFIBUS or bus master fault. |
| FB | Abbreviation of function block |
| Float | Abbreviation of floating point number |
| FixPoint | data format with one fixed decimal point |
| Fkt | Abbreviation for function |
| Forcing | Presetting of input and output values via bus interface |
| Function | a partial function of the function block which is self-contained seen from the interface |
| Function block | closed sequence unit |
| GSD file | file of instrument data, standardized description of communication capabilities |
| HW | Abbreviation of hardware |
| Master Klasse 1 | Master, der den zyklischen Nutzdatabaustausch durchführt |
| Master Klasse 2 | Master für Inbetriebnahme und Engineering - Aufgaben |
| MS0 | zyklische Kommunikation zwischen Master Klasse 1 und Slave |
| MS1 | azyklische Kommunikation zwischen Master Klasse 1 und Slave |
| MS2 | azyklische Kommunikation zwischen Master Klasse 2 und Slave |
| Parameter channel | Possibility to transfer data acyclically and sequentially within the cyclic process data exchange |
| PG | Abbreviation of programming unit |
| PNO | PROFIBUS Nutzerorganisation |
| PROFIBUS-DP | Standard communication protocol to IEC 61158 (DP: decentral peripheral units) |
| Real | another term for floating point number |
| RS485 | Standard 2-wire connection, half duplex, (EIA RS 485) |
| S5 / S7 | PLC families of the Siemens AG |
| Serial interface | rear bussable controller interface |
| SW | Abbreviation of software |
| TTL | Signal level at chip level |
| VAT | Variable table: monitoring of values in STEP®7 |

9

 Index

Index

A

| | |
|--------------------------|---------|
| A-Anfang | 16 |
| Abort | 18 |
| Acyclical services | 20 - 23 |
| Read | 20 |
| Write | 21 |
| Address formats | 26 - 27 |
| Address tables | 31 - 32 |
| Alarm | 18 |
| Alarm_Ack | 18 |
| ANZW | 17 |
| Area definition | 26 |

B

| | |
|--------------------------------------|---------|
| BlueControl® via PROFIBUS-DPV1 | 24 - 25 |
|--------------------------------------|---------|

C

| | |
|---|----|
| Class 1 master | 19 |
| Class 2 master | 19 |
| Code_nr | 17 |
| Composition of the address tables | 27 |

D

| | |
|---------------------|--------|
| Data telegram | 8 |
| DB-Para | 16 |
| DP-V0 | 6 - 12 |
| DWLC | 17 |
| DWLI | 17 |
| DWLR | 17 |

E

| | |
|---------------------------|---------|
| E-Anfang | 16 |
| End telegram | 8 |
| Example | 10 - 13 |
| Block access, read | 10 |
| Block access, write | 12 |

F

| | |
|---------------------------------------|---------|
| FB_nr | 17 |
| FB106 | 16 - 18 |
| FB107 | 16 - 18 |
| FKT_nr | 17 |
| Format | |
| Character | 7 |
| Compact character | 7 |
| Float | 7 |
| Gleitkomma | 26 |
| Integer | 7 |
| Function blocks for SIMATIC® S7 | 16 - 17 |

G

| | |
|---------------|---|
| General | 5 |
|---------------|---|

I

| | |
|---------------------------|----|
| Index | 23 |
| Initiate | 18 |
| Internal data types | 27 |

M

| | |
|-----------------------|---|
| Message element | 7 |
| Adr.High | 7 |

| | |
|------------------------------------|---------|
| Adr.Low | 7 |
| Cnt.Int | 8 |
| Cnt.Real | 8 |
| ID | 7 |
| ID1 | 7 |
| Rd.Cnt. | 7 |
| Module A.4 | 6 |
| Mono-Master | 19 |
| Multi-master | 19 |
| N | |
| Negative response telegram | 22 |
| O | |
| Off | 26 |
| P | |
| Parameter channel | 6 |
| Parameter transmission | 6 - 12 |
| Procedure | 13 |
| Data read | 9 |
| Data write | 9 |
| R | |
| Read | 18 |
| S | |
| Service | 17 |
| Simple access | 14 |
| Slot number | 23 |
| Special values | 26 - 28 |
| Start telegram | 8 |
| T | |
| Terms | 28 |
| Transmission | |
| Parameter/configuration data | 6 |
| V | |
| VAT2 | 14 |
| VAT3 | 15 |
| W | |
| Write | 18 |

10 Address tables

The following sections describe the address tables for:

- **Process controller KS 90-1 / KS 92-1**
- **Programmer KS 90-1 programmer / KS 92-1 programmer**

10.1 Explanations for program addresses

For addressing the programs of the KS 90-1 programmer / KS 92-1 programmer the following rules should be observed:

- The program currently active can be reached by address 6100 f..
- The starting addresses of the stored programs start at 6200 f. for program 1, 6300 f. for program 2and so on (see table).
- The program structure is the same for every program

| | program start addresses | | | | |
|---------------------------|-------------------------|-------|-------|-------|-------|
| | base | 1 dP | 2 dP | 3dP | real |
| currently running program | 6100 | 14292 | 22484 | 30676 | 44968 |
| Program 1 | 6200 | 14392 | 22584 | 30776 | 45168 |
| Program 2 | 6300 | 14492 | 22684 | 30876 | 45368 |
| Program 3 | 6400 | 14592 | 22784 | 30976 | 45768 |
| Program 4 | 6500 | 14692 | 22884 | 31076 | 45968 |
| Program 5 | 6600 | 14792 | 22984 | 31176 | 46168 |
| Program 6 | 6700 | 14892 | 23084 | 31276 | 46368 |
| Program 7 | 6800 | 14992 | 23184 | 31376 | 46568 |
| Program 8 | 6900 | 15092 | 23284 | 31476 | 46768 |
| Program 9 | 7000 | 15192 | 23384 | 31576 | 46968 |
| Program 10 | 7100 | 15292 | 23484 | 31676 | 47168 |
| Program 11 | 7200 | 15392 | 23584 | 31776 | 47368 |
| Program 12 | 7300 | 15492 | 23684 | 31876 | 47568 |
| Program 13 | 7400 | 15592 | 23784 | 31976 | 47768 |
| Program 14 | 7500 | 15692 | 23884 | 32076 | 47968 |
| Program 15 | 7600 | 15792 | 23984 | 32176 | 48168 |
| Program 16 | 7700 | 15892 | 24084 | 32276 | 48368 |



Making changes in the actual working program is only temporary (address 6100 f.) If changes shall be permanent the value must be written to the programs address (e.g. 7100 for program 10 or 6300 for program 2).

Notes:

Table Of Contents

| | | | |
|-----------------|----|--------------|----|
| 1 Cntr | | Signal | 35 |
| ConF..... | 1 | | |
| PAr | 4 | | |
| Signal | 7 | | |
| 2 InP.1 | | | |
| ConF..... | 13 | | |
| PAr | 15 | | |
| Signal | 16 | | |
| 3 InP.2 | | | |
| ConF..... | 17 | | |
| PAr | 18 | | |
| Signal | 18 | | |
| 4 InP.3 | | | |
| ConF..... | 19 | | |
| PAr | 21 | | |
| Signal | 22 | | |
| 5 Lim | | | |
| ConF..... | 22 | | |
| PAr | 24 | | |
| Signal | 24 | | |
| 6 Lim2 | | | |
| ConF..... | 25 | | |
| PAr | 26 | | |
| Signal | 27 | | |
| 7 Lim3 | | | |
| ConF..... | 27 | | |
| PAr | 28 | | |
| Signal | 29 | | |
| 8 LOGI | | | |
| ConF..... | 29 | | |
| Signal | 32 | | |
| 9 ohnE | | | |
| ConF..... | 34 | | |
| PAr | 35 | | |
| | | Signal | 39 |
| 10 ohnE1 | | | |
| | | Signal | 39 |
| 11 ohnE2 | | | |
| | | Signal | 39 |
| 12 ohnE3 | | | |
| | | Signal | 40 |
| 13 ohnE4 | | | |
| | | Signal | 40 |
| 14 othr | | | |
| ConF..... | 41 | | |
| Signal | 43 | | |
| 15 Out.1 | | | |
| ConF..... | 49 | | |
| Signal | 51 | | |
| 16 Out.2 | | | |
| ConF..... | 52 | | |
| 17 Out.3 | | | |
| ConF..... | 54 | | |
| Signal | 54 | | |
| Signal | 57 | | |
| 18 Out.4 | | | |
| ConF..... | 58 | | |
| Signal | 61 | | |
| 19 Out.5 | | | |
| ConF..... | 61 | | |
| Signal | 63 | | |
| 20 Out.6 | | | |
| ConF..... | 64 | | |

Table Of Contents

| | | |
|-----------|--------------|----|
| 21 | PAr.2 | |
| | PAr | 66 |
| | Signal | 66 |
| 22 | SEtP | |
| | PAr | 67 |
| | Signal | 67 |
| 23 | Tool | |
| | ConF..... | 68 |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| SP.Fn | r/w | base | 3150 | 39068 | Enum | Enum_SPFN | Basic configuration for setpoint processing, e.g. 'setpoint controller switchable to external setpoint'. Configuration of special, controller-dependent setpoint functions. |
| | | 1dP | 11342 | | | | |
| | | 2dP | 19534 | | | | |
| | | 3dP | 27726 | | | | |
| | | | | | | | |

- 0 set-point controller can be switched over to external set-point (->LOGI/SP.E)
- 8 Setpoint controller switchable to setpoint controller with external setpoint shift (switchable -> LOGI/SP.E).

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| C.tYP | r/w | base | 5062 | 42892 | Enum | Enum_CtYP | The process value can be assigned directly to an input value, but it can also be computed from the comparison of two input values. For this, various formulas are provided for the user, e.g. the difference or the ratio of the two input values. |
| | | 1dP | 13254 | | | | |
| | | 2dP | 21446 | | | | |
| | | 3dP | 29638 | | | | |
| | | | | | | | |

- 0 Standard controller (process value = x1)
- 1 Ratio controller $(x1 + oFFS) / x2$.
An offset is added to the input value x1, and then the ratio is calculated from the result and the input value x2. This ratio is used as process value.
- 2 The process value is calculated as the difference of the two values $(x1 - x2)$.
- 3 Maximum value of x1 and x2. The higher value is used for control. In case of a sensor fault, control is continued with the remaining process value.
- 4 Minimum value of x1 and x2. The lower value is used for control. In case of a sensor fault, control is continued with the remaining process value.
- 5 Mean value $(x1 + x2) / 2$. In case of a sensor fault, control is continued with the remaining process value.
- 6 Switchover between the input values: process value = x1 or process value = x2.
- 7 O2 function with constant sensor temperature. The engineering unit for the O2 setting should be checked under: Other -> parameter unit (ppm / %).
The sensor temperature must be defined under: Parameters -> Controller -> Sensor temperature.
- 8 O2 function with measured sensor temperature. The sensor temperature is required as the second process value x2.
The engineering unit for the O2 setting should be checked under: Other -> Parameter unit (ppm / %).

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| C.Fnc | r/w | base | 5050 | 42868 | Enum | Enum_CFnc | Control behaviour (algorithm) referred to output value: e.g. 2- or 3-point controller, signaller, 3-point stepping control. |
| | | 1dP | 13242 | | | | |
| | | 2dP | 21434 | | | | |
| | | 3dP | 29626 | | | | |
| | | | | | | | |

- 0 on/off controller or signaller with one output. The on/off controller or signaller switches if the process value drifts from the setpoint more than the hysteresis.
- 1 PID control, e.g. heating, with one output: Switched as a digital output (2-point) or used as an analog output (continuous). PID controllers respond quickly to changes of the control deviation, and typically do not exhibit any permanent control offset.
- 2 D / Y / Off, or 2-point controller with partial/full load switch-over. 2 digital outputs: Y1 is the switching output and Y2 is the changeover contact for D/Y.
- 3 2 x PID control, e.g. heating/cooling. Two outputs: Switched as a digital output (3-point) or used as an analog output (continuous). PID controllers respond quickly to changes of the control deviation, and typically do not exhibit any permanent control offset.
- 4 3-point stepping controller, e.g. for motor actuators. Two digital outputs. No actuating pulses are generated when the process is lined out.
- 5 3-point stepping controller with position feedback signal Yp, e.g. for motorized valves. Two digital outputs. No output signals are generated when the process is lined out. The position feedback signal Yp serves for displaying the actuator position, but also for monitoring the actuator if the DAC function (Digital Actuator Control) is provided.
- 6 continuous controller with integrated positioner. This is basically a cascade. A tracking controller with three-point stepping behaviour which operates with Yp as process value is used with the continuous controller.

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|--|---|
| mAn | r/w | base | 5051 | 42870 | Enum | Enum_mAn | Enables the output value to be adjusted in manual operation. If adjustment is not enabled, the output value cannot be changed in manual operation, neither with the front keys nor via the interface. Note: This setting does not affect the auto/manual switchover function. | |
| | | 1dP | 13243 | | | | | |
| | | 2dP | 21435 | | | | | |
| | | 3dP | 29627 | | | | | |
| | | | | | | | 0 The output value cannot be changed in manual operation, neither with the front keys nor via the interface. | |
| | | | | | | | 1 The output value is to be adjusted in manual operation (see also LOGI/mAn). | |
| C.Act | r/w | base | 5052 | 42872 | Enum | Enum_CAct | Operating sense of the controller. Inverse operation (e.g. heating) means increased heat input when the process value falls. Direct operation (e.g. cooling) means increased heat input when the process value increases. | |
| | | 1dP | 13244 | | | | | |
| | | 2dP | 21436 | | | | | |
| | | 3dP | 29628 | | | | | |
| | | | | | | | 0 Inverse or opposed-sense response, e.g. heating. The controller output is increased with a falling process value, and decreased with a rising process value. | |
| | | | | | | | 1 Direct or same-sense response, e.g. cooling. The controller output is increased with a rising process value, and decreased with a falling process value. | |
| FAIL | r/w | base | 5053 | 42874 | Enum | Enum_FAIL | With the sensor break response, the operator determines the instrument's reaction to a sensor break, thus ensuring a safe process condition. | |
| | | 1dP | 13245 | | | | | |
| | | 2dP | 21437 | | | | | |
| | | 3dP | 29629 | | | | | |
| | | | | | | | 0 controller outputs switched off | |
| | | | | | | | 1 y = parameter Y2 (Caution: fixed parameter Y2, not controller output Y2!). Note for three-point stepping controller: With $Y2 < 0.01$ CLOSED is set (DY= -100%), with $0.01 \leq Y2 \leq 99.9$ no output is set (DY=0%), with $Y2 > 99.9$ OPEN is set (DY= +100%). Note for signallers: With $Y2 < 0.01$ OFF is set, with $0.01 \leq Y2 \leq 99.9$ status keeps unchanged, with $Y2 > 99.9$ ON is set. | |
| | | | | | | | 2 y = mean output. The maximum permissible output can be adjusted with parameter Ym.H. To prevent determination of inadmissible values, mean value formation is only if the control deviation is lower than parameter L.Ym. | |
| rnG.L | r/w | base | 5059 | 42886 | Float | -1999...9999 | <input type="checkbox"/> | Lower limit for the controller's operating range. The control range is independent of the measurement range. Reducing the control range will increase the sensitivity of the self-tuning process. |
| | | 1dP | 13251 | | | | | |
| | | 2dP | 21443 | | | | | |
| | | 3dP | 29635 | | | | | |
| rnG.H | r/w | base | 5060 | 42888 | Float | -1999...9999 | <input type="checkbox"/> | Upper limit for the controller's operating range. The control range is independent of the measurement range. Reducing the control range will increase the sensitivity of the self-tuning process. |
| | | 1dP | 13252 | | | | | |
| | | 2dP | 21444 | | | | | |
| | | 3dP | 29636 | | | | | |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| CYCL | r/w | base | 5055 | 42878 | Enum | Enum_CYCL | Duty cycle for 2-point and 3-point controllers. Internally, the controller calculates a continuous output value, which is converted into switching pulses for digital outputs. The user can adapt the setting to calculate various duty cycles (on/off ratio). |
| | | 1dP | 13247 | | | | |
| | | 2dP | 21439 | | | | |
| | | 3dP | 29631 | | | | |
| | | | | | | | 0 Standard. 'Bathtub curve'. The adjusted duty cycles t1 and t2 are valid for $\pm 50\%$ control output. With very small and very large control outputs, the effective duty cycle is increased sufficiently to prevent nonsensically short operating pulses. The shortest pulses are limited to $\frac{1}{4}$ of t1 and $\frac{1}{4}$ of t2. |
| | | | | | | | 1 Linear water cooling (standard switching behaviour for heating). Cooling only starts above an adjustable temperature value (E.H2O). Cooling 'On' with fixed pulse duration (t.on). Cooling 'Off' with minimum pulse duration (t.oFF), which varies according to controller output. |
| | | | | | | | 2 Non-linear water cooling (standard switching behaviour for heating). The cooling characteristic ensures that controller action is relatively weak between 0 and approx. 70% of controller output. Above that, controller action increases rapidly up to the maximum cooling rate. The parameter 'F.H2O' can be used to alter the curve of the cooling characteristic. |
| | | | | | | | 3 With constant pulses for heating and cooling. The adjusted duty cycles t1 and t2 are maintained over the entire output range. The parameter tp is used to adjust the minimum pulse duration. Shorter pulses are added internally until a pulse of length tp can be generated. |
| tunE | r/w | base | 5056 | 42880 | Enum | Enum_tune | Self-tuning procedure / sequence. Choice between:step response tuning during start-up and pulse response tuning at setpoint; or pulse response tuning during start-up and at setpoint; or only step response tuning during start-up, and no tuning at setpoint (no pulse). |
| | | 1dP | 13248 | | | | |
| | | 2dP | 21440 | | | | |
| | | 3dP | 29632 | | | | |
| | | | | | | | 0 At start-up with step function, impulse function at setpoint. The step function at start up requires a control deviation of more than 10% of the control range. At setpoint, with control deviation less than 10% of the control range, tuning is done with the impulse function. |
| | | | | | | | 1 At start-up with impulse function. Setting for fast controlled systems (e.g. hot runner control). Always tuning with impulse function. At start up, with a control deviation of more than 10% of the control range, the control loop is optimized for a wide control range. At set-point the control deviation during self-tuning is small. |
| | | | | | | | 2 At start up and at set-point always tune step function at start up. Tuning is done with step function at start up, regardless of the control deviation. |
| Strt | r/w | base | 5057 | 42882 | Enum | Enum_Strt | Start of self-tuning. Self-tuning can always be started manually at the request of the operator. Here, it is possible to determine that self-tuning is started automatically under the following conditions: On power-up or when an oscillation of the process value is detected. |
| | | 1dP | 13249 | | | | |
| | | 2dP | 21441 | | | | |
| | | 3dP | 29633 | | | | |
| | | | | | | | 0 no automatic start (manual start via front interface) |
| | | | | | | | 1 Manual or automatic start of auto-tuning at power on or when oscillating is detected (oscillating of process value by more than $\pm 0.5\%$ of the control range, and simultaneously the output value by more than 20%.) Note: Though the process is unchanged, at power on always the (time-consuming) auto-tuning is started. |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|--|
| Adt0 | r/w | base | 5061 | 42890 | Enum | Enum_Ad0 | Optimization of the switching cycles t1 and t2 for the DED conversion can be disabled here. In order to fine-tune the positioning action, the switching periods are changed by the self-tuning function, if automatic tuning is configured. |
| | | 1dP | 13253 | | | | |
| | | 2dP | 21445 | | | | |
| | | 3dP | 29637 | | | | |
| | | | | | | 0 | The cycle duration is determined by auto-tuning. Thereby the best controlling results are obtained. |
| | | | | | | 1 | The cycle duration is not determined by auto-tuning. An oversized cycle duration causes bad control behavior. An undersized cycle duration causes a more frequent switching, which can raise the wearout of mechanical actuators (relay, contactor). |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|------------|--|
| Pb1 | r/w | base | 5000 | 42768 | Float | 1...9999 | <input type="checkbox"/> Proportional band 1 (heating) in engineering unit, e.g. °C. Pb defines the relationship between controller output and control deviation. The smaller Pb is, the stronger is the control action for a given control deviation. If Pb is too large or too small, the control loop will oscillate (hunting). |
| | | 1dP | 13192 | | | | |
| | | 2dP | 21384 | | | | |
| | | 3dP | 29576 | | | | |
| Pb2 | r/w | base | 5001 | 42770 | Float | 1...9999 | <input type="checkbox"/> Proportional band 2 (cooling) in engineering units, e.g. °C. Pb defines the relationship between controller output and control deviation. The smaller Pb is, the stronger is the control action for a given control deviation. If Pb is too large or too small, the control loop will oscillate (hunting). |
| | | 1dP | 13193 | | | | |
| | | 2dP | 21385 | | | | |
| | | 3dP | 29577 | | | | |
| ti1 | r/w | base | 5002 | 42772 | Float | 1...9999 | <input checked="" type="checkbox"/> Integral action time 1 (heating) [s]. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13194 | | | | |
| | | 2dP | 21386 | | | | |
| | | 3dP | 29578 | | | | |
| ti2 | r/w | base | 5003 | 42774 | Float | 1...9999 | <input checked="" type="checkbox"/> Integral action time 2 (cooling) [s]. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13195 | | | | |
| | | 2dP | 21387 | | | | |
| | | 3dP | 29579 | | | | |
| td1 | r/w | base | 5004 | 42776 | Float | 1...9999 | <input checked="" type="checkbox"/> Derivative action time 1 (heating) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| | | 1dP | 13196 | | | | |
| | | 2dP | 21388 | | | | |
| | | 3dP | 29580 | | | | |
| td2 | r/w | base | 5005 | 42778 | Float | 1...9999 | <input checked="" type="checkbox"/> Derivative action time 2 (cooling) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| | | 1dP | 13197 | | | | |
| | | 2dP | 21389 | | | | |
| | | 3dP | 29581 | | | | |
| t1 | r/w | base | 5006 | 42780 | Float | 0,4...9999 | <input type="checkbox"/> Minimum duty cycle 1 (heating) [s]. With the standard duty cycle converter, the shortest pulse duration is 1/4 x t1. If the duty cycle is not to be optimized, this must be entered in the configuration. (Default: Optimization of the duty cycle during self-tuning, but also if the output value is less than 5%). |
| | | 1dP | 13198 | | | | |
| | | 2dP | 21390 | | | | |
| | | 3dP | 29582 | | | | |

1 Cntr

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|------|-----|---------------------------|---------------------------------|-------|-------|--------------|-------------------------------------|--|
| t2 | r/w | base 1dP 2dP 3dP | 5007 13199 21391 29583 | 42782 | Float | 0,4...9999 | <input type="checkbox"/> | Minimum duty cycle 2 (cooling) [s]. With the standard duty cycle converter, the shortest pulse duration is 1/4 x t1. If the duty cycle is not to be optimized, this must be entered in the configuration. (Default: Optimization of the duty cycle during self-tuning, but also if the output value is less than 5%). |
| SH | r/w | base 1dP 2dP 3dP | 5014 13206 21398 29590 | 42796 | Float | 0...9999 | <input type="checkbox"/> | Neutral zone, or switching difference of the signaller [engineering unit]. Too small: unnecessarily high switching frequency. Too large: reduced controller sensitivity. With 3-point controllers this slows down the direct transition from heating to cooling. With 3-point stepping controllers, it reduces the switching operations of the actuator around setpoint. |
| d.SP | r/w | base 1dP 2dP 3dP | 5016 13208 21400 29592 | 42800 | Float | -1999...9999 | <input type="checkbox"/> | Separation of the D / Y switch-over point from the setpoint [engineering unit]. With a significant control deviation heating start is in delta connection. When the control deviation increases, the instrument switches over to reduced power (Y connection) for line-out to the set-point. |
| tp | r/w | base 1dP 2dP 3dP | 5009 13201 21393 29585 | 42786 | Float | 0,1...9999 | <input checked="" type="checkbox"/> | Minimum pulse duration [s]. Used for switching with constant periods. For positioning values that require a shorter pulse than adjusted for 'tp', the output is suppressed, but 'remembered'. The controller continues adding the internal short pulses until a value equal to 'tp' can be output. |
| tt | r/w | base 1dP 2dP 3dP | 5015 13207 21399 29591 | 42798 | Float | 3...9999 | <input type="checkbox"/> | Travel time of the actuator motor [s]. If no feedback signal is available, the controller calculates the actuator position by means of an integrator and the adjusted motor travel time. For this reason, a precise definition of the motor travel time between min and max (0% and 100%) is important. |
| Y.Lo | r/w | base 1dP 2dP 3dP | 5018 13210 21402 29594 | 42804 | Float | -105...105 | <input type="checkbox"/> | Lower output limit [%] The range is dependant of the type of controller: 2 point controller: 0...ymax+1 3 point controller: -105 ymax-1 |
| Y.Hi | r/w | base 1dP 2dP 3dP | 5019 13211 21403 29595 | 42806 | Float | -105...105 | <input type="checkbox"/> | Upper output limit [%] The range is ymin+1105 |
| Y2 | r/w | base 1dP 2dP 3dP | 5017 13209 21401 29593 | 42802 | Float | -100...100 | <input type="checkbox"/> | Second positioning value [%]. Activated Y2 = positioner control. Caution: The parameter 'positioning output Y2' must not be confused with the controller output Y2! |
| Y.0 | r/w | base 1dP 2dP 3dP | 5020 13212 21404 29596 | 42808 | Float | -105...105 | <input type="checkbox"/> | Offset for die positioning value [%]. This is added to the controller output, and has the most effect with P and PD controllers. (With PID controllers, the effect is compensated by the integral action.) With a control deviation = 0, the P controller generates a control output Y0. |
| Ym.H | r/w | base 1dP 2dP 3dP | 5021 13213 21405 29597 | 42810 | Float | -105...105 | <input type="checkbox"/> | Limit for the mean control output value Ym in case of sensor break [%]. The mean control output value is configurable as the response to sensor break. The maximum mean output value = YmH. |

1 Cntr

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| L.Ym | r/w | base 1dP 2dP 3dP | 5022 13214 21406 29598 | 42812 | Float | 1...9999 <input type="checkbox"/> | Max. control deviation (xw), at the start of mean value calculation [engineering unit]. When calculating the mean value, data are only taken into account if the control deviation is small enough. 'Lym' is a preset value that determines how precisely the calculated output value is matched to the setpoint. |
| E.H2O | r/w | base 1dP 2dP 3dP | 5013 13205 21397 29589 | 42794 | Float | -1999...9999 <input type="checkbox"/> | Min. temperature for water cooling. Below the set temperature no water cooling happens |
| t.on | r/w | base 1dP 2dP 3dP | 5010 13202 21394 29586 | 42788 | Float | 0,1...9999 <input type="checkbox"/> | Impulse length for water cooling. Fixed for all values of controller output. The pause time is varied. |
| t.oFF | r/w | base 1dP 2dP 3dP | 5011 13203 21395 29587 | 42790 | Float | 1...9999 <input type="checkbox"/> | Min. pause time for water cooling. The max. effective controller output results from t.on/(t.on+t.off)·100% |
| F.H2O | r/w | base 1dP 2dP 3dP | 5012 13204 21396 29588 | 42792 | Float | 0,1...9999 <input type="checkbox"/> | Adaptation of the (non-linear) water-cooling characteristic. If the cooling action is very strong, and causes an unfavourable transition between heating and cooling, a non-linear characteristic can reduce the cooling action considerably. Adjust FH20 = 1 for output values up to -70%; FH20 = 2 for values up to approx. -80%, and FH20 = 0.5 for up to approx. -60%. |
| oFFS | r/w | base 1dP 2dP 3dP | 5024 13216 21408 29600 | 42816 | Float | -120...120 <input type="checkbox"/> | Zero point for ratio control. For a given value of X2 (e.g. airflow quantity) the ratio controller changes the corresponding value of X1 (e.g. gas flow quantity), until the required ratio is reached. |
| HYS.L | r/w | base 1dP 2dP 3dP | 5028 13220 21412 29604 | 42824 | Float | 0...9999 <input type="checkbox"/> | Switching hysteresis below the setpoint of the signaller [engineering unit]. |
| HYS.H | r/w | base 1dP 2dP 3dP | 5029 13221 21413 29605 | 42826 | Float | 0...9999 <input type="checkbox"/> | Switching hysteresis above the setpoint of the signaller [engineering unit]. |
| tEmP | r/w | base 1dP 2dP 3dP | 5036 13228 21420 29612 | 42840 | Float | 0...9999 <input type="checkbox"/> | Constant sensor temperature. With O2 measurement, the actual oxygen content is derived from the constant sensor temperature and the EMF (electromotive force in volts) generated by the sensor. Note: A constant sensor temperature is only ensured with heated lambda sensors. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|--------------|--------------------------|--|
| C.InP | r | base 1dP 2dP 3dP | 5102 13294 21486 29678 | 42972 | Float | -1999...9999 | <input type="checkbox"/> | process value |
| Tu2 | r | base 1dP 2dP 3dP | 5145 13337 21529 29721 | 43058 | Float | 0...9999 | <input type="checkbox"/> | 'Cooling' delay time of the loop. Tu is calculated by the self-tuning function: It is the time delay before the process reacts significantly. In effect, Tu is a dead time that is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| Vmax2 | r | base 1dP 2dP 3dP | 5146 13338 21530 29722 | 43060 | Float | 0...9999 | <input type="checkbox"/> | Max. rate of change for 'cooling', i.e. the fastest process value increase during self-tuning. Vmax is calculated by the self-tuning function, and is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| Kp2 | r | base 1dP 2dP 3dP | 5147 13339 21531 29723 | 43062 | Float | 0...9999 | <input type="checkbox"/> | Process gain for 'cooling'. For control loops with self-regulation, process gain is the ratio determined by the change of the control output and the resulting permanent change of the process value. Kp is calculated by the self-tuning function, and is used for defining controller action. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---------|-----|------|---------|-------|-----|-----------|---|
| St.Cntr | r | base | 5100 | 42968 | Int | 0...65535 | <input type="checkbox"/> Status informations of the controller.f.e. switching signals, controller off or informations about selftuning. The controller status shows the actual adjustments of the controller. |
| | | 1dP | 13292 | | | | |
| | | 2dP | 21484 | | | | |
| | | 3dP | 29676 | | | | |

Bit 0: Switching signal heating: 0: off 1: on
 Bit 1: Switching signal cooling: 0: off 1: on
 Bit 2: Sensor error 0: ok 1: error
 Bit 3: Controlsignal: Manual/automatic
 0: automatic 1: manual
 Bit 4: Controlsignal: Y2
 0: Y2 not activ 1: Y2 activ
 Bit 5: Controlsignal: Ext. setting of outputsignal
 0: not activ 1: activ
 Bit 6: Controlsignal: Controller off
 0: contr. on 1: contr. off
 Bit 7: Controlsignal:The activ parameter set
 0: parameterset 1
 1: parameterset 2
 Bit 8: Loopalarm
 0: no alarm
 1: alarm
 Bit 9: Soft start function
 0: not activ
 1: activ
 Bit 10: Rate to setpoint
 0: not activ
 1: activ
 Bit 11: Not used
 Bit 12-15: Internal functional statuses (operating state)
 0 0 0 0 Automatic
 0 0 0 1 Selftuning is running
 0 0 1 0 Selftuning faulty
 (Waiting for operator signal)
 0 0 1 1 Sensor error
 0 1 0 0 Not used
 0 1 0 1 Manual
 0 1 1 1 Not used
 1 0 0 0 Manual, with external presetting of the outputsignal
 1 0 0 1 Outputs switched off (neutral)
 1 0 1 0 Abortion of the selftuning (by control- or error-signal)

| | | | | | | | |
|------|---|------|-------|-------|-------|--------------|---|
| diFF | r | base | 5104 | 42976 | Float | -1999...9999 | <input type="checkbox"/> Control deviation, is defined as process value minus setpoint. Positive Xw means that the process value is above the setpoint. A small control deviation indicates precise control. |
| | | 1dP | 13296 | | | | |
| | | 2dP | 21488 | | | | |
| | | 3dP | 29680 | | | | |
| POS | r | base | 5105 | 42978 | Float | 0...100 | <input type="checkbox"/> The position feedback Yp shows the actuator position with 3-point stepping controllers. If Yp is outside the limits Ymin and Ymax, the output of positioning pulses is suppressed. |
| | | 1dP | 13297 | | | | |
| | | 2dP | 21489 | | | | |
| | | 3dP | 29681 | | | | |
| Tu1 | r | base | 5141 | 43050 | Float | 0...9999 | <input type="checkbox"/> 'Heating' delay time of the loop. Tu is calculated by the self-tuning function: It is the time delay before the process reacts significantly. In effect, Tu is a dead time that is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| | | 1dP | 13333 | | | | |
| | | 2dP | 21525 | | | | |
| | | 3dP | 29717 | | | | |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| Ypid | r | base 1dP 2dP 3dP | 5103 13295 21487 29679 | 42974 | Float | -120...120 <input type="checkbox"/> | Output value Ypid is the output signal determined by the controller, and from which the switching pulses for the digital and analog control outputs are calculated. Ypid is also available as an analog signal. e.g. for visualization. |
| Ada.St | r/w | base 1dP 2dP 3dP | 5150 13342 21534 29726 | 43068 | Enum | Enum_AdaStart | Starting / stopping the self-tuning function. After the start signal, the controller waits until the process reaches a stable condition (PIR) before it starts the self-tuning process. Self-tuning can be aborted manually at any time. After a successful self-tuning attempt, the controller automatically resumes normal operation. |
| | | | | | | 0 | 'Stop' will abort the self-tuning process, and the controller returns to normal operation with the previous parameter settings. |
| | | | | | | 1 | Start of the self-tuning process is possible during manual or automatic controller operation. |
| Yman | r/w | base 1dP 2dP 3dP | 5151 13343 21535 29727 | 43070 | Float | -110...110 <input type="checkbox"/> | Absolute preset output value, which is used as output value during manual operation. Caution: With 3-point stepping controllers, Yman (evaluated the same as Dyman) is added to the actual output value as a relative shift. |
| dYman | r/w | base 1dP 2dP 3dP | 5152 13344 21536 29728 | 43072 | Float | -220...220 <input type="checkbox"/> | Differential preset output value, which is added to the actual output value during manual operation. Negative values reduce the output. |
| Yinc | r/w | base 1dP 2dP 3dP | 5153 13345 21537 29729 | 43074 | Enum | Enum_YInc | Increasing the output value. There are two speeds: 40 s or 10 s for the change from 0 % to 100 %. Note: The 3-point stepping controller translates the increments as UP. |
| | | | | | | 0 | Not active |
| | | | | | | 1 | increment output |
| Ydec | r/w | base 1dP 2dP 3dP | 5154 13346 21538 29730 | 43076 | Enum | Enum_YDec | Decreasing the output value. There are two speeds: 40 s or 10 s for the change from 0 % to 100 %. Note: The 3-point stepping controller translates the increments as DOWN. |
| | | | | | | 0 | Not active |
| | | | | | | 1 | decrement output |
| SP.EF | r | base 1dP 2dP 3dP | 5101 13293 21485 29677 | 42970 | Float | -1999...9999 <input type="checkbox"/> | Effective setpoint. The value reached at the end of setpoint processing, after taking W2, external setpoint, gradient, boost function, programmer settings, start-up function, and limit functions into account. Comparison with the effective process value leads to the control deviation, from which the necessary controller response is derived. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---|-----|------|---------|-------|-------|-----------|--|
| St.Tune | r | base | 5140 | 43048 | Int | 0...65535 | <input type="checkbox"/> Status information during self-tuning, e.g. the actual condition, and possible results, warnings, and error messages. |
| | | 1dP | 13332 | | | | |
| | | 2dP | 21524 | | | | |
| | | 3dP | 29716 | | | | |
| Bit 0 Process lined out; 0 = No; 1 = Yes Bit 1 Operating mode 'Self-tuning controller; 0 = Off; 1 = On Bit 2 Result of controller self-tuning; 0 = OK; 1 = Fault Bit 3 - 7 Not used Bit 8 - 11 Result of the 'heating' attempt 0 0 0 0 No message / Attempt still running 0 0 0 1 Successful 0 0 1 0 Successful, with risk of exceeded setpoint 0 0 1 1 Error: Wrong operating sense 0 1 0 0 Error: No response from process 0 1 0 1 Error: Turning point too low 0 1 1 0 Error: Risk of exceeded setpoint 0 1 1 1 Error: Step output too small 1 0 0 0 Error: Setpoint reserve too small Bit 12 - 15 Result of 'cooling' attempt (same as heating attempt) | | | | | | | |
| Vmax1 | r | base | 5142 | 43052 | Float | 0...9999 | <input type="checkbox"/> Max. rate of change for 'heating', i.e. the fastest process value increase during self-tuning. Vmax is calculated by the self-tuning function, and is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| | | 1dP | 13334 | | | | |
| | | 2dP | 21526 | | | | |
| | | 3dP | 29718 | | | | |
| Kp1 | r | base | 5143 | 43054 | Float | 0...9999 | <input type="checkbox"/> Process gain for 'heating'. For control loops with self-regulation, process gain is the ratio determined by the change of the control output and the resulting permanent change of the process value. Kp is calculated by the self-tuning function, and is used for defining controller action. |
| | | 1dP | 13335 | | | | |
| | | 2dP | 21527 | | | | |
| | | 3dP | 29719 | | | | |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|------|-----|------|---------|-------|------|-----------|---|--|
| Msg2 | r | base | 5148 | 43064 | Enum | Enum_Msg | The result of self-tuning for 'cooling' indicates whether self-tuning was successful, and with what result. | |
| | | 1dP | 13340 | | | | | |
| | | 2dP | 21532 | | | | | |
| | | 3dP | 29724 | | | | | |
| | | | | | | | 0 | No message / Tuning attempt still running |
| | | | | | | | 1 | Self-tuning has been completed successfully. The new parameters are valid. |
| | | | | | | | 2 | Self-tuning was successful, but with a warning. The new parameters are valid. Note: Self-tuning was aborted due to the risk of an exceeded setpoint, but useful parameters were determined. Possibly repeat the attempt with an increased setpoint reserve. |
| | | | | | | | 3 | The process reacts in the wrong direction. Possible remedy: Reconfigure the controller (inverse <-> direct). Check the controller output sense (inverse <-> direct). |
| | | | | | | | 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| | | | | | | | 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | | 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. No useful parameters were determined. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| | | | | | | | 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | | 8 | The controller is waiting. Setpoint reserve must be given before generating the step output change. Acknowledgment of this error message leads to switch-over to automatic mode. If self-tuning shall be continued, change set-point, change process value, or decrease set-point range. |
| | | | | | | | 9 | Impulse tuning failed. No useful parameters were determined. The control loop is perhaps not closed: check sensor, connections and process. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| Msg1 | r | base | 5144 | 43056 | Enum | Enum_Msg | The result of self-tuning for 'heating' indicates whether self-tuning was successful, and with what result. |
| | | 1dP | 13336 | | | | |
| | | 2dP | 21528 | | | | |
| | | 3dP | 29720 | | | | |

| | |
|---|--|
| 0 | No message / Tuning attempt still running |
| 1 | Self-tuning has been completed successfully. The new parameters are valid. |
| 2 | Self-tuning was successful, but with a warning. The new parameters are valid. Note: Self-tuning was aborted due to the risk of an exceeded setpoint, but useful parameters were determined. Possibly repeat the attempt with an increased setpoint reserve. |
| 3 | The process reacts in the wrong direction. Possible remedy: Reconfigure the controller (inverse <-> direct). Check the controller output sense (inverse <-> direct). |
| 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. No useful parameters were determined. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 8 | The controller is waiting. Setpoint reserve must be given before generating the step output change. Acknowledgment of this error message leads to switch-over to automatic mode. If self-tuning shall be continued, change set-point, change process value, or decrease set-point range. |
| 9 | Impulse tuning failed. No useful parameters were determined. The control loop is perhaps not closed: check sensor, connections and process. |

| YGrw | r/w | base | 5155 | 43078 | Enum | Enum_YGrwLs | Description |
|------|-----|------|-------|-------|------|-------------|--|
| | | 1dP | 13347 | | | | Gradient of Y-variation 'slow' or 'fast'. Changes the positioning output speed. There are two speeds for output variation: from 0% to 100% in 40s or in 10s. |
| | | 2dP | 21539 | | | | |
| | | 3dP | 29731 | | | | |

| | |
|---|--|
| 0 | Slow change of Y, from 0% to 100% in 40 seconds. |
| 1 | Fast change of Y, from 0% to 100% in 10 seconds. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| I.Fnc | r/w | base | 167 | 33102 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP1, e.g. value at INP1 is the external setpoint. |
| | | 1dP | 8359 | | | | |
| | | 2dP | 16551 | | | | |
| | | 3dP | 24743 | | | | |
| | | | | | | 0 | no function (subsequent input data are skipped) |
| | | | | | | 1 | Heating current input. |
| | | | | | | 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| | | | | | | 3 | Position feedback signal Yp. |
| | | | | | | 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| | | | | | | 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| | | | | | | 6 | No controller input (replaced e.g. by limit value signalling). |
| | | | | | | 7 | Process value X1. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| S.tYP | r/w | base | 1150 | 35068 | Enum | Enum_StYP | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted |
| | | 1dP | 9342 | | | | |
| | | 2dP | 17534 | | | | |
| | | 3dP | 25726 | | | | |

| | |
|----|---|
| 0 | thermocouple type L (-100...900°C), Fe-CuNi DIN Fahrenheit: -148...1652°F |
| 1 | thermocouple type J (-100...1200°C), Fe-CuNi Fahrenheit: -148...2192°F |
| 2 | thermocouple type K (-100...1350°C), NiCr-Ni Fahrenheit: -148...2462°F |
| 3 | thermocouple type N (-100...1300°C), Nicrosil-Nisil Fahrenheit: -148...2372°F |
| 4 | thermocouple type S (0...1760°C), PtRh-Pt10% Fahrenheit: 32...3200°F |
| 5 | thermocouple type R (0...1760°C), PtRh-Pt13% Fahrenheit: 32...3200°F |
| 6 | thermocouple type T (-200...400°C), Cu-CuNi Fahrenheit: -328...752°F |
| 7 | thermocouple type C (0...2315°C), W5%Re-W26%Re Fahrenheit: 32...4199°F |
| 8 | thermocouple type D (0...2315°C), W3%Re-W25%Re Fahrenheit: 32...4199°F |
| 9 | thermocouple type E (-100...1000°C), NiCr-CuNi Fahrenheit: -148...1832°F |
| 10 | thermocouple type B (0/400...1820°C), PtRh-Pt6% Fahrenheit: 32/752...3308°F |
| 18 | Special thermocouple with a linearization characteristic selectable by the user. This enables non-linear signals to be simulated or linearized. |
| 20 | Pt100 (-200.0 ... 100.0(150.0)°C) Measuring range up to 150°C at reduced lead resistance. Fahrenheit: -328...212(302) °F |
| 21 | Pt100 (-200.0 ... 850.0 °C) Fahrenheit: -328...1562 °F |
| 22 | Pt 1000 (-200.0...850.0 °C) Fahrenheit: -328...1562 °F |
| 23 | Special : 0...4500 Ohms. For KTY 11-6 with preset special linearization (-50...150 °C or -58...302 °F). |
| 24 | Special 0...450 Ohm |
| 30 | Current : 0...20 mA / 4...20 mA |
| 40 | 0...10V / 2...10V |
| 41 | Special -2.5...115 mV |
| 42 | Special : -25...1150 mV |
| 50 | potentiometer 0...160 Ohm |
| 51 | potentiometer 0...450 Ohm |
| 52 | potentiometer 0...1600 Ohm |
| 53 | potentiometer 0...4500 Ohm |

| Name | r/w | base | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| S.Lin | r/w | base | 1151 | 35070 | Enum | Enum_SLin | Linearization (not adjustable for all sensor types S.tYP). Special linearization. The linearization table can be created with the Engineering Tool. The default characteristic is for KTY 11-6 temperature sensors. |
| | | 1dP | 9343 | | | | |
| | | 2dP | 17535 | | | | |
| | | 3dP | 25727 | | | | |

| | |
|---|---|
| 0 | No special linearization. |
| 1 | Special linearization. Definition of the linearization table is possible with the Engineering Tool. The default setting is the characteristic of the KTY 11-6 temperature sensor. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|------|-----|------|---------|-------|-------|--------------|-------------------------------------|---|
| Corr | r/w | base | 160 | 33088 | Enum | Enum_Corr3 | Measured value correction / scaling | |
| | | 1dP | 8352 | | | | | |
| | | 2dP | 16544 | | | | | |
| | | 3dP | 24736 | | | | | |
| | | | | | | | | |
| | | | | | | 0 | Without scaling | |
| | | | | | | | 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| | | | | | | | 2 | Two-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| | | | | | | | 3 | Scaling (at PArA-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |
| | | | | | | | 4 | Automatic calibration of the position feedback potentiometer. For 3-point stepping controllers with position feedback Yp from a potentiometer, and for continuous controllers operating a positioner with position feedback Yp from a potentiometer. |
| In.F | r/w | base | 1152 | 35072 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). |
| | | 1dP | 9344 | | | | | |
| | | 2dP | 17536 | | | | | |
| | | 3dP | 25728 | | | | | |
| | | | | | | | | |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|--|
| InL.1 | r/w | base | 1100 | 34968 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the lower scaling point (e.g. 4 mA) is done using the corresponding electrical value. |
| | | 1dP | 9292 | | | | | |
| | | 2dP | 17484 | | | | | |
| | | 3dP | 25676 | | | | | |
| | | | | | | | | |
| OuL.1 | r/w | base | 1101 | 34970 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the lower scaling point, e.g. 4 mA is displayed as 2 [pH]. |
| | | 1dP | 9293 | | | | | |
| | | 2dP | 17485 | | | | | |
| | | 3dP | 25677 | | | | | |
| | | | | | | | | |
| InH.1 | r/w | base | 1102 | 34972 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the upper scaling point (e.g. 20 mA) is done using the corresponding electrical value. |
| | | 1dP | 9294 | | | | | |
| | | 2dP | 17486 | | | | | |
| | | 3dP | 25678 | | | | | |
| | | | | | | | | |
| OuH.1 | r/w | base | 1103 | 34974 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the upper scaling point, e.g. 20 mA is displayed as 12 [pH]. |
| | | 1dP | 9295 | | | | | |
| | | 2dP | 17487 | | | | | |
| | | 3dP | 25679 | | | | | |
| | | | | | | | | |
| t.F1 | r/w | base | 1104 | 34976 | Float | 0...100 | <input type="checkbox"/> | Filter time constant [s]. Every input is fitted with a digital (software) low-pass filter for suppressing process-related disturbances on the input leads. Higher filter settings improve the suppression, but increase the delay of the input signals. |
| | | 1dP | 9296 | | | | | |
| | | 2dP | 17488 | | | | | |
| | | 3dP | 25680 | | | | | |
| | | | | | | | | |

2 InP.1

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|-----------|-------------------------------------|---|
| E.tc1 | r/w | base | 1105 | 34978 | Float | 0...100 | <input checked="" type="checkbox"/> | External temperature compensation (temperature at the junction of thermocouple/copper lead with external temperature compensation). |
| | | 1dP | 9297 | | | | | |
| | | 2dP | 17489 | | | | | |
| | | 3dP | 25681 | | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|--|
| In.1r | r | base | 1170 | 35108 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9362 | | | | | |
| | | 2dP | 17554 | | | | | |
| | | 3dP | 25746 | | | | | |
| Fail | r | base | 1171 | 35110 | Enum | Enum_InpFail | | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9363 | | | | | |
| | | 2dP | 17555 | | | | | |
| | | 3dP | 25747 | | | | | |

| | |
|---|------------------------------|
| 0 | no error |
| 1 | sensor break |
| 2 | Incorrect polarity at input. |
| 4 | Short circuit at input. |

| | | | | | | | | |
|-------|-----|------|-------|-------|-------|--------------|--------------------------|---|
| In.1 | r | base | 1172 | 35112 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9364 | | | | | |
| | | 2dP | 17556 | | | | | |
| | | 3dP | 25748 | | | | | |
| F.Inp | r/w | base | 1180 | 35128 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9372 | | | | | |
| | | 2dP | 17564 | | | | | |
| | | 3dP | 25756 | | | | | |

3 InP.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|---|
| I.Fnc | r/w | base | 161 | 33090 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP2, e.g. value at INP2 is the external setpoint. |
| | | 1dP | 8353 | | | | |
| | | 2dP | 16545 | | | | |
| | | 3dP | 24737 | | | | |
| | | | | | | 0 | no function (subsequent input data are skipped) |
| | | | | | | 1 | Heating current input. |
| | | | | | | 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| | | | | | | 3 | Position feedback signal Yp. |
| | | | | | | 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| | | | | | | 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| | | | | | | 6 | No controller input (replaced e.g. by limit value signalling). |
| | | | | | | 7 | Process value X1. |
| S.tYP | r/w | base | 1250 | 35268 | Enum | Enum_StYP2 | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted. |
| | | 1dP | 9442 | | | | |
| | | 2dP | 17634 | | | | |
| | | 3dP | 25826 | | | | |
| | | | | | | 30 | Current : 0...20 mA / 4...20 mA |
| | | | | | | 31 | 0...50 mA current (AC) |
| | | | | | | 50 | Potentiometer 0...160 Ohm |
| | | | | | | 51 | Potentiometer 0...450 Ohm |
| | | | | | | 52 | Potentiometer 0...1600 Ohm |
| | | | | | | 53 | Potentiometer 0...4500 Ohm |
| Corr | r/w | base | 162 | 33092 | Enum | Enum_Corr | Measured value correction / scaling |
| | | 1dP | 8354 | | | | |
| | | 2dP | 16546 | | | | |
| | | 3dP | 24738 | | | | |
| | | | | | | 0 | Without scaling |
| | | | | | | 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| | | | | | | 2 | 2-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| | | | | | | 3 | Scaling (at PArA-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |
| In.F | r/w | base | 1252 | 35272 | Float | -1999...9999 | <input checked="" type="checkbox"/> Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). |
| | | 1dP | 9444 | | | | |
| | | 2dP | 17636 | | | | |
| | | 3dP | 25828 | | | | |

3 InP.2

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|--|
| InL.2 | r/w | base | 1200 | 35168 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the lower scaling point (e.g. 4 mA) is done using the corresponding electrical value. |
| | | 1dP | 9392 | | | | | |
| | | 2dP | 17584 | | | | | |
| | | 3dP | 25776 | | | | | |
| OuL.2 | r/w | base | 1201 | 35170 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the lower scaling point, e.g. 4 mA is displayed as 2 [pH]. |
| | | 1dP | 9393 | | | | | |
| | | 2dP | 17585 | | | | | |
| | | 3dP | 25777 | | | | | |
| InH.2 | r/w | base | 1202 | 35172 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the upper scaling point (e.g. 20 mA) is done using the corresponding electrical value. |
| | | 1dP | 9394 | | | | | |
| | | 2dP | 17586 | | | | | |
| | | 3dP | 25778 | | | | | |
| OuH.2 | r/w | base | 1203 | 35174 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the upper scaling point, e.g. 20 mA is displayed as 12 [pH]. |
| | | 1dP | 9395 | | | | | |
| | | 2dP | 17587 | | | | | |
| | | 3dP | 25779 | | | | | |
| t.F2 | r/w | base | 1204 | 35176 | Float | 0...100 | <input type="checkbox"/> | Filter time constant [s]. Every input is fitted with a digital (software) low-pass filter for suppressing process-related disturbances on the input leads. Higher filter settings improve the suppression, but increase the delay of the input signals. |
| | | 1dP | 9396 | | | | | |
| | | 2dP | 17588 | | | | | |
| | | 3dP | 25780 | | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| In.2 | r | base | 1270 | 35308 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9462 | | | | | |
| | | 2dP | 17654 | | | | | |
| | | 3dP | 25846 | | | | | |
| Fail | r | base | 1271 | 35310 | Enum | Enum_InpFail | | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9463 | | | | | |
| | | 2dP | 17655 | | | | | |
| | | 3dP | 25847 | | | | | |
| | | | | | | 0 | | no error |
| | | | | | | 1 | | sensor break |
| | | | | | | 2 | | Incorrect polarity at input. |
| | | | | | | 4 | | Short circuit at input. |
| In.2r | r | base | 1272 | 35312 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9464 | | | | | |
| | | 2dP | 17656 | | | | | |
| | | 3dP | 25848 | | | | | |
| F.Inp | r/w | base | 1280 | 35328 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9472 | | | | | |
| | | 2dP | 17664 | | | | | |
| | | 3dP | 25856 | | | | | |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| I.Fnc | r/w | base | 166 | 33100 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP3, e.g. value at INP3 is the external setpoint. |
| | | 1dP | 8358 | | | | |
| | | 2dP | 16550 | | | | |
| | | 3dP | 24742 | | | | |
| | | | | | | 0 | no function (subsequent input data are skipped) |
| | | | | | | 1 | Heating current input. |
| | | | | | | 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| | | | | | | 3 | Position feedback signal Yp. |
| | | | | | | 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| | | | | | | 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| | | | | | | 6 | No controller input (replaced e.g. by limit value signalling). |
| | | | | | | 7 | Process value X1. |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| S.tYP | r/w | base | 1350 | 35468 | Enum | Enum_StYP3 | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted. |
| | | 1dP | 9542 | | | | |
| | | 2dP | 17734 | | | | |
| | | 3dP | 25926 | | | | |

| | |
|----|---|
| 0 | thermocouple type L (-100...900°C), Fe-CuNi DIN Fahrenheit: -148...1652°F |
| 1 | thermocouple type J (-100...1200°C), Fe-CuNi Fahrenheit: -148...2192°F |
| 2 | thermocouple type K (-100...1350°C), NiCr-Ni Fahrenheit: -148...2462°F |
| 3 | thermocouple type N (-100...1300°C), Nicrosil-Nisil Fahrenheit: -148...2372°F |
| 4 | thermocouple type S (0...1760°C), PtRh-Pt10% Fahrenheit: 32...3200°F |
| 5 | thermocouple type R (0...1760°C), PtRh-Pt13% Fahrenheit: 32...3200°F |
| 6 | thermocouple type T (-200...400°C), Cu-CuNi Fahrenheit: -328...752°F |
| 7 | thermocouple type C (0...2315°C), W5%Re-W26%Re Fahrenheit: 32...4199°F |
| 8 | thermocouple type D (0...2315°C), W3%Re-W25%Re Fahrenheit: 32...4199°F |
| 9 | thermocouple type E (-100...1000°C), NiCr-CuNi Fahrenheit: -148...1832°F |
| 10 | thermocouple type B (0/100...1820°C), PtRh-Pt6% Fahrenheit: 32(212)...3308°F |
| 18 | Special thermocouple with a linearization characteristic selectable by the user. This enables non-linear signals to be simulated or linearized. |
| 20 | Pt100 (-200.0 ... 100.0(150.0)°C) Measuring range at reduced lead resistance up to 150°C. Fahrenheit: -328...212(302)°F |
| 21 | Pt100 (-200.0 ... 850.0 °C) Fahrenheit: -328...1562 °F |
| 22 | Pt 1000 (-200.0...850.0 °C) Fahrenheit: -328...1562 °F |
| 23 | Special : 0...4500 Ohms. For KTY 11-6 with preset special linearization (-50...150 °C or -58...302 °F). |
| 24 | Special : 0...450 Ohms |
| 30 | Current : 0...20 mA / 4...20 mA |
| 41 | Special : -2,5...115 mV |
| 42 | Special : -25...1150 mV |
| 50 | Potentiometer :0...160 Ohms |
| 51 | Potentiometer :0...450 Ohms |
| 52 | Potentiometer :0...1600 Ohms |
| 53 | Potentiometer :0...4500 Ohms |

| S.Lin | r/w | base | 1351 | 35470 | Enum | Enum_SLin | Description |
|-------|-----|------|-------|-------|------|-----------|---|
| | | 1dP | 9543 | | | | Linearization (not adjustable for all sensor types S.tYP). Special linearization. The linearization table can be created with the Engineering Tool. The default characteristic is for KTY 11-6 temperature sensors. |
| | | 2dP | 17735 | | | | |
| | | 3dP | 25927 | | | | |

| | |
|---|---|
| 0 | No special linearization. |
| 1 | Special linearization. Definition of the linearization table is possible with the Engineering Tool. The default setting is the characteristic of the KTY 11-6 temperature sensor. |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|------|-----|------|---------|-------|-------|-------------------------------------|---|---|
| Corr | r/w | base | 165 | 33098 | Enum | Enum_Corr3 | Measured value correction / scaling | |
| | | 1dP | 8357 | | | | | |
| | | 2dP | 16549 | | | | | |
| | | 3dP | 24741 | | | | | |
| | | | | | | | | |
| | | | | | | 0 | Without scaling | |
| | | | | | | | 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| | | | | | | | 2 | Two-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| | | | | | | | 3 | Scaling (at PArA-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |
| | | | | | | | 4 | Automatic calibration of the position feedback potentiometer. For 3-point stepping controllers with position feedback Yp from a potentiometer, and for continuous controllers operating a positioner with position feedback Yp from a potentiometer. |
| In.F | r/w | base | 1352 | 35472 | Float | -1999...9999 | Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). | |
| | | 1dP | 9544 | | | <input checked="" type="checkbox"/> | | |
| | | 2dP | 17736 | | | | | |
| | | 3dP | 25928 | | | | | |
| | | | | | | | | |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|
| InL.3 | r/w | base | 1300 | 35368 | Float | -1999...9999 | <input type="checkbox"/> |
| | | 1dP | 9492 | | | | |
| | | 2dP | 17684 | | | | |
| | | 3dP | 25876 | | | | |
| | | | | | | | |
| OuL.3 | r/w | base | 1301 | 35370 | Float | -1999...9999 | <input type="checkbox"/> |
| | | 1dP | 9493 | | | | |
| | | 2dP | 17685 | | | | |
| | | 3dP | 25877 | | | | |
| | | | | | | | |
| InH.3 | r/w | base | 1302 | 35372 | Float | -1999...9999 | <input type="checkbox"/> |
| | | 1dP | 9494 | | | | |
| | | 2dP | 17686 | | | | |
| | | 3dP | 25878 | | | | |
| | | | | | | | |
| OuH.3 | r/w | base | 1303 | 35374 | Float | -1999...9999 | <input type="checkbox"/> |
| | | 1dP | 9495 | | | | |
| | | 2dP | 17687 | | | | |
| | | 3dP | 25879 | | | | |
| | | | | | | | |
| t.F3 | r/w | base | 1304 | 35376 | Float | 0...999,9 | <input type="checkbox"/> |
| | | 1dP | 9496 | | | | |
| | | 2dP | 17688 | | | | |
| | | 3dP | 25880 | | | | |
| | | | | | | | |

4 InP.3

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|---|---|
| E.tc3 | r/w | base | 1305 | 35378 | Float | 0...100 <input checked="" type="checkbox"/> | External temperature compensation (temperature at the junction of thermocouple/copper lead with external temperature compensation). |
| | | 1dP | 9497 | | | | |
| | | 2dP | 17689 | | | | |
| | | 3dP | 25881 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|---------------------------------------|---|
| In.3 | r | base | 1370 | 35508 | Float | -1999...9999 <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9562 | | | | |
| | | 2dP | 17754 | | | | |
| | | 3dP | 25946 | | | | |
| Fail | r | base | 1371 | 35510 | Enum | Enum_InpFail | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9563 | | | | |
| | | 2dP | 17755 | | | | |
| | | 3dP | 25947 | | | | |

| | |
|---|------------------------------|
| 0 | no error |
| 1 | sensor break |
| 2 | Incorrect polarity at input. |
| 4 | Short circuit at input. |

| | | | | | | | |
|-------|-----|------|-------|-------|-------|---------------------------------------|---|
| In.3r | r | base | 1372 | 35512 | Float | -1999...9999 <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9564 | | | | |
| | | 2dP | 17756 | | | | |
| | | 3dP | 25948 | | | | |
| F.Inp | r/w | base | 1380 | 35528 | Float | -1999...9999 <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9572 | | | | |
| | | 2dP | 17764 | | | | |
| | | 3dP | 25956 | | | | |

5 Lim

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Fnc.1 | r/w | base | 2150 | 37068 | Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | 1dP | 10342 | | | | |
| | | 2dP | 18534 | | | | |
| | | 3dP | 26726 | | | | |

| | |
|---|---|
| 0 | No limit value monitoring. |
| 1 | measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is resetted. |
| 2 | Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually resetted. |
| 3 | Signal monitoring for rate of change (per minute). |
| 4 | Signal monitoring for rate of change (per minute) + storage of the alarm status. |

5 Lim

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| Src.1 | r/w | base | 2151 | 37070 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10343 | | | | |
| | | 2dP | 18535 | | | | |
| | | 3dP | 26727 | | | | |
| | | | | | | | |
| | | | | | | 0 | Process value = absolute alarm |
| | | | | | | 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point W_{eff} . For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| | | | | | | 3 | Measured value of the analog input INP1. |
| | | | | | | 4 | Measured value of the analog input INP2. |
| | | | | | | 5 | Measured value of the analog input INP3. |
| | | | | | | 6 | effective set-point W_{eff} . For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| | | | | | | 7 | correcting variable y (controller output) |
| | | | | | | 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point W_{int} . For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| | | | | | | 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| | | | | | | 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |
| HC.AL | r/w | base | 2050 | 36868 | Enum | Enum_HCAL | Activation of alarm heat current function. Either overload or break can be monitored, overload = current $I >$ heat current limit, or break = current $I <$ heat current limit. Short circuit is monitored in both cases. |
| | | 1dP | 10242 | | | | |
| | | 2dP | 18434 | | | | |
| | | 3dP | 26626 | | | | |
| | | | | | | | |
| | | | | | | 0 | No heating current alarm. |
| | | | | | | 1 | Overload and short circuit monitoring. Overload = current $I >$ heat current limit. |
| | | | | | | 2 | Break and short circuit monitoring. Break = current $I <$ heat current limit. |
| LP.AL | r/w | base | 5058 | 42884 | Enum | Enum_LPAL | Monitoring of control loop interruption (not possible with 3-point stepping controller, not possible with signaller) |
| | | 1dP | 13250 | | | | |
| | | 2dP | 21442 | | | | |
| | | 3dP | 29634 | | | | |
| | | | | | | | |
| | | | | | | 0 | switched off / inactive |
| | | | | | | 1 | LOOP alarm is generated, if with $Y=100\%$ there is no corresponding reaction of the process variable within the time of $2 \cdot t_i$. Possible remedial action: Check heating or cooling circuit, check sensor and replace it, if necessary, check controller and switching device. |

5 Lim

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|--|
| dAc.A | r/w | base | 3550 | 39868 | Enum | Enum_DacAktiv | Activates the monitor for the 3-point stepping output. On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. In case of a disturbance, the controller switches into manual operation and switches the outputs off. |
| | | 1dP | 11742 | | | | |
| | | 2dP | 19934 | | | | |
| | | 3dP | 28126 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | Active DAC (monitoring). Digital Actuator Control DAC is the actuator monitoring function. |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--|---|
| L.1 | r/w | base | 2100 | 36968 | Float | -1999...9999 <input checked="" type="checkbox"/> | Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10292 | | | | |
| | | 2dP | 18484 | | | | |
| | | 3dP | 26676 | | | | |
| H.1 | r/w | base | 2101 | 36970 | Float | -1999...9999 <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10293 | | | | |
| | | 2dP | 18485 | | | | |
| | | 3dP | 26677 | | | | |
| HYS.1 | r/w | base | 2102 | 36972 | Float | 0...9999 <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10294 | | | | |
| | | 2dP | 18486 | | | | |
| | | 3dP | 26678 | | | | |
| dEL.1 | r/w | base | 2103 | 36974 | Float | 0...9999 <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10295 | | | | |
| | | 2dP | 18487 | | | | |
| | | 3dP | 26679 | | | | |
| HC.A | r/w | base | 2000 | 36768 | Float | -1999...9999 <input type="checkbox"/> | Heating current monitoring limit [A]. Depending on configuration, and apart from short-circuit monitoring, an overload test checks whether the heating current is above the adjusted current limit, or below the limit when the heating is switched off. The heating current is measured by means of a current transformer (accessory), and the current range can be adapted. |
| | | 1dP | 10192 | | | | |
| | | 2dP | 18384 | | | | |
| | | 3dP | 26576 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-----|--------------------------------|--|
| St.HC | r | base | 2070 | 36908 | Int | 0...3 <input type="checkbox"/> | Status of the heating current alarm. Displayable are heating current short-circuit and/or heating current alarm. Depending on configuration, the heating current alarm is either an interruption of heating current ($I < \text{limit value}$) or heating current overload ($I > \text{limit value}$). |
| | | 1dP | 10262 | | | | |
| | | 2dP | 18454 | | | | |
| | | 3dP | 26646 | | | | |

5 Lim

• Signal

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description |
|--------|-----|---------------------------|---------------------------------|----------------|---------------------------------------|---|
| HC | r | base 1dP 2dP 3dP | 2071 10263 18455 26647 | 36910 Float | -1999...9999 <input type="checkbox"/> | Measured heating current [A]. Apart from the short circuit test, and depending on configuration, an overcurrent test (current I > heating current limit) and an open circuit test (current I < heating current limit) is executed. The heating current is measured by means of a (separate) current transformer, whereby the input range can be scaled. |
| SSr | r | base 1dP 2dP 3dP | 2072 10264 18456 26648 | 36912 Float | -1999...9999 <input type="checkbox"/> | Measured current with SSr [A]. The heating current (SSR) is short circuited, if there is a current flow even though the controller output is switched off. Suggested remedy: check heating current circuit, replace solid-state relay if necessary. |
| St.Lim | r | base 1dP 2dP 3dP | 2170 10362 18554 26746 | 37108 Enum | Enum_LimStatus | Limit value status: No alarm present or stored. |
| | | | | | 0 | no alarm |
| | | | | | 1 | latched alarm |
| | | | | | 2 | A limit value has been exceeded. |

6 Lim2

• ConF

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|---------------|-----------|---|
| Fnc.2 | r/w | base 1dP 2dP 3dP | 2250 10442 18634 26826 | 37268 Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | | | | 0 | No limit value monitoring. |
| | | | | | 1 | measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is resetted. |
| | | | | | 2 | Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually resetted. |
| | | | | | 3 | Signal monitoring for rate of change (per minute). |
| | | | | | 4 | Signal monitoring for rate of change (per minute) + storage of the alarm status. |

6 Lim2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Src.2 | r/w | base | 2251 | 37270 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10443 | | | | |
| | | 2dP | 18635 | | | | |
| | | 3dP | 26827 | | | | |
| | | | | | | 0 | Process value = absolute alarm |
| | | | | | | 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point W_{eff} . For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| | | | | | | 3 | Measured value of the analog input INP1. |
| | | | | | | 4 | Measured value of the analog input INP2. |
| | | | | | | 5 | Measured value of the analog input INP3. |
| | | | | | | 6 | effective set-point W_{eff} . For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| | | | | | | 7 | correcting variable y (controller output) |
| | | | | | | 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point W_{int} . For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| | | | | | | 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| | | | | | | 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--|---|
| L.2 | r/w | base | 2200 | 37168 | Float | -1999...9999 <input checked="" type="checkbox"/> | Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10392 | | | | |
| | | 2dP | 18584 | | | | |
| | | 3dP | 26776 | | | | |
| H.2 | r/w | base | 2201 | 37170 | Float | -1999...9999 <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10393 | | | | |
| | | 2dP | 18585 | | | | |
| | | 3dP | 26777 | | | | |
| HYS.2 | r/w | base | 2202 | 37172 | Float | 0...9999 <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10394 | | | | |
| | | 2dP | 18586 | | | | |
| | | 3dP | 26778 | | | | |
| dEL.2 | r/w | base | 2203 | 37174 | Float | 0...9999 <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10395 | | | | |
| | | 2dP | 18587 | | | | |
| | | 3dP | 26779 | | | | |

6 Lim2

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|------|----------------|---|
| St.Lim | r | base | 2270 | 37308 | Enum | Enum_LimStatus | Limit value status: No alarm present or stored. |
| | | 1dP | 10462 | | | | |
| | | 2dP | 18654 | | | | |
| | | 3dP | 26846 | | | | |
| | | | | | | | 0 no alarm |
| | | | | | | | 1 latched alarm |
| | | | | | | | 2 A limit value has been exceeded. |

7 Lim3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| Fnc.3 | r/w | base | 2350 | 37468 | Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | 1dP | 10542 | | | | |
| | | 2dP | 18734 | | | | |
| | | 3dP | 26926 | | | | |
| | | | | | | | 0 No limit value monitoring. |
| | | | | | | | 1 measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is resetted. |
| | | | | | | | 2 Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually resetted. |
| | | | | | | | 3 Signal monitoring for rate of change (per minute). |
| | | | | | | | 4 Signal monitoring for rate of change (per minute) + storage of the alarm status. |

7 Lim3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Src.3 | r/w | base | 2351 | 37470 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10543 | | | | |
| | | 2dP | 18735 | | | | |
| | | 3dP | 26927 | | | | |
| | | | | | | 0 | Process value = absolute alarm |
| | | | | | | 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point W_{eff} . For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| | | | | | | 3 | Measured value of the analog input INP1. |
| | | | | | | 4 | Measured value of the analog input INP2. |
| | | | | | | 5 | Measured value of the analog input INP3. |
| | | | | | | 6 | effective set-point W_{eff} . For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| | | | | | | 7 | correcting variable y (controller output) |
| | | | | | | 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point W_{int} . For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| | | | | | | 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| | | | | | | 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--|---|
| L.3 | r/w | base | 2300 | 37368 | Float | -1999...9999 <input checked="" type="checkbox"/> | Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10492 | | | | |
| | | 2dP | 18684 | | | | |
| | | 3dP | 26876 | | | | |
| H.3 | r/w | base | 2301 | 37370 | Float | -1999...9999 <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10493 | | | | |
| | | 2dP | 18685 | | | | |
| | | 3dP | 26877 | | | | |
| HYS.3 | r/w | base | 2302 | 37372 | Float | 0...9999 <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10494 | | | | |
| | | 2dP | 18686 | | | | |
| | | 3dP | 26878 | | | | |
| dEL.3 | r/w | base | 2303 | 37374 | Float | 0...9999 <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10495 | | | | |
| | | 2dP | 18687 | | | | |
| | | 3dP | 26879 | | | | |

7 Lim3

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|------|----------------|---|
| St.Lim | r | base | 2370 | 37508 | Enum | Enum_LimStatus | Limit value status: No alarm present or stored. |
| | | 1dP | 10562 | | | | |
| | | 2dP | 18754 | | | | |
| | | 3dP | 26946 | | | | |
| | | | | | | 0 | no alarm |
| | | | | | | 1 | latched alarm |
| | | | | | | 2 | A limit value has been exceeded. |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|---|
| L_r | r/w | base | 1051 | 34870 | Enum | Enum_dInP1 | Local / remote switchover (Remote: Adjustment of all values via the front panel is blocked). |
| | | 1dP | 9243 | | | | |
| | | 2dP | 17435 | | | | |
| | | 3dP | 25627 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always active |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| SP.2 | r/w | base | 1052 | 34872 | Enum | Enum_dInP4 | Source of the control signal for activating the second (safety) setpoint (SP.2=) W2. Note: W2 is not restricted by the setpoint limits. |
| | | 1dP | 9244 | | | | |
| | | 2dP | 17436 | | | | |
| | | 3dP | 25628 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| SP.E | r/w | base | 1053 | 34874 | Enum | Enum_dInP1 | Switching between internal set-point an external setpoint SP.E. The external SP.E is either the absolute set-point Wext or the offset to the set-point (dependent on instrument and configuration). |
| | | 1dP | 9245 | | | | |
| | | 2dP | 17437 | | | | |
| | | 3dP | 25629 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always active |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|--|
| Y2 | r/w | base | 1054 | 34876 | Enum | Enum_dInP3 | Source of the control signal for activating the second positioning output Y2. Activated Y2 = positioner control. Caution: The parameter 'positioning output Y2' must not be confused with the controller output Y2! |
| | | 1dP | 9246 | | | | |
| | | 2dP | 17438 | | | | |
| | | 3dP | 25630 | | | | |

| | |
|---|---|
| 0 | no function (switch-over via interface is possible) |
| 2 | Digital Input DI1 switches |
| 3 | DI2 switches (only visible with OPTION) |
| 4 | DI3 switches (only visible with OPTION) |
| 5 | F-key switches. |
| 6 | Auto/manual key switches (A/M key) |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|---|
| Y.E | r/w | base | 1055 | 34878 | Enum | Enum_dInP2 | Signal for activating the external output value. The internal output value Ypid is the controllers reaction on the process, with external output value Y.E the controller output is controlled. |
| | | 1dP | 9247 | | | | |
| | | 2dP | 17439 | | | | |
| | | 3dP | 25631 | | | | |

| | |
|---|---|
| 0 | no function (switch-over via interface is possible) |
| 1 | always activated (manual station) |
| 2 | Digital Input DI1 switches |
| 3 | DI2 switches (only visible with OPTION) |
| 4 | DI3 switches (only visible with OPTION) |
| 5 | F-key switches. |
| 6 | Auto/manual key switches (A/M key) |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|--|
| mAn | r/w | base | 1056 | 34880 | Enum | Enum_dInP2 | Source of the control signal for auto/manual switchover. In the automatic mode, the controller is in charge. In the manual mode, the outputs can be varied independently of the process. |
| | | 1dP | 9248 | | | | |
| | | 2dP | 17440 | | | | |
| | | 3dP | 25632 | | | | |

| | |
|---|---|
| 0 | no function (switch-over via interface is possible) |
| 1 | always activated (manual station) |
| 2 | Digital Input DI1 switches |
| 3 | DI2 switches (only visible with OPTION) |
| 4 | DI3 switches (only visible with OPTION) |
| 5 | F-key switches. |
| 6 | Auto/manual key switches (A/M key) |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| C.off | r/w | base | 1057 | 34882 | Enum | Enum_dInP3 | Source of the control signal for disabling all the controller outputs. Note: Forcing has priority, and remains active; alarm processing also remains active. |
| | | 1dP | 9249 | | | | |
| | | 2dP | 17441 | | | | |
| | | 3dP | 25633 | | | | |

| | |
|---|---|
| 0 | no function (switch-over via interface is possible) |
| 2 | Digital Input DI1 switches |
| 3 | DI2 switches (only visible with OPTION) |
| 4 | DI3 switches (only visible with OPTION) |
| 5 | F-key switches. |
| 6 | Auto/manual key switches (A/M key) |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| m.Loc | r/w | base | 1058 | 34884 | Enum | Enum_dlnP4 | Source of the control signal to disable the auto/manual key. If the A/M key is disabled, switchover to manual operation is not possible. |
| | | 1dP | 9250 | | | | |
| | | 2dP | 17442 | | | | |
| | | 3dP | 25634 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| Err.r | r/w | base | 1059 | 34886 | Enum | Enum_dlnP3 | Source of the control signal for resetting all stored entries in the error list (the list contains all error messages and alarms). If an alarm is still present, i.e. the source of trouble has not been remedied, stored alarms cannot be acknowledged (reset). |
| | | 1dP | 9251 | | | | |
| | | 2dP | 17443 | | | | |
| | | 3dP | 25635 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |
| Pid.2 | r/w | base | 1061 | 34890 | Enum | Enum_dlnP4 | Source of the control signal for switchover between the two parameter sets. The second parameter set is complete, and comprises Pb (= proportional band), ti (= integral action time), and td (= derivative action time) for heating and for cooling. All other control parameters, e.g. the switching duty cycles, are valid for both parameter sets. |
| | | 1dP | 9253 | | | | |
| | | 2dP | 17445 | | | | |
| | | 3dP | 25637 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| I.Chg | r/w | base | 1064 | 34896 | Enum | Enum_dlnP4 | Signal source for switching the effective process value between the first process value X1 and second process value X2. |
| | | 1dP | 9256 | | | | |
| | | 2dP | 17448 | | | | |
| | | 3dP | 25640 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| di.Fn | r/w | base | 1050 | 34868 | Enum | Enum_diFn | Function of digital inputs (valid for all inputs) |
| | | 1dP | 9242 | | | | |
| | | 2dP | 17434 | | | | |
| | | 3dP | 25626 | | | | |
| | | | | | | 0 | Basic setting 'Off': A permanent positive signal switches this function 'On', which is connected to the digital input. Removal of the signal switches the function 'Off' again. |
| | | | | | | 1 | Basic setting 'On': A permanent positive signal switches this function 'Off', which is connected to the digital input. Removal of the signal switches the function 'On' again. |
| | | | | | | 2 | Push-button function. Basic setting 'Off'. Only positive signals are effective. The first positive signal switches 'On'. Removal of the signal is necessary before the next positive signal can switch 'Off'. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-----|---|---|
| St.Di | r | base | 1070 | 34908 | Int | 0...7 <input checked="" type="checkbox"/> | Status of the digital inputs or of push-buttons (binary coded). |
| | | 1dP | 9262 | | | | |
| | | 2dP | 17454 | | | | |
| | | 3dP | 25646 | | | | |
| | | | | | | | Bit 0 Input 1 Bit 1 Input 2 Bit 2 Input 3 Bit 8 Status of 'F' key Bit 9 Status of 'A/M' key Bit 10 Status of 'Sel' key Bit 11 Status of 'Down' key Bit 12 Status of 'Up' key Bit 13 Status of 'Loc' key |
| L-R | r/w | base | 1080 | 34928 | Int | 0...1 <input type="checkbox"/> | Remote operation. Remote means that all values can only be adjusted via the interface. Adjustments via the front panel are blocked. |
| | | 1dP | 9272 | | | | |
| | | 2dP | 17464 | | | | |
| | | 3dP | 25656 | | | | |
| W_W2 | r/w | base | 1081 | 34930 | Int | 0...1 <input type="checkbox"/> | Signal for activating the second (safety) setpoint (SP.2=) W2. Note: Setpoint W2 is not restricted by the setpoint limits! |
| | | 1dP | 9273 | | | | |
| | | 2dP | 17465 | | | | |
| | | 3dP | 25657 | | | | |
| Wi_We | r/w | base | 1082 | 34932 | Int | 0...1 <input type="checkbox"/> | Signal for activating the external setpoint value. SP.E is the external setpoint, or dependent on the device and configuration of the setpoint shift. |
| | | 1dP | 9274 | | | | |
| | | 2dP | 17466 | | | | |
| | | 3dP | 25658 | | | | |
| Y_Y2 | r/w | base | 1083 | 34934 | Int | 0...1 <input type="checkbox"/> | Signal for activating the 2nd output value Y2. With selected Y2, the output is operated as a positioner. Caution: Do not confuse the parameter 'fixed output Y2' with the controller output Y2! |
| | | 1dP | 9275 | | | | |
| | | 2dP | 17467 | | | | |
| | | 3dP | 25659 | | | | |
| Y_Y.E | r/w | base | 1084 | 34936 | Int | 0...1 <input type="checkbox"/> | Signal for activating the external positioning value. The controller is operated as positioner. |
| | | 1dP | 9276 | | | | |
| | | 2dP | 17468 | | | | |
| | | 3dP | 25660 | | | | |

8 LOGI

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---------|-----|---------------------------|--------------------------------|-------|-----|--------------------------------|--|
| A-M | r/w | base 1dP 2dP 3dP | 1085 9277 17469 25661 | 34938 | Int | 0...1 <input type="checkbox"/> | Signal for activating manual operation. In the manual mode, the controller provides output signals independent of the process. |
| C.Off | r/w | base 1dP 2dP 3dP | 1086 9278 17470 25662 | 34940 | Int | 0...1 <input type="checkbox"/> | Signal for disabling all the controller outputs. Note: Forcing has priority; alarm processing remains active. |
| L.AM | r/w | base 1dP 2dP 3dP | 1087 9279 17471 25663 | 34942 | Int | 0...1 <input type="checkbox"/> | Signal for disabling manual operation. Triggers a forced switchover to automatic mode, and disables the front panel A/M key (also if other functions have been assigned to the key). |
| Err.r | r/w | base 1dP 2dP 3dP | 1088 9280 17472 25664 | 34944 | Int | 0...1 <input type="checkbox"/> | Signal for resetting the entire error list. The error list contains all errors that are reported, e.g. device faults and limit values. It also contains queued as well as stored errors after their correction. The reset acknowledges all errors, whereby queued errors will reappear after the next error detection (measurement). |
| SSR.Res | r/w | base 1dP 2dP 3dP | 1089 9281 17473 25665 | 34946 | Int | 0...1 <input type="checkbox"/> | Reset of the alarm triggered by a solid-state relay (SSR). SSRs are mostly used for frequent switching of heating elements, because they have no mechanical contacts that can wear out. However, an unnoticed short circuit could lead to overheating of the machine. |
| Set1.2 | r/w | base 1dP 2dP 3dP | 1091 9283 17475 25667 | 34950 | Int | 0...1 <input type="checkbox"/> | Switch-over of parameter set. The 2nd parameter set contains one complete set each of Pb (= proportional band), ti (= integral action time), and td (= derivative action time) for heating and for cooling. All other control parameters, such as switching duty cycles, are valid for both parameter sets. |
| F.Di | r/w | base 1dP 2dP 3dP | 1094 9286 17478 25670 | 34956 | Int | 0...7 <input type="checkbox"/> | Forcing of digital inputs. Forcing involves the external operation of at least one input. The instrument takes over this input value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | | | | | | Bit 0 Forcing of digital input 1 Bit 1 Forcing of digital input 2 Bit 2 Forcing of digital input 3 Bit 3 Forcing of digital input 4 Bit 4 Forcing of digital input 5 |
| I.Chg | r/w | base 1dP 2dP 3dP | 1095 9287 17479 25671 | 34958 | Int | 0...1 <input type="checkbox"/> | Signal for switching the effective process value between the first process value X1 and second process value X2. |

9 ohnE

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|----------------|--|
| CDis3 | r/w | base | 126 | 33020 | Enum | Enum_ContrDis3 | Display 3 of controller Operating Level (only visible with Engineering Tool), e.g. text only, value display or bargraph. If text only is selected, this is fixed in the display. With the other settings, entering a text causes the display to switch cyclically from one to the other. |
| | | 1dP | 8318 | | | | |
| | | 2dP | 16510 | | | | |
| | | 3dP | 24702 | | | | |
| | | | | | | | |
| | | | | | | 0 | No value / only a fixed text. |
| | | | | | | 1 | value display |
| | | | | | | 2 | Output value as a bargraph. |
| | | | | | | 3 | Control deviation as a bargraph. |
| | | | | | | 4 | Process value as a bargraph. |

| | | | | | | | | |
|----------|-----|------|-------|-------|-------|--------------|-------------------------------------|---|
| ContStdS | r/w | base | 120 | 33008 | Float | 1...9999999 | <input checked="" type="checkbox"/> | This address consists of 2 float data transferred always together: 1st data defines the number of operating hours after reaching InF.1 will be set. 2nd data defines the number of duty cycles after reaching InF.2 will be set. |
| | | 1dP | 8312 | | | | | |
| | | 2dP | 16504 | | | | | |
| | | 3dP | 24696 | | | | | |
| | | | | | | | | |
| DigForc | r/w | base | 121 | 33010 | Int | 0...255 | <input checked="" type="checkbox"/> | This address consists of 2 bytes, which can only be transmitted together: 1st datum defines which inputs are to be forced. Bit 0 = analog Input 1 Bit 1 = analog Input 2 Bit 2 = analog Input 3 Bit 3 = not used Bit 4 = digital Input 1 Bit 5 = digital Input 2 Bit 6 = digital Input 3 Bit 7 = not used 2nd datum defines which outputs are to be forced. Bit 0 = Output 1 Bit 1 = Output 2 Bit 2 = Output 3 Bit 3 = Output 4 Bit 4 = Output 5 Bit 5 = Output 6 |
| | | 1dP | 8313 | | | | | |
| | | 2dP | 16505 | | | | | |
| | | 3dP | 24697 | | | | | |
| | | | | | | | | |
| ErwBedie | r/w | base | 124 | 33016 | Int | 0...8000 | <input type="checkbox"/> | This address consists of 9 words. The words can only be transmitted together. The first 8 words describe the data to be displayed in the extended Operating Level. The 9th word defines the datum to be shown in the 2nd display value (instead of the setpoint). The basic address is to be entered as the value. |
| | | 1dP | 8316 | | | | | |
| | | 2dP | 16508 | | | | | |
| | | 3dP | 24700 | | | | | |
| | | | | | | | | |
| Lin | r/w | base | 139 | 33046 | Float | -9999...9999 | <input checked="" type="checkbox"/> | 16 float values for linearization table with 16 entries structure: input1, output1 input2, output2 ... Input values must be strictly monotonous rising. Starting from input3 a switching off value can be given. |
| | | 1dP | 8331 | | | | | |
| | | 2dP | 16523 | | | | | |
| | | 3dP | 24715 | | | | | |
| | | | | | | | | |
| LocBedie | r/w | base | 123 | 33014 | Int | 0...255 | <input type="checkbox"/> | This address consists of 2 resp. 3 bytes defining the release of operating levels. They can only be transferred together. byte 1 blocking of operating level standard device: byte 2 blocking of operating level programmer: byte 2 blocking of programmer level byte 3 blocking of operating level (content on request) |
| | | 1dP | 8315 | | | | | |
| | | 2dP | 16507 | | | | | |
| | | 3dP | 24699 | | | | | |
| | | | | | | | | |

9 ohnE

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|----------|-----|------|---------|-------|------|-----------|---|
| Pass | r/w | base | 125 | 33018 | Int | 0...9999 | <input checked="" type="checkbox"/> Password. 4-digit number for the password-protected access to blocked operating functions such as e.g. the Calibrating Level. |
| | | 1dP | 8317 | | | | |
| | | 2dP | 16509 | | | | |
| | | 3dP | 24701 | | | | |
| T.dis3 | r/w | base | 900 | 34568 | Text | 0...255 | <input type="checkbox"/> This address contains 8 bytes for the text that is to appear in Display 3.No text: 1st byte 0x00. |
| | | 1dP | 9092 | | | | |
| | | 2dP | 17284 | | | | |
| | | 3dP | 25476 | | | | |
| T.Inf | r/w | base | 901 | 34570 | Text | 0...255 | <input type="checkbox"/> This address contains 16 bytes. Bytes 1 – 8: user-defined text for message Inf.1 Bytes 9 – 16: user-defined text for message Inf.2 No text: 1st byte 0x00 |
| | | 1dP | 9093 | | | | |
| | | 2dP | 17285 | | | | |
| | | 3dP | 25477 | | | | |
| Tdis3 | r/w | base | 128 | 33024 | Int | 2...60 | <input type="checkbox"/> Display cycle for Display 3 in seconds. If a value or a bargraph is shown in Display 3, an additional text can be selected. The text is displayed briefly after every cycle time instead of the value or bargraph. |
| | | 1dP | 8320 | | | | |
| | | 2dP | 16512 | | | | |
| | | 3dP | 24704 | | | | |
| ValuDis3 | r/w | base | 127 | 33022 | Int | 0...8000 | <input type="checkbox"/> Address, which defines the display value in Display 3. |
| | | 1dP | 8319 | | | | |
| | | 2dP | 16511 | | | | |
| | | 3dP | 24703 | | | | |
| VisibelM | r/w | base | 903 | 34574 | Int | 0...255 | <input checked="" type="checkbox"/> This address consists of 55 bytes, which define the visibility mask. They can be transferred only together. The mask defines the configurations and parameter represented in the operation (contents on request). |
| | | 1dP | 9095 | | | | |
| | | 2dP | 17287 | | | | |
| | | 3dP | 25479 | | | | |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-----|-----------|---|
| Conf | r/w | base | 1 | 32770 | Int | 0...2 | <input type="checkbox"/> Start/Stop and abortion of the configuration mode 0 = End of configuration 1 = Start of configuration 2 = Abort configuration |
| | | 1dP | 8193 | | | | |
| | | 2dP | 16385 | | | | |
| | | 3dP | 24577 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|---------------------|---|
| UPD | r/w | base | 95 | 32958 | Enum | Enum_Aenderungsflag | Status message indicating that parameter / configuration have been changed via the front panel. |
| | | 1dP | 8287 | | | | |
| | | 2dP | 16479 | | | | |
| | | 3dP | 24671 | | | | |

0 No change via the front panel keys.

1 A change has been made via the front panel keys, which must be processed.

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|----------|-----|---------------------------|-------------------------------|-------|------|-----------|-------------------------------------|--|
| Hw.Opt | r | base 1dP 2dP 3dP | 200 8392 16584 24776 | 33168 | Int | 0...65535 | <input checked="" type="checkbox"/> | |
| Sw.Op | r | base 1dP 2dP 3dP | 201 8393 16585 24777 | 33170 | Int | 0...255 | <input type="checkbox"/> | Software version XY Major and Minor Release (e.g. 21 = Version 2.1). The software version specifies the firmware in the unit. For the correct interaction of E-Tool and device, it must match the operating version (OpVersion) in the E-Tool. |
| Bed.V | r | base 1dP 2dP 3dP | 202 8394 16586 24778 | 33172 | Int | 0...255 | <input type="checkbox"/> | Operating version (numeric value). For the correct interaction of E-Tool and device, the software version and operating version must match. |
| Unit | r | base 1dP 2dP 3dP | 203 8395 16587 24779 | 33174 | Int | 0...255 | <input type="checkbox"/> | Identification of the device. |
| S.Vers | r | base 1dP 2dP 3dP | 204 8396 16588 24780 | 33176 | Int | 100...255 | <input type="checkbox"/> | The sub-version number is given as an additional index for precise definition of software version. |
| Uident | r | base 1dP 2dP 3dP | 910 9102 17294 25486 | 34588 | Text | ... | <input type="checkbox"/> | Device identification. Via this Modbus address, up to 14 data units (28 bytes) can be defined. Bytes 1 - 15 order number of the device Bytes 16 - 19 Ident number 1 Bytes 20 + 21 Ident number 2 Bytes 22 - 25 OEM number Bytes 26 - 28 Software order number |
| IntUnitD | r | base 1dP 2dP 3dP | 911 9103 17295 25487 | 34590 | Text | ... | <input type="checkbox"/> | Internal device data |

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-----|-----------|---|
| St.Ala | r | base | 250 | 33268 | Int | 0...31 | <input type="checkbox"/> Alarm status: Bit-wise coded status of the individual alarms, e.g. exceeded limit value or Loop. |
| | | 1dP | 8442 | | | | |
| | | 2dP | 16634 | | | | |
| | | 3dP | 24826 | | | | |

Bit 0 Existing/stored exceeded limit 1
 Bit 1 Existing/stored exceeded limit 2
 Bit 2 Existing/stored exceeded limit 3
 Bit 3 Not used
 Bit 4 Existing/stored loop alarm
 Bit 5 Existing/stored heating current alarm
 Bit 6 Existing/stored SSR alarm
 Bit 7 Not used
 Bit 8 Existing exceeded limit 1
 Bit 9 Existing exceeded limit 2
 Bit 10 Existing exceeded limit 3
 Bit 11 Not used
 Bit 12 Existing loop alarm
 Bit 13 Existing heating current alarm
 Bit 14 Existing SSR alarm
 Bit 15 Not used

| | | | | | | | |
|-------|---|------|-------|-------|-----|--------|--|
| St.Do | r | base | 251 | 33270 | Int | 0...31 | <input type="checkbox"/> Status of the digital outputs |
| | | 1dP | 8443 | | | | Bit 0 digital output 1 |
| | | 2dP | 16635 | | | | Bit 1 digital output 2 |
| | | 3dP | 24827 | | | | Bit 2 digital output 3 |
| | | | | | | | Bit 3 digital output 4 |
| | | | | | | | Bit 4 digital output 5 |
| | | | | | | | Bit 5 digital output 6 |

| | | | | | | | |
|--------|---|------|-------|-------|-----|-------|---|
| St.Ain | r | base | 252 | 33272 | Int | 0...7 | <input type="checkbox"/> Bit-coded status of the analog input (fault, e.g. short circuit) |
| | | 1dP | 8444 | | | | |
| | | 2dP | 16636 | | | | |
| | | 3dP | 24828 | | | | |

Bit 0 Break at Input 1
 Bit 1 Reversed polarity at Input 1
 Bit 2 Short circuit at Input 1
 Bit 3 Not used
 Bit 4 Break at Input 2
 Bit 5 Reversed polarity at Input 2
 Bit 6 Short-circuit at Input 2
 Bit 7 Not used
 Bit 8 Break at Input 3 (only KS 90)
 Bit 9 Reversed polarity at Input 3 (only KS 90)
 Bit 10 Short-circuit at Input 3 (only KS 90)
 Bit 11 Not used

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--|-----|---------------------------|---------------------------------|-------|------|---------------------------------|---|
| St.Di | r | base 1dP 2dP 3dP | 253 8445 16637 24829 | 33274 | Int | 0...7 <input type="checkbox"/> | Status of the digital inputs or of push-buttons (binary coded). |
| Bit 0 Input 1 Bit 1 Input 2 Bit 2 Input 3 Bit 8 Status of 'F' key Bit 9 Status of 'A/M' key Bit 10 Status of 'Sel' key Bit 11 Status of 'Down' key Bit 12 Status of 'Up' key Bit 13 Status of 'Loc' key | | | | | | | |
| F.Di | r/w | base 1dP 2dP 3dP | 303 8495 16687 24879 | 33374 | Int | 0...1 <input type="checkbox"/> | Forcing of digital inputs. Forcing involves the external operation of at least one input. The instrument takes over this input value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| Bit 0 Forcing of digital input 1 Bit 1 Forcing of digital input 2 Bit 2 Forcing of digital input 3 Bit 3 Forcing of digital input 4 Bit 4 Forcing of digital input 5 | | | | | | | |
| F.Do | r/w | base 1dP 2dP 3dP | 304 8496 16688 24880 | 33376 | Int | 0...15 <input type="checkbox"/> | Forcing of digital outputs. Forcing involves the external operation of at least one output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| dAc.S | r/w | base 1dP 2dP 3dP | 3570 11762 19954 28146 | 39908 | Enum | Enum_DacStart | Start of the automatic calibration for the Yp input (DAC function). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. In case of a disturbance, the controller switches into manual operation and switches the outputs off. |
| 0 Calibration disabled. 1 Calibration started. 2 Searches for a value for the average change. 3 Search for the 0% calibration values 4 Calibration value for 0% was found. 5 Search for the 100% calibration values 6 Calibration value for 100% was found. 7 Returns to the starting point of the calibration. 8 Calibration has been completed successfully. | | | | | | | |

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|--|
| dAc.A | r | base | 3581 | 39930 | Enum | Enum_DacAlarm | Fault in the DAC function. On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. In case of a disturbance, the controller switches into manual operation and switches the outputs off. |
| | | 1dP | 11773 | | | | |
| | | 2dP | 19965 | | | | |
| | | 3dP | 28157 | | | | |
| | | | | | | 0 | no error |
| | | | | | | 3 | Output is blocked - check the drive for blockage After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 4 | Wrong method of operation - rong phasing, defect motor capacitor After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 5 | Fail at Yp measurement - check the connection to the Yp input After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 6 | Calibration error - manual calibration necessary After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |

10 ohnE1

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|--|
| In.1 | r | base | 232 | 33232 | Float | -1999...9999 | <input type="checkbox"/> Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8424 | | | | |
| | | 2dP | 16616 | | | | |
| | | 3dP | 24808 | | | | |
| In.1r | r | base | 240 | 33248 | Float | -1999...9999 | <input type="checkbox"/> Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8432 | | | | |
| | | 2dP | 16624 | | | | |
| | | 3dP | 24816 | | | | |
| F.Inp | r/w | base | 300 | 33368 | Float | -1999...9999 | <input type="checkbox"/> Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8492 | | | | |
| | | 2dP | 16684 | | | | |
| | | 3dP | 24876 | | | | |

11 ohnE2

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|--------------|--|
| In.2 | r | base | 233 | 33234 | Float | -1999...9999 | <input type="checkbox"/> Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8425 | | | | |
| | | 2dP | 16617 | | | | |
| | | 3dP | 24809 | | | | |

11 ohnE2

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| In.2r | r | base | 241 | 33250 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8433 | | | | | |
| | | 2dP | 16625 | | | | | |
| | | 3dP | 24817 | | | | | |
| F.Inp | r/w | base | 301 | 33370 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8493 | | | | | |
| | | 2dP | 16685 | | | | | |
| | | 3dP | 24877 | | | | | |

12 ohnE3

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| In.3 | r | base | 234 | 33236 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8426 | | | | | |
| | | 2dP | 16618 | | | | | |
| | | 3dP | 24810 | | | | | |
| In.3r | r | base | 242 | 33252 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8434 | | | | | |
| | | 2dP | 16626 | | | | | |
| | | 3dP | 24818 | | | | | |
| F.Inp | r/w | base | 302 | 33372 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8494 | | | | | |
| | | 2dP | 16686 | | | | | |
| | | 3dP | 24878 | | | | | |
| F.Out1 | r/w | base | 305 | 33378 | Float | 0...120 | <input type="checkbox"/> | Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 8497 | | | | | |
| | | 2dP | 16689 | | | | | |
| | | 3dP | 24881 | | | | | |

13 ohnE4

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--------|-----|------|---------|-------|-------|-----------|--------------------------|--|
| F.Out2 | r/w | base | 306 | 33380 | Float | 0...120 | <input type="checkbox"/> | Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 8498 | | | | | |
| | | 2dP | 16690 | | | | | |
| | | 3dP | 24882 | | | | | |

14 othr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|--------------------|---|
| bAud | r/w | base | 180 | 33128 | Enum | Enum_Baud | Bit rate of the interface (only visible with OPTION). The bit rate determines the transmission speed. |
| | | 1dP | 8372 | | | | |
| | | 2dP | 16564 | | | | |
| | | 3dP | 24756 | | | | |
| | | | | | | | |
| | | | | | | 0 | 2400 Baud |
| | | | | | | 1 | 4800 Baud |
| | | | | | | 2 | 9600 Baud |
| | | | | | | 3 | 19200 Baud |
| Addr | r/w | base | 181 | 33130 | Int | 1...247 | <input type="checkbox"/> Address on the interface (only visible with OPTION) |
| | | 1dP | 8373 | | | | |
| | | 2dP | 16565 | | | | |
| | | 3dP | 24757 | | | | |
| | | | | | | | |
| PrtY | r/w | base | 182 | 33132 | Enum | Enum_Parity | Parity of data on the interface (only visible with OPTION). Simple possibility of checking that transferred data is correct. |
| | | 1dP | 8374 | | | | |
| | | 2dP | 16566 | | | | |
| | | 3dP | 24758 | | | | |
| | | | | | | | |
| | | | | | | 0 | No parity, with 2 stop bits. |
| | | | | | | 1 | even parity |
| | | | | | | 2 | odd parity |
| | | | | | | 3 | no parity (1 stop bit) |
| dELY | r/w | base | 183 | 33134 | Int | 0...200 | <input type="checkbox"/> Response delay [ms] (only visible with OPTION). Additional delay time before the received message may be answered on the Modbus. (Might be necessary, if the same line is used for transmit/receive.) |
| | | 1dP | 8375 | | | | |
| | | 2dP | 16567 | | | | |
| | | 3dP | 24759 | | | | |
| | | | | | | | |
| dp.Ad | r/w | base | 195 | 33158 | Int | 0...126 | <input type="checkbox"/> Address of the device on the PROFIBUS. The address identifies the device clearly. |
| | | 1dP | 8387 | | | | |
| | | 2dP | 16579 | | | | |
| | | 3dP | 24771 | | | | |
| | | | | | | | |
| bc.uP | r/w | base | 196 | 33160 | Enum | Enum_BackupControl | behaviour as backup controller. The control function is done by the master. The instrument provides the display, reads the measured values and outputs the correcting variable. If bus communication (or the master) fails, the controller changes to normal operation. |
| | | 1dP | 8388 | | | | |
| | | 2dP | 16580 | | | | |
| | | 3dP | 24772 | | | | |
| | | | | | | | |
| | | | | | | 0 | The backup function is not active. |
| | | | | | | 1 | With backup function. Operates in the positioner mode as long as bus communication is functional. If bus communication (or the master) fails, the controller changes to normal operation. |
| O2 | r/w | base | 173 | 33114 | Enum | O2Unit | Parameter definition for O2 measurement. With O2 measurement it is necessary to define whether the parameter is to be evaluated in ppm or %. |
| | | 1dP | 8365 | | | | |
| | | 2dP | 16557 | | | | |
| | | 3dP | 24749 | | | | |
| | | | | | | | |
| | | | | | | 0 | Parameter for O2 function in ppm |
| | | | | | | 1 | Parameter for O2 function in % |

14 othr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| Unit | r/w | base | 170 | 33108 | Enum | Enum_Unit | Physical unit (temperature), f.e. °C |
| | | 1dP | 8362 | | | | |
| | | 2dP | 16554 | | | | |
| | | 3dP | 24746 | | | | |
| | | | | | | 0 | without unit |
| | | | | | | 1 | °C |
| | | | | | | 2 | °F |
| dP | r/w | base | 171 | 33110 | Enum | Enum_dP | Decimal point (max. no of decimals). Format of the measured value display. |
| | | 1dP | 8363 | | | | |
| | | 2dP | 16555 | | | | |
| | | 3dP | 24747 | | | | |
| | | | | | | 0 | no digit behind the decimal point |
| | | | | | | 1 | Display has one decimal. |
| | | | | | | 2 | Display has two decimals. |
| | | | | | | 3 | Display has three decimals. |
| LEd | r/w | base | 190 | 33148 | Enum | Enum_Led | Meaning of the signalling LEDs. Selection of a combination of the displayable signals. |
| | | 1dP | 8382 | | | | |
| | | 2dP | 16574 | | | | |
| | | 3dP | 24766 | | | | |
| | | | | | | 10 | The digital outputs OUT1, OUT2, OUT3, and OUT4 are displayed. |
| | | | | | | 11 | Display of controller output y1 (heating / open), alarm1, alarm2, alarm3 |
| | | | | | | 12 | Display of controller output y1 (heating / open), controller output y2 (cooling / close), alarm1, alarm2 |
| | | | | | | 13 | Display of controller output y2 (cooling / close), controller output y1 (heating / open), alarm1, alarm2 |
| dISP | r/w | base | 172 | 33112 | Int | 0...10 | <input type="checkbox"/> Brightness of the display. |
| | | 1dP | 8364 | | | | |
| | | 2dP | 16556 | | | | |
| | | 3dP | 24748 | | | | |
| C.dEL | r/w | base | 184 | 33136 | Int | 0...200 | <input type="checkbox"/> For both interfaces, Modbus only. Additional acceptable delay time between 2 received bytes, before "end of message" is assumed. This time is needed if data is not transmitted continuously by the modem. |
| | | 1dP | 8376 | | | | |
| | | 2dP | 16568 | | | | |
| | | 3dP | 24760 | | | | |
| FrEq | r/w | base | 150 | 33068 | Enum | Enum_FrEq | Switchover of the applied mains frequency 50 / 60 Hz, thereby better adaptation of the input filter for hum suppression. |
| | | 1dP | 8342 | | | | |
| | | 2dP | 16534 | | | | |
| | | 3dP | 24726 | | | | |
| | | | | | | 0 | Mains frequency is 50 Hz. |
| | | | | | | 1 | Mains frequency is 60 Hz. |
| MASt | r/w | base | 185 | 33138 | Enum | Enum_MASt | Device works as Modbus master. The communication is executed according to the master/slave principle, whereby the device can be operated as master or as slave. Operation as master must be configured here. |
| | | 1dP | 8377 | | | | |
| | | 2dP | 16569 | | | | |
| | | 3dP | 24761 | | | | |
| | | | | | | 0 | No, the unit is operated as a Modbus slave. |
| | | | | | | 1 | Yes, the unit is operated as a Modbus master. |

14 othr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-----|-----------|---|
| Cycl | r/w | base | 186 | 33140 | Int | 0...200 | <input type="checkbox"/> Cycle time (in seconds) during which the Modbus master transmits its message on the bus. |
| | | 1dP | 8378 | | | | |
| | | 2dP | 16570 | | | | |
| | | 3dP | 24762 | | | | |
| AdrO | r/w | base | 187 | 33142 | Int | 1...65535 | <input type="checkbox"/> Target address to which the data specified with AdrU are output on the bus. |
| | | 1dP | 8379 | | | | |
| | | 2dP | 16571 | | | | |
| | | 3dP | 24763 | | | | |
| AdrU | r/w | base | 188 | 33144 | Int | 1...65535 | <input type="checkbox"/> Modbus address of the data output on the bus by the Modbus master. |
| | | 1dP | 8380 | | | | |
| | | 2dP | 16572 | | | | |
| | | 3dP | 24764 | | | | |
| Numb | r/w | base | 189 | 33146 | Int | 0...100 | <input type="checkbox"/> Quantity of data that are to be transmitted from the Modbus master. |
| | | 1dP | 8381 | | | | |
| | | 2dP | 16573 | | | | |
| | | 3dP | 24765 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| E.1 | r/w | base | 210 | 33188 | Enum | Defect | Err 1 (internal error) Contact Service. |
| | | 1dP | 8402 | | | | |
| | | 2dP | 16594 | | | | |
| | | 3dP | 24786 | | | | |
| | | | | | | 0 | No fault exists (Reset). |
| | | | | | | 2 | The device is defective. |
| E.2 | r/w | base | 211 | 33190 | Enum | Problem | Err 2 (internal error, resettable) (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8403 | | | | |
| | | 2dP | 16595 | | | | |
| | | 3dP | 24787 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A fault has occurred and has been stored. |
| FbF.1 | r/w | base | 212 | 33192 | Enum | Break | Sensor break at input INP1. Typical causes and suggested remedies: Sensor fault: replace INP1 sensor. Wiring fault: check connections of INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8404 | | | | |
| | | 2dP | 16596 | | | | |
| | | 3dP | 24788 | | | | |
| | | | | | | 0 | No fault, resetting of the sensor break alarm possible (Reset). |
| | | | | | | 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. |
| | | | | | | 2 | Sensor break: The sensor is defective or there is a wiring fault. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|--|--|---------|-------|------|-----------|--|
| Sht.1 | r/w | base | 213 | 33194 | Enum | Short | Short circuit at input INP1. Typical causes and suggested remedies: Sensor fault: replace INP1 sensor. Wiring fault: check connections of INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8405 | | | | |
| | | 2dP | 16597 | | | | |
| | | 3dP | 24789 | | | | |
| 0 | No fault, | resetting of the short-circuit alarm possible (Reset). | | | | | |
| 1 | A short-circuit fault has occurred and has been stored. | | | | | | |
| 2 | A short-circuit fault has occurred. | | | | | | |
| POL.1 | r/w | base | 214 | 33196 | Enum | Polarity | Incorrect polarity at input INP1. Suggested remedy: reverse the polarity at INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8406 | | | | |
| | | 2dP | 16598 | | | | |
| | | 3dP | 24790 | | | | |
| 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). | | | | | | |
| 1 | An incorrect polarity fault has occurred and has been stored. | | | | | | |
| 2 | Incorrect polarity. The wiring of the input circuit is not correct. | | | | | | |
| FbF.2 | r/w | base | 215 | 33198 | Enum | Break | Sensor break at input INP2. Typical causes and suggested remedies: Sensor fault: replace INP2 sensor. Wiring fault: check connections of INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8407 | | | | |
| | | 2dP | 16599 | | | | |
| | | 3dP | 24791 | | | | |
| 0 | No fault, resetting of the sensor break alarm possible (Reset). | | | | | | |
| 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. | | | | | | |
| 2 | Sensor break: The sensor is defective or there is a wiring fault. | | | | | | |
| Sht.2 | r/w | base | 216 | 33200 | Enum | Short | Short circuit at input INP2. Typical causes and suggested remedies: Sensor fault: replace INP2 sensor. Wiring fault: check connections of INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8408 | | | | |
| | | 2dP | 16600 | | | | |
| | | 3dP | 24792 | | | | |
| 0 | No fault, resetting of the short-circuit alarm possible (Reset). | | | | | | |
| 1 | A short-circuit fault has occurred and has been stored. | | | | | | |
| 2 | A short-circuit fault has occurred. | | | | | | |
| POL.2 | r/w | base | 217 | 33202 | Enum | Polarity | Incorrect polarity at input INP2. Suggested remedy: reverse the polarity at INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8409 | | | | |
| | | 2dP | 16601 | | | | |
| | | 3dP | 24793 | | | | |
| 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). | | | | | | |
| 1 | An incorrect polarity fault has occurred and has been stored. | | | | | | |
| 2 | Incorrect polarity. The wiring of the input circuit is not correct. | | | | | | |
| HCA | r/w | base | 218 | 33204 | Enum | HeatCurr | Heating current alarm.Possible fault s are an open heating current circuit with current I < heating current limit, or current I > heating current limit (depending on configuration), or defective heater band.Suggested remedy: check heating current circuit, replace heater band if necessary. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8410 | | | | |
| | | 2dP | 16602 | | | | |
| | | 3dP | 24794 | | | | |
| 0 | No fault, resetting of the heating current alarm possible (Reset). | | | | | | |
| 1 | A heating current fault has occurred and has been stored. | | | | | | |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| SSr | r/w | base | 219 | 33206 | Enum | Short | Alarm message: SSr Possible causes: a current flow in the heating circuit although controller is 'off', or the SSR is defective. Suggested remedy: check heating current circuit, replace the solid-state relay, if necessary. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8411 | | | | |
| | | 2dP | 16603 | | | | |
| | | 3dP | 24795 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting of the short-circuit alarm possible (Reset). |
| | | | | | | 1 | A short-circuit fault has occurred and has been stored. |
| | | | | | | 2 | A short-circuit fault has occurred. |
| LoopP | r/w | base | 220 | 33208 | Enum | LoopAlarm | Alarm message: LoopP Possible causes: faulty or incorrectly connected input circuit, or output not connected correctly. Suggested remedy: check heating or cooling circuit, check sensor function and replace if necessary, check controller and output switching actuator. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8412 | | | | |
| | | 2dP | 16604 | | | | |
| | | 3dP | 24796 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting of the loop alarm possible (Reset). |
| | | | | | | 1 | A control loop fault has occurred and has been stored. |
| | | | | | | 2 | A control loop fault has occurred, there was no clear process response following a step change of the output. |
| AdA.H | r/w | base | 221 | 33210 | Enum | Tune | Error message from "heating" self-tuning and reason for aborted tuning attempt. Hints for trouble-shooting: Check operating sense of actuator. Is the loop closed? Is there an output limit? Adapt the setpoint. Increase step output for Yopt. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8413 | | | | |
| | | 2dP | 16605 | | | | |
| | | 3dP | 24797 | | | | |
| | | | | | | | |
| | | | | | | 0 | no error |
| | | | | | | 3 | Process responds in the wrong direction. Possible remedy: Check the output signal sense (inverse <-> direct), and re-configure the controller if necessary (inverse <-> direct). |
| | | | | | | 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| | | | | | | 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| | | | | | | 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | 8 | Setpoint reserve must be given before generating the step output change. Possible remedy: decrease set-point range, change set-point, or change process value. |
| | | | | | | 9 | The pulse response attempt has failed. No useful parameters were determined. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| AdA.C | r/w | base | 222 | 33212 | Enum | Tune | Error message from "cooling" self-tuning and reason for aborted tuning attempt. Hints for trouble-shooting: Check operating sense of actuator. Is the loop closed? Is there an output limit? Adapt the setpoint. Increase step output for Yopt. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8414 | | | | |
| | | 2dP | 16606 | | | | |
| | | 3dP | 24798 | | | | |

| | |
|---|---|
| 0 | no error |
| 3 | Process responds in the wrong direction. Possible remedy: Check the output signal sense (inverse <-> direct), and re-configure the controller if necessary (inverse <-> direct). |
| 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 8 | Setpoint reserve must be given before generating the step output change. Possible remedy: decrease set-point range, change set-point, or change process value. |
| 9 | The pulse response attempt has failed. No useful parameters were determined. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.1 | r/w | base | 223 | 33214 | Enum | Limit | Limit value 1 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8415 | | | | |
| | | 2dP | 16607 | | | | |
| | | 3dP | 24799 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.2 | r/w | base | 224 | 33216 | Enum | Limit | Limit value 2 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8416 | | | | |
| | | 2dP | 16608 | | | | |
| | | 3dP | 24800 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.3 | r/w | base | 225 | 33218 | Enum | Limit | Limit value 3 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8417 | | | | |
| | | 2dP | 16609 | | | | |
| | | 3dP | 24801 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| InF.1 | r/w | base | 226 | 33220 | Enum | Time | Message from the operating hours counter that the preset no. of hours for this maintenance period has been reached. The op-hours counter for the maintenance period is reset when this message is acknowledged. Counting the operating hours is used for preventive maintenance. - Acknowledge the error to reset it. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8418 | | | | |
| | | 2dP | 16610 | | | | |
| | | 3dP | 24802 | | | | |
| | | | | | | | |
| | | | | | | 0 | No signal, resetting of the time limit signal possible (Reset). |
| | | | | | | 1 | Operating hours - limit value (maintenance period) reached: please acknowledge. |
| InF.2 | r/w | base | 227 | 33222 | Enum | Switch | Message from the switching cycle counter that the preset no. of switch cycles for this maintenance period has been reached. The cycle counter for the maintenance period is reset when this message is acknowledged. Counting the switching cycles is used for preventive maintenance. - Acknowledge the error to reset it. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8419 | | | | |
| | | 2dP | 16611 | | | | |
| | | 3dP | 24803 | | | | |
| | | | | | | | |
| | | | | | | 0 | No error message, resetting of the switching cycle counter possible (Reset). |
| | | | | | | 1 | Set limit of the switching cycle counter (maintenance period) has been reached: please acknowledge. |
| E.4 | r/w | base | 228 | 33224 | Enum | Problem | Hardware fault.Cause: Code number and hardware are not identical. Remedy: Contact Service. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8420 | | | | |
| | | 2dP | 16612 | | | | |
| | | 3dP | 24804 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A fault has occurred and has been stored. |
| FbF.3 | r/w | base | 400 | 33568 | Enum | Break3 | Sensor break at input INP3. Typical causes and suggested remedies: Sensor fault: replace INP3 sensor. Wiring fault: check connections of INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8592 | | | | |
| | | 2dP | 16784 | | | | |
| | | 3dP | 24976 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting of the sensor break alarm possible (Reset). |
| | | | | | | 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. |
| | | | | | | 2 | Sensor break: The sensor is defective or there is a wiring fault. |
| Sht.3 | r/w | base | 401 | 33570 | Enum | Short3 | Short circuit at input INP3. Typical causes and suggested remedies: Sensor fault: replace INP3 sensor. Wiring fault: check connections of INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8593 | | | | |
| | | 2dP | 16785 | | | | |
| | | 3dP | 24977 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting of the short-circuit alarm possible (Reset). |
| | | | | | | 1 | A short-circuit fault has occurred and has been stored. |
| | | | | | | 2 | A short-circuit fault has occurred. |
| POL.3 | r/w | base | 402 | 33572 | Enum | Polarity3 | Incorrect polarity at input INP3. Suggested remedy: reverse the polarity at INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8594 | | | | |
| | | 2dP | 16786 | | | | |
| | | 3dP | 24978 | | | | |
| | | | | | | | |
| | | | | | | 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). |
| | | | | | | 1 | An incorrect polarity fault has occurred and has been stored. |
| | | | | | | 2 | Incorrect polarity. The wiring of the input circuit is not correct. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|---------------|---|
| E.3 | r/w | base | 403 | 33574 | Enum | ConfErr | configuration fault. Typical causes and suggested remedies: Missing or faulty configuration: check interactions in the configuration and parameter settings. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8595 | | | | |
| | | 2dP | 16787 | | | | |
| | | 3dP | 24979 | | | | |
| | | | | | | 0 | No configuration error |
| | | | | | | 2 | There is a configuration error. The configuration is missing or wrong, or it does not match the parameter settings. |
| dAc | r/w | base | 404 | 33576 | Enum | Enum_DacAlarm | DAC alarm, possibly with cause. On all controllers with position feedback Yp, the actuator can be monitored for incorrect operation, e.g. defective motor or excessive play due to wear. In all cases, the controller changes into manual operation and switches the outputs off. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8596 | | | | |
| | | 2dP | 16788 | | | | |
| | | 3dP | 24980 | | | | |
| | | | | | | 0 | no error |
| | | | | | | 3 | Output is blocked - check the drive for blockage After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 4 | Wrong method of operation - rong phasing, defect motor capacitor After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 5 | Fail at Yp measurement - check the connection to the Yp input After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 6 | Calibration error - manual calibration necessary After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| E.5 | r/w | base | 410 | 33588 | Enum | E5 | PROFIBUS fault. Problem (1): The fault occurrence has been stored. The fault is no longer present, but has not yet been acknowledged. Defect (2): The PROFIBUS communication is faulty. Please contact Service. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8602 | | | | |
| | | 2dP | 16794 | | | | |
| | | 3dP | 24986 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A Profibus error has occurred and has been stored. |
| | | | | | | 2 | Please contact Service. |
| dP.1 | r/w | base | 411 | 33590 | Enum | Problem_dp | PROFIBUS access fault. Possible causes: bus fault, connector problem or no connection to bus. Possible remedies: Check bus cable, check connector & leads. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8603 | | | | |
| | | 2dP | 16795 | | | | |
| | | 3dP | 24987 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |
| dP.2 | r/w | base | 412 | 33592 | Enum | Problem_dp | PROFIBUS configuration fault. Possible cause: incorrectly configured DP telegram. Suggested remedy: check DP telegram configuration in the master. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8604 | | | | |
| | | 2dP | 16796 | | | | |
| | | 3dP | 24988 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|---|--|
| dP.3 | r/w | base | 413 | 33594 | Enum | Problem_dp | PROFIBUS parameter fault. Possible cause: incorrect parameters in DP telegram. Suggested remedy: check DP telegram parameters in the master (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8605 | | | | |
| | | 2dP | 16797 | | | | |
| | | 3dP | 24989 | | | | |
| | | | | | | | |
| | | | | | 0 | No fault, resetting possible (Reset). | |
| | | | | | 2 | A Profibus fault has occurred, there is no communication. | |
| dP.4 | r/w | base | 414 | 33596 | Enum | Problem_dp | PROFIBUS data exchange fault. No exchange of user data. Possible causes: bus fault, address fault, master stopped. Suggested remedy: check cable connections, check address, check master setting. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8606 | | | | |
| | | 2dP | 16798 | | | | |
| | | 3dP | 24990 | | | | |
| | | | | | | | |
| | | | | | 0 | No fault, resetting possible (Reset). | |
| | | | | | 2 | A Profibus fault has occurred, there is no communication. | |

15 Out.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---|--|
| O.Act | r/w | base | 4150 | 41068 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12342 | | | | |
| | | 2dP | 20534 | | | | |
| | | 3dP | 28726 | | | | |
| | | | | | | | |
| | | | | | 0 | direct / normally open | |
| | | | | | 1 | inverse / normally closed | |
| Y.1 | r/w | base | 4151 | 41070 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12343 | | | | |
| | | 2dP | 20535 | | | | |
| | | 3dP | 28727 | | | | |
| | | | | | | | |
| | | | | | 0 | not active | |
| | | | | | 1 | This output provides the controller output Y1. | |
| Y.2 | r/w | base | 4152 | 41072 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12344 | | | | |
| | | 2dP | 20536 | | | | |
| | | 3dP | 28728 | | | | |
| | | | | | | | |
| | | | | | 0 | not active | |
| | | | | | 1 | This output provides the controller output Y2. | |
| Lim.1 | r/w | base | 4153 | 41074 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12345 | | | | |
| | | 2dP | 20537 | | | | |
| | | 3dP | 28729 | | | | |
| | | | | | | | |
| | | | | | 0 | not active | |
| | | | | | 1 | The output is activated by an alarm from limit value 1. | |

15 Out. 1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| Lim.2 | r/w | base | 4154 | 41076 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12346 | | | | |
| | | 2dP | 20538 | | | | |
| | | 3dP | 28730 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4155 | 41078 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12347 | | | | |
| | | 2dP | 20539 | | | | |
| | | 3dP | 28731 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 3. |
| dAc.A | r/w | base | 4156 | 41080 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12348 | | | | |
| | | 2dP | 20540 | | | | |
| | | 3dP | 28732 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. |
| LP.AL | r/w | base | 4157 | 41082 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12349 | | | | |
| | | 2dP | 20541 | | | | |
| | | 3dP | 28733 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4158 | 41084 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12350 | | | | |
| | | 2dP | 20542 | | | | |
| | | 3dP | 28734 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The heating current alarm is assigned to this output. |
| HC.SC | r/w | base | 4159 | 41086 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12351 | | | | |
| | | 2dP | 20543 | | | | |
| | | 3dP | 28735 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | Output activated by an SSR fault. |
| FAi.1 | r/w | base | 4162 | 41092 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12354 | | | | |
| | | 2dP | 20546 | | | | |
| | | 3dP | 28738 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output sends the error message 'INP1 fault'. |

15 Out.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--|-----|------|---------|-------|------|-------------|--|
| FAi.2 | r/w | base | 4163 | 41094 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12355 | | | | |
| | | 2dP | 20547 | | | | |
| | | 3dP | 28739 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP2 fault'. | | | | | | | |
| FAi.3 | r/w | base | 4164 | 41096 | Enum | Enum_FAI3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12356 | | | | |
| | | 2dP | 20548 | | | | |
| | | 3dP | 28740 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP3 fault'. | | | | | | | |
| dP.Er | r/w | base | 4175 | 41118 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12367 | | | | |
| | | 2dP | 20559 | | | | |
| | | 3dP | 28751 | | | | |
| 0 Not active | | | | | | | |
| 1 This output sends the Profibus fault. | | | | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|--------------|---|
| Out1 | r | base | 4180 | 41128 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12372 | | | | |
| | | 2dP | 20564 | | | | |
| | | 3dP | 28756 | | | | |
| 0 off | | | | | | | |
| 1 on | | | | | | | |
| F.Do1 | r/w | base | 4181 | 41130 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12373 | | | | |
| | | 2dP | 20565 | | | | |
| | | 3dP | 28757 | | | | |
| 0 off | | | | | | | |
| 1 on | | | | | | | |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| O.Act | r/w | base | 4250 | 41268 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12442 | | | | |
| | | 2dP | 20634 | | | | |
| | | 3dP | 28826 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4251 | 41270 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12443 | | | | |
| | | 2dP | 20635 | | | | |
| | | 3dP | 28827 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4252 | 41272 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12444 | | | | |
| | | 2dP | 20636 | | | | |
| | | 3dP | 28828 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4253 | 41274 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12445 | | | | |
| | | 2dP | 20637 | | | | |
| | | 3dP | 28829 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4254 | 41276 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12446 | | | | |
| | | 2dP | 20638 | | | | |
| | | 3dP | 28830 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4255 | 41278 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12447 | | | | |
| | | 2dP | 20639 | | | | |
| | | 3dP | 28831 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 3. |
| dAc.A | r/w | base | 4256 | 41280 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12448 | | | | |
| | | 2dP | 20640 | | | | |
| | | 3dP | 28832 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|--|-------|------|---------------|---|
| LP.AL | r/w | base | 4257 | 41282 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12449 | | | | |
| | | 2dP | 20641 | | | | |
| | | 3dP | 28833 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | The loop alarm (= open loop alarm) is assigned to this output. | | | | |
| HC.AL | r/w | base | 4258 | 41284 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12450 | | | | |
| | | 2dP | 20642 | | | | |
| | | 3dP | 28834 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | The heating current alarm is assigned to this output. | | | | |
| HC.SC | r/w | base | 4259 | 41286 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12451 | | | | |
| | | 2dP | 20643 | | | | |
| | | 3dP | 28835 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | Output activated by an SSR fault. | | | | |
| FAi.1 | r/w | base | 4262 | 41292 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12454 | | | | |
| | | 2dP | 20646 | | | | |
| | | 3dP | 28838 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | The output sends the error message 'INP1 fault'. | | | | |
| FAi.2 | r/w | base | 4263 | 41294 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12455 | | | | |
| | | 2dP | 20647 | | | | |
| | | 3dP | 28839 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | The output sends the error message 'INP2 fault'. | | | | |
| FAi.3 | r/w | base | 4264 | 41296 | Enum | Enum_FAI3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12456 | | | | |
| | | 2dP | 20648 | | | | |
| | | 3dP | 28840 | | | | |
| | | | | | | | |
| | | 0 | not active | | | | |
| | | 1 | The output sends the error message 'INP3 fault'. | | | | |
| dP.Er | r/w | base | 4275 | 41318 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12467 | | | | |
| | | 2dP | 20659 | | | | |
| | | 3dP | 28851 | | | | |
| | | | | | | | |
| | | 0 | Not active | | | | |
| | | 1 | This output sends the Profibus fault. | | | | |

- Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out2 | r | base | 4280 | 41328 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12472 | | | | |
| | | 2dP | 20664 | | | | |
| | | 3dP | 28856 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

| | | | | | | | |
|-------|-----|------|-------|-------|------|--------------|---|
| F.Do2 | r/w | base | 4281 | 41330 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12473 | | | | |
| | | 2dP | 20665 | | | | |
| | | 3dP | 28857 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

17 Out.3

- ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---------------------------|
| O.tYP | r/w | base | 4370 | 41508 | Enum | Enum_OtYP | Signal type selection OUT |
| | | 1dP | 12562 | | | | |
| | | 2dP | 20754 | | | | |
| | | 3dP | 28946 | | | | |
| | | | | | | 0 | Relay / logic |
| | | | | | | 1 | 0 ... 20 mA continuous |
| | | | | | | 2 | 4 ... 20 mA continuous |
| | | | | | | 3 | 0...10 V continuous |
| | | | | | | 4 | 2...10 V continuous |
| | | | | | | 5 | transmitter supply |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|--|
| O.Act | r/w | base | 4350 | 41468 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12542 | | | | |
| | | 2dP | 20734 | | | | |
| | | 3dP | 28926 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |

| | | | | | | | |
|-----|-----|------|-------|-------|------|---------|--|
| Y.1 | r/w | base | 4351 | 41470 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12543 | | | | |
| | | 2dP | 20735 | | | | |
| | | 3dP | 28927 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| Y.2 | r/w | base | 4352 | 41472 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12544 | | | | |
| | | 2dP | 20736 | | | | |
| | | 3dP | 28928 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4353 | 41474 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12545 | | | | |
| | | 2dP | 20737 | | | | |
| | | 3dP | 28929 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4354 | 41476 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12546 | | | | |
| | | 2dP | 20738 | | | | |
| | | 3dP | 28930 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4355 | 41478 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12547 | | | | |
| | | 2dP | 20739 | | | | |
| | | 3dP | 28931 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 3. |
| dAc.A | r/w | base | 4356 | 41480 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12548 | | | | |
| | | 2dP | 20740 | | | | |
| | | 3dP | 28932 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. |
| LP.AL | r/w | base | 4357 | 41482 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12549 | | | | |
| | | 2dP | 20741 | | | | |
| | | 3dP | 28933 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4358 | 41484 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12550 | | | | |
| | | 2dP | 20742 | | | | |
| | | 3dP | 28934 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The heating current alarm is assigned to this output. |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|--|-------|---------------------------------------|--|
| HC.SC | r/w | base | 4359 | 41486 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12551 | | | | |
| | | 2dP | 20743 | | | | |
| | | 3dP | 28935 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | Output activated by an SSR fault. | | | |
| FAi.1 | r/w | base | 4362 | 41492 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12554 | | | | |
| | | 2dP | 20746 | | | | |
| | | 3dP | 28938 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output sends the error message 'INP1 fault'. | | | |
| FAi.2 | r/w | base | 4363 | 41494 | Enum | Enum_FAi2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12555 | | | | |
| | | 2dP | 20747 | | | | |
| | | 3dP | 28939 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output sends the error message 'INP2 fault'. | | | |
| FAi.3 | r/w | base | 4364 | 41496 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12556 | | | | |
| | | 2dP | 20748 | | | | |
| | | 3dP | 28940 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output sends the error message 'INP3 fault'. | | | |
| dP.Er | r/w | base | 4375 | 41518 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12567 | | | | |
| | | 2dP | 20759 | | | | |
| | | 3dP | 28951 | | | | |
| | | | | | | | |
| | | | 0 | Not active | | | |
| | | | 1 | This output sends the Profibus fault. | | | |
| Out.0 | r/w | base | 4371 | 41510 | Float | -1999...9999 <input type="checkbox"/> | Lower scaling limit of the analog output (corresponds to 0%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the lower scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12563 | | | | |
| | | 2dP | 20755 | | | | |
| | | 3dP | 28947 | | | | |
| | | | | | | | |
| Out.1 | r/w | base | 4372 | 41512 | Float | -1999...9999 <input type="checkbox"/> | Upper scaling limit of the analog output (corresponds to 100%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the upper scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12564 | | | | |
| | | 2dP | 20756 | | | | |
| | | 3dP | 28948 | | | | |
| | | | | | | | |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Src | r/w | base | 4373 | 41514 | Enum | Enum_OSrc | Signal source of the analog output (visible not with all output signal types O.TYP). |
| | | 1dP | 12565 | | | | |
| | | 2dP | 20757 | | | | |
| | | 3dP | 28949 | | | | |
| | | | | | | 0 | not used |
| | | | | | | 1 | Controller output y1 (continuous) |
| | | | | | | 2 | Controller output y2 (continuous) |
| | | | | | | 3 | process value |
| | | | | | | 4 | The effective setpoint Weff, which is used for control. Example: The gradient changes the effective setpoint until it reaches the internal (target) setpoint. |
| | | | | | | 5 | control deviation xw (process value - set-point)= relative alarm Note: Monitoring with the effective set-point Weff. For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 6 | Position feedback signal Yp. |
| | | | | | | 7 | measured value INP1 |
| | | | | | | 8 | measured value INP2 |
| | | | | | | 9 | measured value INP3 |

| | | | | | | | |
|-------|-----|------|-------|-------|------|------------|----------------|
| O.FAI | r/w | base | 4374 | 41516 | Enum | Enum_OFail | fail behaviour |
| | | 1dP | 12566 | | | | |
| | | 2dP | 20758 | | | | |
| | | 3dP | 28950 | | | | |
| | | | | | | 0 | upscale |
| | | | | | | 1 | downscale |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-------|--------------|---|
| Out1 | r | base | 4380 | 41528 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12572 | | | | |
| | | 2dP | 20764 | | | | |
| | | 3dP | 28956 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Do1 | r/w | base | 4381 | 41530 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12573 | | | | |
| | | 2dP | 20765 | | | | |
| | | 3dP | 28957 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Out1 | r/w | base | 4382 | 41532 | Float | 0...120 | <input type="checkbox"/> Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 12574 | | | | |
| | | 2dP | 20766 | | | | |
| | | 3dP | 28958 | | | | |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|------------------------|------|---|-------|------|-----------|--|
| O.tYP | r/w | base | 4470 | 41708 | Enum | Enum_OtYP | Signal type selection OUT |
| | | 1dP | 12662 | | | | |
| | | 2dP | 20854 | | | | |
| | | 3dP | 29046 | | | | |
| | | 0 | Relay / logic | | | | |
| | | 1 | 0 ... 20 mA continuous | | | | |
| 2 | 4 ... 20 mA continuous | | | | | | |
| 3 | 0...10 V continuous | | | | | | |
| 4 | 2...10 V continuous | | | | | | |
| 5 | transmitter supply | | | | | | |
| O.Act | r/w | base | 4450 | 41668 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12642 | | | | |
| | | 2dP | 20834 | | | | |
| | | 3dP | 29026 | | | | |
| | | 0 | direct / normally open | | | | |
| | | 1 | inverse / normally closed | | | | |
| Y.1 | r/w | base | 4451 | 41670 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12643 | | | | |
| | | 2dP | 20835 | | | | |
| | | 3dP | 29027 | | | | |
| | | 0 | not active | | | | |
| | | 1 | This output provides the controller output Y1. | | | | |
| Y.2 | r/w | base | 4452 | 41672 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12644 | | | | |
| | | 2dP | 20836 | | | | |
| | | 3dP | 29028 | | | | |
| | | 0 | not active | | | | |
| | | 1 | This output provides the controller output Y2. | | | | |
| Lim.1 | r/w | base | 4453 | 41674 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12645 | | | | |
| | | 2dP | 20837 | | | | |
| | | 3dP | 29029 | | | | |
| | | 0 | not active | | | | |
| | | 1 | The output is activated by an alarm from limit value 1. | | | | |
| Lim.2 | r/w | base | 4454 | 41676 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12646 | | | | |
| | | 2dP | 20838 | | | | |
| | | 3dP | 29030 | | | | |
| | | 0 | not active | | | | |
| | | 1 | The output is activated by an alarm from limit value 2. | | | | |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| Lim.3 | r/w | base | 4455 | 41678 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12647 | | | | |
| | | 2dP | 20839 | | | | |
| | | 3dP | 29031 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 3. |
| dAc.A | r/w | base | 4456 | 41680 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12648 | | | | |
| | | 2dP | 20840 | | | | |
| | | 3dP | 29032 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. |
| LP.AL | r/w | base | 4457 | 41682 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12649 | | | | |
| | | 2dP | 20841 | | | | |
| | | 3dP | 29033 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4458 | 41684 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12650 | | | | |
| | | 2dP | 20842 | | | | |
| | | 3dP | 29034 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The heating current alarm is assigned to this output. |
| HC.SC | r/w | base | 4459 | 41686 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12651 | | | | |
| | | 2dP | 20843 | | | | |
| | | 3dP | 29035 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Output activated by an SSR fault. |
| FAi.1 | r/w | base | 4462 | 41692 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12654 | | | | |
| | | 2dP | 20846 | | | | |
| | | 3dP | 29038 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4463 | 41694 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12655 | | | | |
| | | 2dP | 20847 | | | | |
| | | 3dP | 29039 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|---|
| FAi.3 | r/w | base | 4464 | 41696 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12656 | | | | |
| | | 2dP | 20848 | | | | |
| | | 3dP | 29040 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| dP.Er | r/w | base | 4475 | 41718 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12667 | | | | |
| | | 2dP | 20859 | | | | |
| | | 3dP | 29051 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |
| Out.0 | r/w | base | 4471 | 41710 | Float | -1999...9999 | <input type="checkbox"/> Lower scaling limit of the analog output (corresponds to 0%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the lower scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12663 | | | | |
| | | 2dP | 20855 | | | | |
| | | 3dP | 29047 | | | | |
| Out.1 | r/w | base | 4472 | 41712 | Float | -1999...9999 | <input type="checkbox"/> Upper scaling limit of the analog output (corresponds to 100%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the upper scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12664 | | | | |
| | | 2dP | 20856 | | | | |
| | | 3dP | 29048 | | | | |
| O.Src | r/w | base | 4473 | 41714 | Enum | Enum_OSrc | Signal source of the analog output (visible not with all output signal types O.TYP). |
| | | 1dP | 12665 | | | | |
| | | 2dP | 20857 | | | | |
| | | 3dP | 29049 | | | | |
| | | | | | | 0 | not used |
| | | | | | | 1 | Controller output y1 (continuous) |
| | | | | | | 2 | Controller output y2 (continuous) |
| | | | | | | 3 | process value |
| | | | | | | 4 | The effective setpoint Weff, which is used for control. Example: The gradient changes the effective setpoint until it reaches the internal (target) setpoint. |
| | | | | | | 5 | control deviation xw (process value - set-point)= relative alarm Note: Monitoring with the effective set-point Weff. For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 6 | Position feedback signal Yp. |
| | | | | | | 7 | measured value INP1 |
| | | | | | | 8 | measured value INP2 |
| | | | | | | 9 | measured value INP3 |
| O.FAI | r/w | base | 4474 | 41716 | Enum | Enum_OFail | fail behaviour |
| | | 1dP | 12666 | | | | |
| | | 2dP | 20858 | | | | |
| | | 3dP | 29050 | | | | |
| | | | | | | 0 | upscale |
| | | | | | | 1 | downscale |

18 Out.4

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-------|----------------------------------|--|
| Out2 | r | base | 4480 | 41728 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12672 | | | | |
| | | 2dP | 20864 | | | | |
| | | 3dP | 29056 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Do2 | r/w | base | 4481 | 41730 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12673 | | | | |
| | | 2dP | 20865 | | | | |
| | | 3dP | 29057 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Out2 | r/w | base | 4482 | 41732 | Float | 0...120 <input type="checkbox"/> | Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 12674 | | | | |
| | | 2dP | 20866 | | | | |
| | | 3dP | 29058 | | | | |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Act | r/w | base | 4550 | 41868 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12742 | | | | |
| | | 2dP | 20934 | | | | |
| | | 3dP | 29126 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4551 | 41870 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12743 | | | | |
| | | 2dP | 20935 | | | | |
| | | 3dP | 29127 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4552 | 41872 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12744 | | | | |
| | | 2dP | 20936 | | | | |
| | | 3dP | 29128 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|--|------|------------|-------|------|---------------|---|
| Lim.1 | r/w | base | 4553 | 41874 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12745 | | | | |
| | | 2dP | 20937 | | | | |
| | | 3dP | 29129 | | | | |
| | | 0 | not active | | | | |
| 1 | The output is activated by an alarm from limit value 1. | | | | | | |
| Lim.2 | r/w | base | 4554 | 41876 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12746 | | | | |
| | | 2dP | 20938 | | | | |
| | | 3dP | 29130 | | | | |
| | | 0 | not active | | | | |
| 1 | The output is activated by an alarm from limit value 2. | | | | | | |
| Lim.3 | r/w | base | 4555 | 41878 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12747 | | | | |
| | | 2dP | 20939 | | | | |
| | | 3dP | 29131 | | | | |
| | | 0 | not active | | | | |
| 1 | The output is activated by an alarm from limit value 3. | | | | | | |
| dAc.A | r/w | base | 4556 | 41880 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12748 | | | | |
| | | 2dP | 20940 | | | | |
| | | 3dP | 29132 | | | | |
| | | 0 | not active | | | | |
| 1 | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. | | | | | | |
| LP.AL | r/w | base | 4557 | 41882 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12749 | | | | |
| | | 2dP | 20941 | | | | |
| | | 3dP | 29133 | | | | |
| | | 0 | not active | | | | |
| 1 | The loop alarm (= open loop alarm) is assigned to this output. | | | | | | |
| HC.AL | r/w | base | 4558 | 41884 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12750 | | | | |
| | | 2dP | 20942 | | | | |
| | | 3dP | 29134 | | | | |
| | | 0 | not active | | | | |
| 1 | The heating current alarm is assigned to this output. | | | | | | |
| HC.SC | r/w | base | 4559 | 41886 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12751 | | | | |
| | | 2dP | 20943 | | | | |
| | | 3dP | 29135 | | | | |
| | | 0 | not active | | | | |
| 1 | Output activated by an SSR fault. | | | | | | |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| FAi.1 | r/w | base | 4562 | 41892 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12754 | | | | |
| | | 2dP | 20946 | | | | |
| | | 3dP | 29138 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|--|
| FAi.2 | r/w | base | 4563 | 41894 | Enum | Enum_FAi2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12755 | | | | |
| | | 2dP | 20947 | | | | |
| | | 3dP | 29139 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|--|
| FAi.3 | r/w | base | 4564 | 41896 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12756 | | | | |
| | | 2dP | 20948 | | | | |
| | | 3dP | 29140 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------------|--|
| dP.Er | r/w | base | 4575 | 41918 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12767 | | | | |
| | | 2dP | 20959 | | | | |
| | | 3dP | 29151 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|--------------|---|
| Out3 | r | base | 4580 | 41928 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12772 | | | | |
| | | 2dP | 20964 | | | | |
| | | 3dP | 29156 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Do3 | r/w | base | 4581 | 41930 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12773 | | | | |
| | | 2dP | 20965 | | | | |
| | | 3dP | 29157 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| O.Act | r/w | base | 4650 | 42068 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12842 | | | | |
| | | 2dP | 21034 | | | | |
| | | 3dP | 29226 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4651 | 42070 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12843 | | | | |
| | | 2dP | 21035 | | | | |
| | | 3dP | 29227 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4652 | 42072 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12844 | | | | |
| | | 2dP | 21036 | | | | |
| | | 3dP | 29228 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4653 | 42074 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12845 | | | | |
| | | 2dP | 21037 | | | | |
| | | 3dP | 29229 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4654 | 42076 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12846 | | | | |
| | | 2dP | 21038 | | | | |
| | | 3dP | 29230 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4655 | 42078 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12847 | | | | |
| | | 2dP | 21039 | | | | |
| | | 3dP | 29231 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 3. |
| dAc.A | r/w | base | 4656 | 42080 | Enum | Enum_dAcA | Output function: Signal Drive monitoring system (DAC). On all controllers with position feedback Yp, the actuator can be monitored for possible malfunctions, e.g. a motor defect or excessive play due to wear. |
| | | 1dP | 12848 | | | | |
| | | 2dP | 21040 | | | | |
| | | 3dP | 29232 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by a DAC disturbance. Digital Actuator Control DAC is the actuator monitoring function. |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| LP.AL | r/w | base | 4657 | 42082 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12849 | | | | |
| | | 2dP | 21041 | | | | |
| | | 3dP | 29233 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4658 | 42084 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12850 | | | | |
| | | 2dP | 21042 | | | | |
| | | 3dP | 29234 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The heating current alarm is assigned to this output. |
| HC.SC | r/w | base | 4659 | 42086 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12851 | | | | |
| | | 2dP | 21043 | | | | |
| | | 3dP | 29235 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Output activated by an SSR fault. |
| FAi.1 | r/w | base | 4662 | 42092 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12854 | | | | |
| | | 2dP | 21046 | | | | |
| | | 3dP | 29238 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4663 | 42094 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12855 | | | | |
| | | 2dP | 21047 | | | | |
| | | 3dP | 29239 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |
| FAi.3 | r/w | base | 4664 | 42096 | Enum | Enum_FAI3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12856 | | | | |
| | | 2dP | 21048 | | | | |
| | | 3dP | 29240 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| dP.Er | r/w | base | 4675 | 42118 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12867 | | | | |
| | | 2dP | 21059 | | | | |
| | | 3dP | 29251 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

- Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|--------------|---|
| Out4 | r | base | 4680 | 42128 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12872 | | | | |
| | | 2dP | 21064 | | | | |
| | | 3dP | 29256 | | | | |
| | | | | | | | |
| | | | | | 0 | off | |
| | | | | | 1 | on | |
| F.Do4 | r/w | base | 4681 | 42130 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12873 | | | | |
| | | 2dP | 21065 | | | | |
| | | 3dP | 29257 | | | | |
| | | | | | | | |
| | | | | | 0 | off | |
| | | | | | 1 | on | |

21 PAr.2

- PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|------------|--|
| Pb12 | r/w | base | 5030 | 42828 | Float | 0,1...9999 | <input type="checkbox"/> Proportional band 1 (heating) in engineering unit (e.g. °C) of the 2nd parameter set. The Pb defines the ratio between output value and control deviation. The smaller the value of Pb is, the stronger is the control response for a specific control deviation. Too large and too small values for Pb lead to process oscillations (hunting). |
| | | 1dP | 13222 | | | | |
| | | 2dP | 21414 | | | | |
| | | 3dP | 29606 | | | | |
| | | | | | | | |
| Pb22 | r/w | base | 5031 | 42830 | Float | 0,1...9999 | <input type="checkbox"/> Proportional band 2 (cooling) in engineering unit (e.g. °C) of the 2nd parameter set. The Pb defines the ratio between output value and control deviation. The smaller the value of Pb is, the stronger is the control response for a specific control deviation. Too large and too small values for Pb lead to process oscillations (hunting). |
| | | 1dP | 13223 | | | | |
| | | 2dP | 21415 | | | | |
| | | 3dP | 29607 | | | | |
| | | | | | | | |
| ti22 | r/w | base | 5033 | 42834 | Float | 0...9999 | <input checked="" type="checkbox"/> Integral action time 2 (cooling) [s]. Second parameter set. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13225 | | | | |
| | | 2dP | 21417 | | | | |
| | | 3dP | 29609 | | | | |
| | | | | | | | |
| ti12 | r/w | base | 5032 | 42832 | Float | 0...9999 | <input checked="" type="checkbox"/> Integral action time 1 (heating) [s]. Second parameter set. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13224 | | | | |
| | | 2dP | 21416 | | | | |
| | | 3dP | 29608 | | | | |
| | | | | | | | |
| td12 | r/w | base | 5034 | 42836 | Float | 0...9999 | <input checked="" type="checkbox"/> Derivative action time 1 (heating) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| | | 1dP | 13226 | | | | |
| | | 2dP | 21418 | | | | |
| | | 3dP | 29610 | | | | |
| | | | | | | | |

21 PAr.2

• PArA

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description |
|------|-----|---------------------------|---------------------------------|----------------|-----------|--|
| td22 | r/w | base 1dP 2dP 3dP | 5035 13227 21419 29611 | 42838 Float | 0...9999 | <input checked="" type="checkbox"/> Derivative action time 2 (cooling) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |

22 SETP

• PArA

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|----------------|--------------|---|
| SP.LO | r/w | base 1dP 2dP 3dP | 3100 11292 19484 27676 | 38968 Float | -1999...9999 | <input type="checkbox"/> Lower setpoint limit. The setpoint is raised to this value automatically, if a lower setpoint is adjusted. BUT: The (safety) setpoint W2 is not restricted by the setpoint limits! The setpoint reserve for the step function is 10% of SPHi - SPLo. |
| SP.Hi | r/w | base 1dP 2dP 3dP | 3101 11293 19485 27677 | 38970 Float | -1999...9999 | <input type="checkbox"/> Upper setpoint limit. The setpoint is reduced to this value automatically, if a higher setpoint is adjusted. BUT: The (safety) setpoint W2 is not restricted by the setpoint limits! The setpoint reserve for the step function is 10% of SPHi - SPLo. |
| SP.2 | r/w | base 1dP 2dP 3dP | 3102 11294 19486 27678 | 38972 Float | -1999...9999 | <input type="checkbox"/> Second (safety) setpoint. Ramp function as with other setpoints (effective, external). However, SP2 is not restricted by the setpoint limits. |
| r.SP | r/w | base 1dP 2dP 3dP | 3103 11295 19487 27679 | 38974 Float | 0,01...9999 | <input checked="" type="checkbox"/> Setpoint gradient [/min] or ramp. Max. rate of change in order to avoid step changes of the setpoint. The gradient acts in the positive and negative directions. Note for self-tuning: with activated gradient function, the setpoint gradient is started from the process value, so that there is no sufficient setpoint reserve. |

• Signal

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|----------------|--------------|--|
| SP.EF | r | base 1dP 2dP 3dP | 3170 11362 19554 27746 | 39108 Float | -1999...9999 | <input type="checkbox"/> Effective setpoint. The value reached at the end of setpoint processing, after taking W2, external setpoint, gradient, boost function, programmer settings, start-up function, and limit functions into account. Comparison with the effective process value leads to the control deviation, from which the necessary controller response is derived. |
| Diff | r | base 1dP 2dP 3dP | 3171 11363 19555 27747 | 39110 Float | -1999...9999 | <input type="checkbox"/> Difference between the effective setpoint and setpoint 2. |

22 SETP

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|--------------|---|
| SP | r/w | base | 3180 | 39128 | Float | -1999...9999 | <input type="checkbox"/> Setpoint for the interface (without the additional function 'Controller off'). SetpInterface acts on the internal setpoint before the setpoint processing stage. Note: The value in RAM is always updated. To protect the EEPROM, storage of the value in the EEPROM is timed (at least one value per half hour). |
| | | 1dP | 11372 | | | | |
| | | 2dP | 19564 | | | | |
| | | 3dP | 27756 | | | | |
| SP.d | r/w | base | 3181 | 39130 | Float | -1999...9999 | <input type="checkbox"/> The effective setpoint is shifted by this value. In this way, the setpoints of several controllers can be shifted together, regardless of the individually adjusted effective setpoints. |
| | | 1dP | 11373 | | | | |
| | | 2dP | 19565 | | | | |
| | | 3dP | 27757 | | | | |

23 Tool

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|--------------|-----------|--|
| U.LinT | r/w | base | 634 | 34036 | Enum | Enum_Unit | Engineering unit of linearization table (temperature). |
| | | 1dP | 8826 | | | | |
| | | 2dP | 17018 | | | | |
| | | 3dP | 25210 | | | | |
| | | 0 | | | without unit | | |
| | | 1 | | | °C | | |
| | | 2 | | | °F | | |

Table Of Contents

| | | | |
|-----------------|----|--------------|----|
| 1 Cntr | | Signal | 35 |
| ConF..... | 1 | | |
| PAr | 3 | | |
| Signal | 6 | | |
| 2 InP.1 | | | |
| ConF..... | 12 | | |
| PAr | 14 | | |
| 3 InP.2 | | | |
| ConF..... | 15 | | |
| Signal | 15 | | |
| PAr | 16 | | |
| Signal | 17 | | |
| 4 InP.3 | | | |
| ConF..... | 18 | | |
| PAr | 20 | | |
| 5 Lim | | | |
| ConF..... | 21 | | |
| Signal | 21 | | |
| PAr | 23 | | |
| Signal | 23 | | |
| 6 Lim2 | | | |
| ConF..... | 24 | | |
| PAr | 24 | | |
| Signal | 25 | | |
| 7 Lim3 | | | |
| ConF..... | 25 | | |
| PAr | 26 | | |
| Signal | 27 | | |
| 8 LOGI | | | |
| ConF..... | 27 | | |
| Signal | 30 | | |
| 9 ohnE | | | |
| ConF..... | 32 | | |
| PAr | 34 | | |
| | | Signal | 37 |
| 10 ohnE1 | | | |
| | | Signal | 38 |
| 11 ohnE2 | | | |
| | | Signal | 38 |
| 12 ohnE3 | | | |
| | | Signal | 38 |
| 13 ohnE4 | | | |
| | | Signal | 38 |
| 14 othr | | | |
| ConF..... | 39 | | |
| Signal | 41 | | |
| 15 Out.1 | | | |
| ConF..... | 47 | | |
| Signal | 50 | | |
| 16 Out.2 | | | |
| ConF..... | 50 | | |
| Signal | 53 | | |
| 17 Out.3 | | | |
| ConF..... | 54 | | |
| Signal | 57 | | |
| 18 Out.4 | | | |
| ConF..... | 58 | | |
| 19 Out.5 | | | |
| ConF..... | 62 | | |
| Signal | 62 | | |
| Signal | 65 | | |
| 20 Out.6 | | | |
| ConF..... | 65 | | |
| Signal | 68 | | |

Table Of Contents

| | | |
|-----------|--------------|----|
| 21 | PAr.2 | |
| | PAr | 69 |
| 22 | ProG | |
| | ConF..... | 69 |
| | PAr | 70 |
| | Signal | 87 |
| 23 | SEtP | |
| | PAr | 88 |
| | Signal | 88 |
| 24 | Tool | |
| | ConF..... | 89 |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| SP.Fn | r/w | base | 3150 | 39068 | Enum | Enum_SPFN | Basic configuration for setpoint processing, e.g. 'setpoint controller switchable to external setpoint'. Configuration of special, controller-dependent setpoint functions. |
| | | 1dP | 11342 | | | | |
| | | 2dP | 19534 | | | | |
| | | 3dP | 27726 | | | | |
| | | | | | | | |

| | |
|---|--|
| 0 | set-point controller can be switched over to external set-point (->LOGI/SP.E) |
| 1 | Program controller for setpoint profile. The program profile is definable by the user. |
| 8 | Setpoint controller switchable to setpoint controller with external setpoint shift (switchable -> LOGI/SP.E). |
| 9 | Program controller switchable to program controller with external setpoint shift. (program controller for setpoint profile, the profile can be defined by the user, switchable -> LOGI/SP.E) |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| C.tYP | r/w | base | 5062 | 42892 | Enum | Enum_CtYP | The process value can be assigned directly to an input value, but it can also be computed from the comparison of two input values. For this, various formulas are provided for the user, e.g. the difference or the ratio of the two input values. |
| | | 1dP | 13254 | | | | |
| | | 2dP | 21446 | | | | |
| | | 3dP | 29638 | | | | |
| | | | | | | | |

| | |
|---|--|
| 0 | Standard controller (process value = x1) |
| 1 | Ratio controller $(x1+oFFS)/x2$. An offset is added to the input value x1, and then the ratio is calculated from the result and the input value x2. This ratio is used as process value. |
| 2 | The process value is calculated as the difference of the two values $(x1 - x2)$. |
| 3 | Maximum value of x1 and x2. The higher value is used for control. In case of a sensor fault, control is continued with the remaining process value. |
| 4 | Minimum value of x1 and x2. The lower value is used for control. In case of a sensor fault, control is continued with the remaining process value. |
| 5 | Mean value $(x1 + x2) / 2$. In case of a sensor fault, control is continued with the remaining process value. |
| 6 | Switchover between the input values: process value = x1 or process value = x2. |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| C.Fnc | r/w | base | 5050 | 42868 | Enum | Enum_CFnc | Control behaviour (algorithm) referred to output value: e.g. 2- or 3-point controller, signaller, 3-point stepping control. |
| | | 1dP | 13242 | | | | |
| | | 2dP | 21434 | | | | |
| | | 3dP | 29626 | | | | |
| | | | | | | | |

| | |
|---|--|
| 0 | on/off controller or signaller with one output. The on/off controller or signaller switches if the process value drifts from the setpoint more than the hysteresis. |
| 1 | PID control, e.g. heating, with one output: Switched as a digital output (2-point) or used as an analog output (continuous). PID controllers respond quickly to changes of the control deviation, and typically do not exhibit any permanent control offset. |
| 2 | D / Y / Off, or 2-point controller with partial/full load switch-over. 2 digital outputs: Y1 is the switching output and Y2 is the changeover contact for D/Y. |
| 3 | 2 x PID control, e.g. heating/cooling. Two outputs: Switched as a digital output (3-point) or used as an analog output (continuous). PID controllers respond quickly to changes of the control deviation, and typically do not exhibit any permanent control offset. |
| 4 | 3-point stepping controller, e.g. for motor actuators. Two digital outputs. No actuating pulses are generated when the process is lined out. |
| 5 | 3-point stepping controller with position feedback signal Yp, e.g. for motorized valves. Two digital outputs. No output signals are generated when the process is lined out. The position feedback signal Yp serves for displaying the actuator position, but also for monitoring the actuator if the DAC function (Digital Actuator Control) is provided. |
| 6 | continuous controller with integrated positioner. This is basically a cascade. A tracking controller with three-point stepping behaviour which operates with Yp as process value is used with the continuous controller. |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|--|---|
| mAn | r/w | base | 5051 | 42870 | Enum | Enum_mAn | Enables the output value to be adjusted in manual operation. If adjustment is not enabled, the output value cannot be changed in manual operation, neither with the front keys nor via the interface. Note: This setting does not affect the auto/manual switchover function. | |
| | | 1dP | 13243 | | | | | |
| | | 2dP | 21435 | | | | | |
| | | 3dP | 29627 | | | | | |
| 0 | | | | | | | The output value cannot be changed in manual operation, neither with the front keys nor via the interface. | |
| 1 | | | | | | | The output value is to be adjusted in manual operation (see also LOGI/mAn). | |
| C.Act | r/w | base | 5052 | 42872 | Enum | Enum_CAct | Operating sense of the controller. Inverse operation (e.g. heating) means increased heat input when the process value falls. Direct operation (e.g. cooling) means increased heat input when the process value increases. | |
| | | 1dP | 13244 | | | | | |
| | | 2dP | 21436 | | | | | |
| | | 3dP | 29628 | | | | | |
| 0 | | | | | | | Inverse or opposed-sense response, e.g. heating. The controller output is increased with a falling process value, and decreased with a rising process value. | |
| 1 | | | | | | | Direct or same-sense response, e.g. cooling. The controller output is increased with a rising process value, and decreased with a falling process value. | |
| FAIL | r/w | base | 5053 | 42874 | Enum | Enum_FAIL | With the sensor break response, the operator determines the instrument's reaction to a sensor break, thus ensuring a safe process condition. | |
| | | 1dP | 13245 | | | | | |
| | | 2dP | 21437 | | | | | |
| | | 3dP | 29629 | | | | | |
| 0 | | | | | | | controller outputs switched off | |
| 1 | | | | | | | y = parameter Y2 (Caution: fixed parameter Y2, not controller output Y2!). Note for three-point stepping controller: With $Y2 < 0.01$ CLOSED is set (DY= -100%), with $0.01 \leq Y2 \leq 99.9$ no output is set (DY=0%), with $Y2 > 99.9$ OPEN is set (DY= +100%). Note for signallers: With $Y2 < 0.01$ OFF is set, with $0.01 \leq Y2 \leq 99.9$ status keeps unchanged, with $Y2 > 99.9$ ON is set. | |
| 2 | | | | | | | y = mean output. The maximum permissible output can be adjusted with parameter Ym.H. To prevent determination of inadmissible values, mean value formation is only if the control deviation is lower than parameter L.Ym. | |
| rnG.L | r/w | base | 5059 | 42886 | Float | -1999...9999 | <input type="checkbox"/> | Lower limit for the controller's operating range. The control range is independent of the measurement range. Reducing the control range will increase the sensitivity of the self-tuning process. |
| | | 1dP | 13251 | | | | | |
| | | 2dP | 21443 | | | | | |
| | | 3dP | 29635 | | | | | |
| rnG.H | r/w | base | 5060 | 42888 | Float | -1999...9999 | <input type="checkbox"/> | Upper limit for the controller's operating range. The control range is independent of the measurement range. Reducing the control range will increase the sensitivity of the self-tuning process. |
| | | 1dP | 13252 | | | | | |
| | | 2dP | 21444 | | | | | |
| | | 3dP | 29636 | | | | | |
| CYCL | r/w | base | 5055 | 42878 | Enum | Enum_CYCL | Duty cycle for 2-point and 3-point controllers. Internally, the controller calculates a continuous output value, which is converted into switching pulses for digital outputs. The user can adapt the setting to calculate various duty cycles (on/off ratio). | |
| | | 1dP | 13247 | | | | | |
| | | 2dP | 21439 | | | | | |
| | | 3dP | 29631 | | | | | |
| 0 | | | | | | | Standard. 'Bathtub curve'. The adjusted duty cycles t1 and t2 are valid for $\pm 50\%$ control output. With very small and very large control outputs, the effective duty cycle is increased sufficiently to prevent nonsensically short operating pulses. The shortest pulses are limited to $\frac{1}{4}$ of t1 and $\frac{1}{4}$ of t2. | |
| 3 | | | | | | | With constant pulses for heating and cooling. The adjusted duty cycles t1 and t2 are maintained over the entire output range. The parameter tp is used to adjust the minimum pulse duration. Shorter pulses are added internally until a pulse of length tp can be generated. | |

1 Cntr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| tunE | r/w | base | 5056 | 42880 | Enum | Enum_tune | Self-tuning procedure / sequence. Choice between: step response tuning during start-up and pulse response tuning at setpoint; or pulse response tuning during start-up and at setpoint; or only step response tuning during start-up, and no tuning at setpoint (no pulse). |
| | | 1dP | 13248 | | | | |
| | | 2dP | 21440 | | | | |
| | | 3dP | 29632 | | | | |

0 At start-up with step function, impulse function at setpoint.
The step function at start up requires a control deviation of more than 10% of the control range. At setpoint, with control deviation less than 10% of the control range, tuning is done with the impulse function.

1 At start-up with impulse function. Setting for fast controlled systems (e.g. hot runner control).
Always tuning with impulse function. At start up, with a control deviation of more than 10% of the control range, the control loop is optimized for a wide control range. At set-point the control deviation during self-tuning is small.

2 At start up and at set-point always tune step function at start up.
Tuning is done with step function at start up, regardless of the control deviation.

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|--|
| Strt | r/w | base | 5057 | 42882 | Enum | Enum_Strt | Start of self-tuning. Self-tuning can always be started manually at the request of the operator. Here, it is possible to determine that self-tuning is started automatically under the following conditions: On power-up or when an oscillation of the process value is detected. |
| | | 1dP | 13249 | | | | |
| | | 2dP | 21441 | | | | |
| | | 3dP | 29633 | | | | |

0 no automatic start (manual start via front interface)

1 Manual or automatic start of auto-tuning at power on or when oscillating is detected (oscillating of process value by more than $\pm 0.5\%$ of the control range, and simultaneously the output value by more than 20%.) Note: Though the process is unchanged, at power on always the (time-consuming) auto-tuning is started.

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| Adt0 | r/w | base | 5061 | 42890 | Enum | Enum_Adt0 | Optimization of the switching cycles t1 and t2 for the DED conversion can be disabled here. In order to fine-tune the positioning action, the switching periods are changed by the self-tuning function, if automatic tuning is configured. |
| | | 1dP | 13253 | | | | |
| | | 2dP | 21445 | | | | |
| | | 3dP | 29637 | | | | |

0 The cycle duration is determined by auto-tuning. Thereby the best controlling results are obtained.

1 The cycle duration is not determined by auto-tuning. An oversized cycle duration causes bad control behavior. An undersized cycle duration causes a more frequent switching, which can raise the wearout of mechanical actuators (relay, contactor).

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|-----------|---|
| Pb1 | r/w | base | 5000 | 42768 | Float | 1...9999 | Proportional band 1 (heating) in engineering unit, e.g. °C. Pb defines the relationship between controller output and control deviation. The smaller Pb is, the stronger is the control action for a given control deviation. If Pb is too large or too small, the control loop will oscillate (hunting). |
| | | 1dP | 13192 | | | | |
| | | 2dP | 21384 | | | | |
| | | 3dP | 29576 | | | | |
| Pb2 | r/w | base | 5001 | 42770 | Float | 1...9999 | Proportional band 2 (cooling) in engineering units, e.g. °C. Pb defines the relationship between controller output and control deviation. The smaller Pb is, the stronger is the control action for a given control deviation. If Pb is too large or too small, the control loop will oscillate (hunting). |
| | | 1dP | 13193 | | | | |
| | | 2dP | 21385 | | | | |
| | | 3dP | 29577 | | | | |

1 Cntr

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|------|-----|---------------------------|---------------------------------|-------|-------|--------------|-------------------------------------|--|
| ti1 | r/w | base 1dP 2dP 3dP | 5002 13194 21386 29578 | 42772 | Float | 1...9999 | <input checked="" type="checkbox"/> | Integral action time 1 (heating) [s]. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| ti2 | r/w | base 1dP 2dP 3dP | 5003 13195 21387 29579 | 42774 | Float | 1...9999 | <input checked="" type="checkbox"/> | Integral action time 2 (cooling) [s]. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| td1 | r/w | base 1dP 2dP 3dP | 5004 13196 21388 29580 | 42776 | Float | 1...9999 | <input checked="" type="checkbox"/> | Derivative action time 1 (heating) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| td2 | r/w | base 1dP 2dP 3dP | 5005 13197 21389 29581 | 42778 | Float | 1...9999 | <input checked="" type="checkbox"/> | Derivative action time 2 (cooling) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| t1 | r/w | base 1dP 2dP 3dP | 5006 13198 21390 29582 | 42780 | Float | 0,4...9999 | <input type="checkbox"/> | Minimum duty cycle 1 (heating) [s]. With the standard duty cycle converter, the shortest pulse duration is 1/4 x t1. If the duty cycle is not to be optimized, this must be entered in the configuration. (Default: Optimization of the duty cycle during self-tuning, but also if the output value is less than 5%). |
| t2 | r/w | base 1dP 2dP 3dP | 5007 13199 21391 29583 | 42782 | Float | 0,4...9999 | <input type="checkbox"/> | Minimum duty cycle 2 (cooling) [s]. With the standard duty cycle converter, the shortest pulse duration is 1/4 x t1. If the duty cycle is not to be optimized, this must be entered in the configuration. (Default: Optimization of the duty cycle during self-tuning, but also if the output value is less than 5%). |
| SH | r/w | base 1dP 2dP 3dP | 5014 13206 21398 29590 | 42796 | Float | 0...9999 | <input type="checkbox"/> | Neutral zone, or switching difference of the signaller [engineering unit]. Too small: unnecessarily high switching frequency. Too large: reduced controller sensitivity. With 3-point controllers this slows down the direct transition from heating to cooling. With 3-point stepping controllers, it reduces the switching operations of the actuator around setpoint. |
| d.SP | r/w | base 1dP 2dP 3dP | 5016 13208 21400 29592 | 42800 | Float | -1999...9999 | <input type="checkbox"/> | Separation of the D / Y switch-over point from the setpoint [engineering unit]. With a significant control deviation heating start is in delta connection. When the control deviation increases, the instrument switches over to reduced power (Y connection) for line-out to the set-point. |
| tp | r/w | base 1dP 2dP 3dP | 5009 13201 21393 29585 | 42786 | Float | 0,1...9999 | <input checked="" type="checkbox"/> | Minimum pulse duration [s]. Used for switching with constant periods. For positioning values that require a shorter pulse than adjusted for 'tp', the output is suppressed, but 'remembered'. The controller continues adding the internal short pulses until a value equal to 'tp' can be output. |

1 Cntr

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|------------|--------------------------|--|
| tt | r/w | base 1dP 2dP 3dP | 5015 13207 21399 29591 | 42798 | Float | 3...9999 | <input type="checkbox"/> | Travel time of the actuator motor [s]. If no feedback signal is available, the controller calculates the actuator position by means of an integrator and the adjusted motor travel time. For this reason, a precise definition of the motor travel time between min and max (0% and 100%) is important. |
| Y.Lo | r/w | base 1dP 2dP 3dP | 5018 13210 21402 29594 | 42804 | Float | -105...105 | <input type="checkbox"/> | Lower output limit [%] The range is dependant of the type of controller: 2 point controller: 0...ymax+1 3 point controller: -105 ymax-1 |
| Y.Hi | r/w | base 1dP 2dP 3dP | 5019 13211 21403 29595 | 42806 | Float | -105...105 | <input type="checkbox"/> | Upper output limit [%] The range is ymin+1105 |
| Y2 | r/w | base 1dP 2dP 3dP | 5017 13209 21401 29593 | 42802 | Float | -100...100 | <input type="checkbox"/> | Second positioning value [%]. Activated Y2 = positioner control. Caution: The parameter 'positioning output Y2' must not be confused with the controller output Y2! |
| Y.0 | r/w | base 1dP 2dP 3dP | 5020 13212 21404 29596 | 42808 | Float | -105...105 | <input type="checkbox"/> | Offset for die positioning value [%]. This is added to the controller output, and has the most effect with P and PD controllers. (With PID controllers, the effect is compensated by the integral action.) With a control deviation = 0, the P controller generates a control output Y0. |
| Ym.H | r/w | base 1dP 2dP 3dP | 5021 13213 21405 29597 | 42810 | Float | -105...105 | <input type="checkbox"/> | Limit for the mean control output value Ym in case of sensor break [%]. The mean control output value is configurable as the response to sensor break. The maximum mean output value = YmH. |
| L.Ym | r/w | base 1dP 2dP 3dP | 5022 13214 21406 29598 | 42812 | Float | 1...9999 | <input type="checkbox"/> | Max. control deviation (xw), at the start of mean value calculation [engineering unit]. When calculating the mean value, data are only taken into account if the control deviation is small enough. 'Lym' is a preset value that determines how precisely the calculated output value is matched to the setpoint. |
| oFFS | r/w | base 1dP 2dP 3dP | 5024 13216 21408 29600 | 42816 | Float | -120...120 | <input type="checkbox"/> | Zero point for ratio control. For a given value of X2 (e.g. airflow quantity) the ratio controller changes the corresponding value of X1 (e.g. gas flow quantity), until the required ratio is reached. |
| HYS.L | r/w | base 1dP 2dP 3dP | 5028 13220 21412 29604 | 42824 | Float | 0...9999 | <input type="checkbox"/> | Switching hysteresis below the setpoint of the signaller [engineering unit]. |
| HYS.H | r/w | base 1dP 2dP 3dP | 5029 13221 21413 29605 | 42826 | Float | 0...9999 | <input type="checkbox"/> | Switching hysteresis above the setpoint of the signaller [engineering unit]. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|--------------|--------------------------|--|
| C.InP | r | base 1dP 2dP 3dP | 5102 13294 21486 29678 | 42972 | Float | -1999...9999 | <input type="checkbox"/> | process value |
| Tu2 | r | base 1dP 2dP 3dP | 5145 13337 21529 29721 | 43058 | Float | 0...9999 | <input type="checkbox"/> | 'Cooling' delay time of the loop. Tu is calculated by the self-tuning function: It is the time delay before the process reacts significantly. In effect, Tu is a dead time that is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| Vmax2 | r | base 1dP 2dP 3dP | 5146 13338 21530 29722 | 43060 | Float | 0...9999 | <input type="checkbox"/> | Max. rate of change for 'cooling', i.e. the fastest process value increase during self-tuning. Vmax is calculated by the self-tuning function, and is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| Kp2 | r | base 1dP 2dP 3dP | 5147 13339 21531 29723 | 43062 | Float | 0...9999 | <input type="checkbox"/> | Process gain for 'cooling'. For control loops with self-regulation, process gain is the ratio determined by the change of the control output and the resulting permanent change of the process value. Kp is calculated by the self-tuning function, and is used for defining controller action. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| St.Cntr | r | base 1dP 2dP 3dP | 5100 13292 21484 29676 | 42968 | Int | 0...65535 <input type="checkbox"/> | Status informations of the controller.f.e. switching signals, controller off or informations about selftuning. The controller sratus shows the actual adjustments of the controller. Bit 0: Switching signal heating: 0: off 1: on Bit 1: Switching signal cooling: 0: off 1: on Bit 2: Sensor error 0: ok 1: error Bit 3: Controlsignal: Manual/automatic 0: automatic 1: manual Bit 4: Controlsignal: Y2 0: Y2 not activ 1: Y2 activ Bit 5: Controlsignal: Ext. setting of outputsignal 0: not activ 1: activ Bit 6: Controlsignal: Controller off 0: contr. on 1: contr. off Bit 7: Controlsignal:The activ parameter set 0: parameterset 1 1: parameterset 2 Bit 8: Loopalarm 0: no alarm 1: alarm Bit 9: Soft start function 0: not activ 1: activ Bit 10: Rate to setpoint 0: not activ 1: activ Bit 11: Not used Bit 12-15: Internal functional statuses (operating state) 0 0 0 0 Automatic 0 0 0 1 Selftuning is running 0 0 1 0 Selftuning faulty (Waiting for operator signal) 0 0 1 1 Sensor error 0 1 0 0 Not used 0 1 0 1 Manual 0 1 1 1 Not used 1 0 0 0 Manual, with external presetting of the outputsignal 1 0 0 1 Outputs switched off (neutral) 1 0 1 0 Abortion of the selftuning (by control- or error-signal) |
| diFF | r | base 1dP 2dP 3dP | 5104 13296 21488 29680 | 42976 | Float | -1999...9999 <input type="checkbox"/> | Control deviation, is defined as process value minus setpoint. Positive Xw means that the process value is above the setpoint. A small control deviation indicates precise control. |
| POS | r | base 1dP 2dP 3dP | 5105 13297 21489 29681 | 42978 | Float | 0...100 <input type="checkbox"/> | The position feedback Yp shows the actuator position with 3-point stepping controllers. If Yp is outside the limits Ymin and Ymax, the output of positioning pulses is suppressed. |
| Tu1 | r | base 1dP 2dP 3dP | 5141 13333 21525 29717 | 43050 | Float | 0...9999 <input type="checkbox"/> | 'Heating' delay time of the loop. Tu is calculated by the self-tuning function: It is the time delay before the process reacts significantly. In effect, Tu is a dead time that is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| Ypid | r | base 1dP 2dP 3dP | 5103 13295 21487 29679 | 42974 | Float | -120...120 <input type="checkbox"/> | Output value Ypid is the output signal determined by the controller, and from which the switching pulses for the digital and analog control outputs are calculated. Ypid is also available as an analog signal. e.g. for visualization. |
| Ada.St | r/w | base 1dP 2dP 3dP | 5150 13342 21534 29726 | 43068 | Enum | Enum_AdaStart | Starting / stopping the self-tuning function. After the start signal, the controller waits until the process reaches a stable condition (PIR) before it starts the self-tuning process. Self-tuning can be aborted manually at any time. After a successful self-tuning attempt, the controller automatically resumes normal operation. |
| | | | | | | 0 | 'Stop' will abort the self-tuning process, and the controller returns to normal operation with the previous parameter settings. |
| | | | | | | 1 | Start of the self-tuning process is possible during manual or automatic controller operation. |
| Yman | r/w | base 1dP 2dP 3dP | 5151 13343 21535 29727 | 43070 | Float | -110...110 <input type="checkbox"/> | Absolute preset output value, which is used as output value during manual operation. Caution: With 3-point stepping controllers, Yman (evaluated the same as Dyman) is added to the actual output value as a relative shift. |
| dYman | r/w | base 1dP 2dP 3dP | 5152 13344 21536 29728 | 43072 | Float | -220...220 <input type="checkbox"/> | Differential preset output value, which is added to the actual output value during manual operation. Negative values reduce the output. |
| Yinc | r/w | base 1dP 2dP 3dP | 5153 13345 21537 29729 | 43074 | Enum | Enum_YInc | Increasing the output value. There are two speeds: 40 s or 10 s for the change from 0 % to 100 %. Note: The 3-point stepping controller translates the increments as UP. |
| | | | | | | 0 | Not active |
| | | | | | | 1 | increment output |
| Ydec | r/w | base 1dP 2dP 3dP | 5154 13346 21538 29730 | 43076 | Enum | Enum_YDec | Decreasing the output value. There are two speeds: 40 s or 10 s for the change from 0 % to 100 %. Note: The 3-point stepping controller translates the increments as DOWN. |
| | | | | | | 0 | Not active |
| | | | | | | 1 | decrement output |
| SP.EF | r | base 1dP 2dP 3dP | 5101 13293 21485 29677 | 42970 | Float | -1999...9999 <input type="checkbox"/> | Effective setpoint. The value reached at the end of setpoint processing, after taking W2, external setpoint, gradient, boost function, programmer settings, start-up function, and limit functions into account. Comparison with the effective process value leads to the control deviation, from which the necessary controller response is derived. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---|-----|------|---------|-------|-------|-----------|--|
| St.Tune | r | base | 5140 | 43048 | Int | 0...65535 | <input type="checkbox"/> Status information during self-tuning, e.g. the actual condition, and possible results, warnings, and error messages. |
| | | 1dP | 13332 | | | | |
| | | 2dP | 21524 | | | | |
| | | 3dP | 29716 | | | | |
| Bit 0 Process lined out; 0 = No; 1 = Yes Bit 1 Operating mode 'Self-tuning controller; 0 = Off; 1 = On Bit 2 Result of controller self-tuning; 0 = OK; 1 = Fault Bit 3 - 7 Not used Bit 8 - 11 Result of the 'heating' attempt 0 0 0 0 No message / Attempt still running 0 0 0 1 Successful 0 0 1 0 Successful, with risk of exceeded setpoint 0 0 1 1 Error: Wrong operating sense 0 1 0 0 Error: No response from process 0 1 0 1 Error: Turning point too low 0 1 1 0 Error: Risk of exceeded setpoint 0 1 1 1 Error: Step output too small 1 0 0 0 Error: Setpoint reserve too small Bit 12 - 15 Result of 'cooling' attempt (same as heating attempt) | | | | | | | |
| Vmax1 | r | base | 5142 | 43052 | Float | 0...9999 | <input type="checkbox"/> Max. rate of change for 'heating', i.e. the fastest process value increase during self-tuning. Vmax is calculated by the self-tuning function, and is determined by the reaction of the process to a change of the control output. It is used for defining controller action. |
| | | 1dP | 13334 | | | | |
| | | 2dP | 21526 | | | | |
| | | 3dP | 29718 | | | | |
| Kp1 | r | base | 5143 | 43054 | Float | 0...9999 | <input type="checkbox"/> Process gain for 'heating'. For control loops with self-regulation, process gain is the ratio determined by the change of the control output and the resulting permanent change of the process value. Kp is calculated by the self-tuning function, and is used for defining controller action. |
| | | 1dP | 13335 | | | | |
| | | 2dP | 21527 | | | | |
| | | 3dP | 29719 | | | | |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|------|-----|------|---------|-------|------|-----------|---|--|
| Msg2 | r | base | 5148 | 43064 | Enum | Enum_Msg | The result of self-tuning for 'cooling' indicates whether self-tuning was successful, and with what result. | |
| | | 1dP | 13340 | | | | | |
| | | 2dP | 21532 | | | | | |
| | | 3dP | 29724 | | | | | |
| | | | | | | | 0 | No message / Tuning attempt still running |
| | | | | | | | 1 | Self-tuning has been completed successfully. The new parameters are valid. |
| | | | | | | | 2 | Self-tuning was successful, but with a warning. The new parameters are valid. Note: Self-tuning was aborted due to the risk of an exceeded setpoint, but useful parameters were determined. Possibly repeat the attempt with an increased setpoint reserve. |
| | | | | | | | 3 | The process reacts in the wrong direction. Possible remedy: Reconfigure the controller (inverse <-> direct). Check the controller output sense (inverse <-> direct). |
| | | | | | | | 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| | | | | | | | 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | | 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. No useful parameters were determined. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| | | | | | | | 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| | | | | | | | 8 | The controller is waiting. Setpoint reserve must be given before generating the step output change. Acknowledgment of this error message leads to switch-over to automatic mode. If self-tuning shall be continued, change set-point, change process value, or decrease set-point range. |
| | | | | | | | 9 | Impulse tuning failed. No useful parameters were determined. The control loop is perhaps not closed: check sensor, connections and process. |

1 Cntr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| Msg1 | r | base | 5144 | 43056 | Enum | Enum_Msg | The result of self-tuning for 'heating' indicates whether self-tuning was successful, and with what result. |
| | | 1dP | 13336 | | | | |
| | | 2dP | 21528 | | | | |
| | | 3dP | 29720 | | | | |

| | |
|---|--|
| 0 | No message / Tuning attempt still running |
| 1 | Self-tuning has been completed successfully. The new parameters are valid. |
| 2 | Self-tuning was successful, but with a warning. The new parameters are valid. Note: Self-tuning was aborted due to the risk of an exceeded setpoint, but useful parameters were determined. Possibly repeat the attempt with an increased setpoint reserve. |
| 3 | The process reacts in the wrong direction. Possible remedy: Reconfigure the controller (inverse <-> direct). Check the controller output sense (inverse <-> direct). |
| 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. No useful parameters were determined. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 8 | The controller is waiting. Setpoint reserve must be given before generating the step output change. Acknowledgment of this error message leads to switch-over to automatic mode. If self-tuning shall be continued, change set-point, change process value, or decrease set-point range. |
| 9 | Impulse tuning failed. No useful parameters were determined. The control loop is perhaps not closed: check sensor, connections and process. |

| | | | | | | | |
|------|-----|------|-------|-------|------|-------------|--|
| YGrw | r/w | base | 5155 | 43078 | Enum | Enum_YGrwLs | Gradient of Y-variation 'slow' or 'fast'. Changes the positioning output speed. There are two speeds for output variation: from 0% to 100% in 40s or in 10s. |
| | | 1dP | 13347 | | | | |
| | | 2dP | 21539 | | | | |
| | | 3dP | 29731 | | | | |

| | |
|---|--|
| 0 | Slow change of Y, from 0% to 100% in 40 seconds. |
| 1 | Fast change of Y, from 0% to 100% in 10 seconds. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| I.Fnc | r/w | base | 167 | 33102 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP1, e.g. value at INP1 is the external setpoint. |
| | | 1dP | 8359 | | | | |
| | | 2dP | 16551 | | | | |
| | | 3dP | 24743 | | | | |
| | | | | | | 0 | no function (subsequent input data are skipped) |
| | | | | | | 1 | Heating current input. |
| | | | | | | 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| | | | | | | 3 | Position feedback signal Yp. |
| | | | | | | 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| | | | | | | 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| | | | | | | 6 | No controller input (replaced e.g. by limit value signalling). |
| | | | | | | 7 | Process value X1. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| S.tYP | r/w | base | 1150 | 35068 | Enum | Enum_StYP | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted |
| | | 1dP | 9342 | | | | |
| | | 2dP | 17534 | | | | |
| | | 3dP | 25726 | | | | |

| | |
|----|---|
| 0 | thermocouple type L (-100...900°C), Fe-CuNi DIN Fahrenheit: -148...1652°F |
| 1 | thermocouple type J (-100...1200°C), Fe-CuNi Fahrenheit: -148...2192°F |
| 2 | thermocouple type K (-100...1350°C), NiCr-Ni Fahrenheit: -148...2462°F |
| 3 | thermocouple type N (-100...1300°C), Nicrosil-Nisil Fahrenheit: -148...2372°F |
| 4 | thermocouple type S (0...1760°C), PtRh-Pt10% Fahrenheit: 32...3200°F |
| 5 | thermocouple type R (0...1760°C), PtRh-Pt13% Fahrenheit: 32...3200°F |
| 6 | thermocouple type T (-200...400°C), Cu-CuNi Fahrenheit: -328...752°F |
| 7 | thermocouple type C (0...2315°C), W5%Re-W26%Re Fahrenheit: 32...4199°F |
| 8 | thermocouple type D (0...2315°C), W3%Re-W25%Re Fahrenheit: 32...4199°F |
| 9 | thermocouple type E (-100...1000°C), NiCr-CuNi Fahrenheit: -148...1832°F |
| 10 | thermocouple type B (0/400...1820°C), PtRh-Pt6% Fahrenheit: 32/752...3308°F |
| 18 | Special thermocouple with a linearization characteristic selectable by the user. This enables non-linear signals to be simulated or linearized. |
| 20 | Pt100 (-200.0 ... 100.0(150.0)°C) Measuring range up to 150°C at reduced lead resistance. Fahrenheit: -328...212(302) °F |
| 21 | Pt100 (-200.0 ... 850.0 °C) Fahrenheit: -328...1562 °F |
| 22 | Pt 1000 (-200.0...850.0 °C) Fahrenheit: -328...1562 °F |
| 23 | Special : 0...4500 Ohms. For KTY 11-6 with preset special linearization (-50...150 °C or -58...302 °F). |
| 24 | Special 0...450 Ohm |
| 30 | Current : 0...20 mA / 4...20 mA |
| 40 | 0...10V / 2...10V |
| 41 | Special -2.5...115 mV |
| 42 | Special : -25...1150 mV |
| 50 | potentiometer 0...160 Ohm |
| 51 | potentiometer 0...450 Ohm |
| 52 | potentiometer 0...1600 Ohm |
| 53 | potentiometer 0...4500 Ohm |

| Name | r/w | base | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| S.Lin | r/w | base | 1151 | 35070 | Enum | Enum_SLin | Linearization (not adjustable for all sensor types S.tYP). Special linearization. The linearization table can be created with the Engineering Tool. The default characteristic is for KTY 11-6 temperature sensors. |
| | | 1dP | 9343 | | | | |
| | | 2dP | 17535 | | | | |
| | | 3dP | 25727 | | | | |

| | |
|---|---|
| 0 | No special linearization. |
| 1 | Special linearization. Definition of the linearization table is possible with the Engineering Tool. The default setting is the characteristic of the KTY 11-6 temperature sensor. |

2 InP.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|-------------------------------------|
| Corr | r/w | base | 160 | 33088 | Enum | Enum_Corr3 | Measured value correction / scaling |
| | | 1dP | 8352 | | | | |
| | | 2dP | 16544 | | | | |
| | | 3dP | 24736 | | | | |
| | | | | | | | |

| | |
|---|---|
| 0 | Without scaling |
| 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| 2 | Two-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| 3 | Scaling (at PARa-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |

| | | | | | | | | |
|------|-----|------|-------|-------|-------|--------------|-------------------------------------|---|
| In.F | r/w | base | 1152 | 35072 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). |
| | | 1dP | 9344 | | | | | |
| | | 2dP | 17536 | | | | | |
| | | 3dP | 25728 | | | | | |
| | | | | | | | | |

• PARa

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|-------------------------------------|--|
| InL.1 | r/w | base | 1100 | 34968 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the lower scaling point (e.g. 4 mA) is done using the corresponding electrical value. |
| | | 1dP | 9292 | | | | | |
| | | 2dP | 17484 | | | | | |
| | | 3dP | 25676 | | | | | |
| | | | | | | | | |
| OuL.1 | r/w | base | 1101 | 34970 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the lower scaling point, e.g. 4 mA is displayed as 2 [pH]. |
| | | 1dP | 9293 | | | | | |
| | | 2dP | 17485 | | | | | |
| | | 3dP | 25677 | | | | | |
| | | | | | | | | |
| InH.1 | r/w | base | 1102 | 34972 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the upper scaling point (e.g. 20 mA) is done using the corresponding electrical value. |
| | | 1dP | 9294 | | | | | |
| | | 2dP | 17486 | | | | | |
| | | 3dP | 25678 | | | | | |
| | | | | | | | | |
| OuH.1 | r/w | base | 1103 | 34974 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the upper scaling point, e.g. 20 mA is displayed as 12 [pH]. |
| | | 1dP | 9295 | | | | | |
| | | 2dP | 17487 | | | | | |
| | | 3dP | 25679 | | | | | |
| | | | | | | | | |
| t.F1 | r/w | base | 1104 | 34976 | Float | 0...100 | <input type="checkbox"/> | Filter time constant [s]. Every input is fitted with a digital (software) low-pass filter for suppressing process-related disturbances on the input leads. Higher filter settings improve the suppression, but increase the delay of the input signals. |
| | | 1dP | 9296 | | | | | |
| | | 2dP | 17488 | | | | | |
| | | 3dP | 25680 | | | | | |
| | | | | | | | | |
| E.tc1 | r/w | base | 1105 | 34978 | Float | 0...100 | <input checked="" type="checkbox"/> | External temperature compensation (temperature at the junction of thermocouple/copper lead with external temperature compensation). |
| | | 1dP | 9297 | | | | | |
| | | 2dP | 17489 | | | | | |
| | | 3dP | 25681 | | | | | |
| | | | | | | | | |

- Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|---------------------------------------|--|
| In.1r | r | base | 1170 | 35108 | Float | -1999...9999 <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9362 | | | | |
| | | 2dP | 17554 | | | | |
| | | 3dP | 25746 | | | | |
| Fail | r | base | 1171 | 35110 | Enum | Enum_InpFail | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9363 | | | | |
| | | 2dP | 17555 | | | | |
| | | 3dP | 25747 | | | | |

| | |
|---|------------------------------|
| 0 | no error |
| 1 | sensor break |
| 2 | Incorrect polarity at input. |
| 4 | Short circuit at input. |

| | | | | | | | |
|-------|-----|------|-------|-------|-------|---------------------------------------|---|
| In.1 | r | base | 1172 | 35112 | Float | -1999...9999 <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9364 | | | | |
| | | 2dP | 17556 | | | | |
| | | 3dP | 25748 | | | | |
| F.Inp | r/w | base | 1180 | 35128 | Float | -1999...9999 <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9372 | | | | |
| | | 2dP | 17564 | | | | |
| | | 3dP | 25756 | | | | |

3 InP.2

- ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| I.Fnc | r/w | base | 161 | 33090 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP2, e.g. value at INP2 is the external setpoint. |
| | | 1dP | 8353 | | | | |
| | | 2dP | 16545 | | | | |
| | | 3dP | 24737 | | | | |

| | |
|---|---|
| 0 | no function (subsequent input data are skipped) |
| 1 | Heating current input. |
| 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| 3 | Position feedback signal Yp. |
| 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| 6 | No controller input (replaced e.g. by limit value signalling). |
| 7 | Process value X1. |

3 InP.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| S.tYP | r/w | base | 1250 | 35268 | Enum | Enum_StYP2 | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted. |
| | | 1dP | 9442 | | | | |
| | | 2dP | 17634 | | | | |
| | | 3dP | 25826 | | | | |
| | | | | | | | |
| | | | | | | 30 | Current : 0...20 mA / 4...20 mA |
| | | | | | | 31 | 0...50 mA current (AC) |
| | | | | | | 50 | Potentiometer 0...160 Ohm |
| | | | | | | 51 | Potentiometer 0...450 Ohm |
| | | | | | | 52 | Potentiometer 0...1600 Ohm |
| | | | | | | 53 | Potentiometer 0...4500 Ohm |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| Corr | r/w | base | 162 | 33092 | Enum | Enum_Corr | Measured value correction / scaling |
| | | 1dP | 8354 | | | | |
| | | 2dP | 16546 | | | | |
| | | 3dP | 24738 | | | | |
| | | | | | | | |
| | | | | | | 0 | Without scaling |
| | | | | | | 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| | | | | | | 2 | 2-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| | | | | | | 3 | Scaling (at PARa-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|------|-----|------|---------|-------|-------|--------------|-------------------------------------|---|
| In.F | r/w | base | 1252 | 35272 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). |
| | | 1dP | 9444 | | | | | |
| | | 2dP | 17636 | | | | | |
| | | 3dP | 25828 | | | | | |
| | | | | | | | | |

• PARa

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|--|
| InL.2 | r/w | base | 1200 | 35168 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the lower scaling point (e.g. 4 mA) is done using the corresponding electrical value. |
| | | 1dP | 9392 | | | | | |
| | | 2dP | 17584 | | | | | |
| | | 3dP | 25776 | | | | | |
| | | | | | | | | |
| OuL.2 | r/w | base | 1201 | 35170 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the lower scaling point, e.g. 4 mA is displayed as 2 [pH]. |
| | | 1dP | 9393 | | | | | |
| | | 2dP | 17585 | | | | | |
| | | 3dP | 25777 | | | | | |
| | | | | | | | | |
| InH.2 | r/w | base | 1202 | 35172 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the upper scaling point (e.g. 20 mA) is done using the corresponding electrical value. |
| | | 1dP | 9394 | | | | | |
| | | 2dP | 17586 | | | | | |
| | | 3dP | 25778 | | | | | |
| | | | | | | | | |

3 InP.2

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|---------------------------------------|---|
| OuH.2 | r/w | base | 1203 | 35174 | Float | -1999...9999 <input type="checkbox"/> | Display value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the upper scaling point, e.g. 20 mA is displayed as 12 [pH]. |
| | | 1dP | 9395 | | | | |
| | | 2dP | 17587 | | | | |
| | | 3dP | 25779 | | | | |
| t.F2 | r/w | base | 1204 | 35176 | Float | 0...100 <input type="checkbox"/> | Filter time constant [s]. Every input is fitted with a digital (software) low-pass filter for suppressing process-related disturbances on the input leads. Higher filter settings improve the suppression, but increase the delay of the input signals. |
| | | 1dP | 9396 | | | | |
| | | 2dP | 17588 | | | | |
| | | 3dP | 25780 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|---------------------------------------|---|
| In.2 | r | base | 1270 | 35308 | Float | -1999...9999 <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9462 | | | | |
| | | 2dP | 17654 | | | | |
| | | 3dP | 25846 | | | | |
| Fail | r | base | 1271 | 35310 | Enum | Enum_InpFail | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9463 | | | | |
| | | 2dP | 17655 | | | | |
| | | 3dP | 25847 | | | | |

| | |
|---|------------------------------|
| 0 | no error |
| 1 | sensor break |
| 2 | Incorrect polarity at input. |
| 4 | Short circuit at input. |

| | | | | | | | |
|-------|-----|------|-------|-------|-------|---------------------------------------|---|
| In.2r | r | base | 1272 | 35312 | Float | -1999...9999 <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9464 | | | | |
| | | 2dP | 17656 | | | | |
| | | 3dP | 25848 | | | | |
| F.Inp | r/w | base | 1280 | 35328 | Float | -1999...9999 <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9472 | | | | |
| | | 2dP | 17664 | | | | |
| | | 3dP | 25856 | | | | |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| I.Fnc | r/w | base | 166 | 33100 | Enum | Enum_IFnc | Selection of the function assigned to the value at INP3, e.g. value at INP3 is the external setpoint. |
| | | 1dP | 8358 | | | | |
| | | 2dP | 16550 | | | | |
| | | 3dP | 24742 | | | | |
| | | | | | | 0 | no function (subsequent input data are skipped) |
| | | | | | | 1 | Heating current input. |
| | | | | | | 2 | External setpoint SP.E or (depending on version) external setpoint shift SP.E. (Switchover is done via -> LOGI/SP.E). |
| | | | | | | 3 | Position feedback signal Yp. |
| | | | | | | 4 | Second process value X2. For process value functions such as ratio, min, max, mean. Adjustment via Cntr/C.tYP. |
| | | | | | | 5 | Preset for external positioning value Y.E (switchover via -> LOGI/Y.E) |
| | | | | | | 6 | No controller input (replaced e.g. by limit value signalling). |
| | | | | | | 7 | Process value X1. |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| S.tYP | r/w | base | 1350 | 35468 | Enum | Enum_StYP3 | Sensor type selection. For sensors with signals of resistance transducer, current or voltage measuring, scaling can be adjusted. |
| | | 1dP | 9542 | | | | |
| | | 2dP | 17734 | | | | |
| | | 3dP | 25926 | | | | |

| | |
|----|---|
| 0 | thermocouple type L (-100...900°C), Fe-CuNi DIN Fahrenheit: -148...1652°F |
| 1 | thermocouple type J (-100...1200°C), Fe-CuNi Fahrenheit: -148...2192°F |
| 2 | thermocouple type K (-100...1350°C), NiCr-Ni Fahrenheit: -148...2462°F |
| 3 | thermocouple type N (-100...1300°C), Nicrosil-Nisil Fahrenheit: -148...2372°F |
| 4 | thermocouple type S (0...1760°C), PtRh-Pt10% Fahrenheit: 32...3200°F |
| 5 | thermocouple type R (0...1760°C), PtRh-Pt13% Fahrenheit: 32...3200°F |
| 6 | thermocouple type T (-200...400°C), Cu-CuNi Fahrenheit: -328...752°F |
| 7 | thermocouple type C (0...2315°C), W5%Re-W26%Re Fahrenheit: 32...4199°F |
| 8 | thermocouple type D (0...2315°C), W3%Re-W25%Re Fahrenheit: 32...4199°F |
| 9 | thermocouple type E (-100...1000°C), NiCr-CuNi Fahrenheit: -148...1832°F |
| 10 | thermocouple type B (0/100...1820°C), PtRh-Pt6% Fahrenheit: 32(212)...3308°F |
| 18 | Special thermocouple with a linearization characteristic selectable by the user. This enables non-linear signals to be simulated or linearized. |
| 20 | Pt100 (-200.0 ... 100.0(150.0)°C) Measuring range at reduced lead resistance up to 150°C. Fahrenheit: -328...212(302)°F |
| 21 | Pt100 (-200.0 ... 850.0 °C) Fahrenheit: -328...1562 °F |
| 22 | Pt 1000 (-200.0...850.0 °C) Fahrenheit: -328...1562 °F |
| 23 | Special : 0...4500 Ohms. For KTY 11-6 with preset special linearization (-50...150 °C or -58...302 °F). |
| 24 | Special : 0...450 Ohms |
| 30 | Current : 0...20 mA / 4...20 mA |
| 41 | Special : -2,5...115 mV |
| 42 | Special : -25...1150 mV |
| 50 | Potentiometer :0...160 Ohms |
| 51 | Potentiometer :0...450 Ohms |
| 52 | Potentiometer :0...1600 Ohms |
| 53 | Potentiometer :0...4500 Ohms |

| S.Lin | r/w | base | 1351 | 35470 | Enum | Enum_SLin | Description |
|-------|-----|------|-------|-------|------|-----------|---|
| | | 1dP | 9543 | | | | Linearization (not adjustable for all sensor types S.tYP). Special linearization. The linearization table can be created with the Engineering Tool. The default characteristic is for KTY 11-6 temperature sensors. |
| | | 2dP | 17735 | | | | |
| | | 3dP | 25927 | | | | |

| | |
|---|---|
| 0 | No special linearization. |
| 1 | Special linearization. Definition of the linearization table is possible with the Engineering Tool. The default setting is the characteristic of the KTY 11-6 temperature sensor. |

4 InP.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|-------------------------------------|
| Corr | r/w | base | 165 | 33098 | Enum | Enum_Corr3 | Measured value correction / scaling |
| | | 1dP | 8357 | | | | |
| | | 2dP | 16549 | | | | |
| | | 3dP | 24741 | | | | |
| | | | | | | | |

| | |
|---|---|
| 0 | Without scaling |
| 1 | The offset correction (in the CAL Level) can be done on-line in the process. If InL shows the lower input value of the scaling point, then OuL must be adjusted to the corresponding display value. Adjustments are made via the front panel keys of the device only. |
| 2 | Two-point correction (in CAL-Level) ist possible offline via process value transmitter or on-line in the process. Set process value for the upper and lower scaling point and confirm as input value InL or InH, then set the belonging displayed value OuL and OuH. The settings are done via the front of the device. |
| 3 | Scaling (at PAR-level). The input values for the upper (InL, OuL) and lower scaling point (InH, OuH) are visible at the parameter level. Adjustment is made via front operation or the engineering tool. |

| | | | | | | | | |
|------|-----|------|-------|-------|-------|--------------|-------------------------------------|---|
| In.F | r/w | base | 1352 | 35472 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Substitute value in case of a fault. This value is used for calculations, if there is a fault at the input (e.g. FAIL). |
| | | 1dP | 9544 | | | | | |
| | | 2dP | 17736 | | | | | |
| | | 3dP | 25928 | | | | | |
| | | | | | | | | |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|-------------------------------------|--|
| InL.3 | r/w | base | 1300 | 35368 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the lower scaling point (e.g. 4 mA) is done using the corresponding electrical value. |
| | | 1dP | 9492 | | | | | |
| | | 2dP | 17684 | | | | | |
| | | 3dP | 25876 | | | | | |
| | | | | | | | | |
| OuL.3 | r/w | base | 1301 | 35370 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the lower scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the lower scaling point, e.g. 4 mA is displayed as 2 [pH]. |
| | | 1dP | 9493 | | | | | |
| | | 2dP | 17685 | | | | | |
| | | 3dP | 25877 | | | | | |
| | | | | | | | | |
| InH.3 | r/w | base | 1302 | 35372 | Float | -1999...9999 | <input type="checkbox"/> | Input value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The display of the input value of the upper scaling point (e.g. 20 mA) is done using the corresponding electrical value. |
| | | 1dP | 9494 | | | | | |
| | | 2dP | 17686 | | | | | |
| | | 3dP | 25878 | | | | | |
| | | | | | | | | |
| OuH.3 | r/w | base | 1303 | 35374 | Float | -1999...9999 | <input type="checkbox"/> | Display value of the upper scaling point. Depending on sensor type, the input value can be scaled to the required display value in the Parameter Level. The operator can change the display value of the upper scaling point, e.g. 20 mA is displayed as 12 [pH]. |
| | | 1dP | 9495 | | | | | |
| | | 2dP | 17687 | | | | | |
| | | 3dP | 25879 | | | | | |
| | | | | | | | | |
| t.F3 | r/w | base | 1304 | 35376 | Float | 0...999,9 | <input type="checkbox"/> | Filter time constant [s]. Every input is fitted with a digital (software) low-pass filter for suppressing process-related disturbances on the input leads. Higher filter settings improve the suppression, but increase the delay of the input signals. |
| | | 1dP | 9496 | | | | | |
| | | 2dP | 17688 | | | | | |
| | | 3dP | 25880 | | | | | |
| | | | | | | | | |
| E.tc3 | r/w | base | 1305 | 35378 | Float | 0...100 | <input checked="" type="checkbox"/> | External temperature compensation (temperature at the junction of thermocouple/copper lead with external temperature compensation). |
| | | 1dP | 9497 | | | | | |
| | | 2dP | 17689 | | | | | |
| | | 3dP | 25881 | | | | | |
| | | | | | | | | |

- Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|---------------------------------------|---|
| In.3 | r | base | 1370 | 35508 | Float | -1999...9999 <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 9562 | | | | |
| | | 2dP | 17754 | | | | |
| | | 3dP | 25946 | | | | |
| Fail | r | base | 1371 | 35510 | Enum | Enum_InpFail | Input circuit fault: faulty or incorrectly connected sensor. |
| | | 1dP | 9563 | | | | |
| | | 2dP | 17755 | | | | |
| | | 3dP | 25947 | | | | |

| | |
|---|------------------------------|
| 0 | no error |
| 1 | sensor break |
| 2 | Incorrect polarity at input. |
| 4 | Short circuit at input. |

| | | | | | | | |
|-------|-----|------|-------|-------|-------|---------------------------------------|---|
| In.3r | r | base | 1372 | 35512 | Float | -1999...9999 <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 9564 | | | | |
| | | 2dP | 17756 | | | | |
| | | 3dP | 25948 | | | | |
| F.Inp | r/w | base | 1380 | 35528 | Float | -1999...9999 <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9572 | | | | |
| | | 2dP | 17764 | | | | |
| | | 3dP | 25956 | | | | |

5 Lim

- ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Fnc.1 | r/w | base | 2150 | 37068 | Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | 1dP | 10342 | | | | |
| | | 2dP | 18534 | | | | |
| | | 3dP | 26726 | | | | |

| | |
|---|---|
| 0 | No limit value monitoring. |
| 1 | measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is resetted. |
| 2 | Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually resetted. |
| 3 | Signal monitoring for rate of change (per minute). |
| 4 | Signal monitoring for rate of change (per minute) + storage of the alarm status. |

5 Lim

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| Src.1 | r/w | base | 2151 | 37070 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10343 | | | | |
| | | 2dP | 18535 | | | | |
| | | 3dP | 26727 | | | | |
| | | | | | | | |
| | | | | | | 0 | Process value = absolute alarm |
| | | | | | | 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point W_{eff} . For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| | | | | | | 3 | Measured value of the analog input INP1. |
| | | | | | | 4 | Measured value of the analog input INP2. |
| | | | | | | 5 | Measured value of the analog input INP3. |
| | | | | | | 6 | effective set-point W_{eff} . For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| | | | | | | 7 | correcting variable y (controller output) |
| | | | | | | 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point W_{int} . For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| | | | | | | 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| | | | | | | 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |
| HC.AL | r/w | base | 2050 | 36868 | Enum | Enum_HCAL | Activation of alarm heat current function. Either overload or break can be monitored, overload = current $I >$ heat current limit, or break = current $I <$ heat current limit. Short circuit is monitored in both cases. |
| | | 1dP | 10242 | | | | |
| | | 2dP | 18434 | | | | |
| | | 3dP | 26626 | | | | |
| | | | | | | | |
| | | | | | | 0 | No heating current alarm. |
| | | | | | | 1 | Overload and short circuit monitoring. Overload = current $I >$ heat current limit. |
| | | | | | | 2 | Break and short circuit monitoring. Break = current $I <$ heat current limit. |
| LP.AL | r/w | base | 5058 | 42884 | Enum | Enum_LPAL | Monitoring of control loop interruption (not possible with 3-point stepping controller, not possible with signaller) |
| | | 1dP | 13250 | | | | |
| | | 2dP | 21442 | | | | |
| | | 3dP | 29634 | | | | |
| | | | | | | | |
| | | | | | | 0 | switched off / inactive |
| | | | | | | 1 | LOOP alarm is generated, if with $Y=100\%$ there is no corresponding reaction of the process variable within the time of $2 \cdot t_i$. Possible remedial action: Check heating or cooling circuit, check sensor and replace it, if necessary, check controller and switching device. |

5 Lim

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|-------------------------------------|---|
| L.1 | r/w | base | 2100 | 36968 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10292 | | | | | |
| | | 2dP | 18484 | | | | | |
| | | 3dP | 26676 | | | | | |
| H.1 | r/w | base | 2101 | 36970 | Float | -1999...9999 | <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10293 | | | | | |
| | | 2dP | 18485 | | | | | |
| | | 3dP | 26677 | | | | | |
| HYS.1 | r/w | base | 2102 | 36972 | Float | 0...9999 | <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10294 | | | | | |
| | | 2dP | 18486 | | | | | |
| | | 3dP | 26678 | | | | | |
| dEL.1 | r/w | base | 2103 | 36974 | Float | 0...9999 | <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10295 | | | | | |
| | | 2dP | 18487 | | | | | |
| | | 3dP | 26679 | | | | | |
| HC.A | r/w | base | 2000 | 36768 | Float | -1999...9999 | <input type="checkbox"/> | Heating current monitoring limit [A]. Depending on configuration, and apart from short-circuit monitoring, an overload test checks whether the heating current is above the adjusted current limit, or below the limit when the heating is switched off. The heating current is measured by means of a current transformer (accessory), and the current range can be adapted. |
| | | 1dP | 10192 | | | | | |
| | | 2dP | 18384 | | | | | |
| | | 3dP | 26576 | | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--------|-----|------|---------|-------|-------|----------------|--------------------------|---|
| St.HC | r | base | 2070 | 36908 | Int | 0...3 | <input type="checkbox"/> | Status of the heating current alarm. Displayable are heating current short-circuit and/or heating current alarm. Depending on configuration, the heating current alarm is either an interruption of heating current ($I < \text{limit value}$) or heating current overload ($I > \text{limit value}$). |
| | | 1dP | 10262 | | | | | |
| | | 2dP | 18454 | | | | | |
| | | 3dP | 26646 | | | | | |
| HC | r | base | 2071 | 36910 | Float | -1999...9999 | <input type="checkbox"/> | Measured heating current [A]. Apart from the short circuit test, and depending on configuration, an overcurrent test (current $I > \text{heating current limit}$) and an open circuit test (current $I < \text{heating current limit}$) is executed. The heating current is measured by means of a (separate) current transformer, whereby the input range can be scaled. |
| | | 1dP | 10263 | | | | | |
| | | 2dP | 18455 | | | | | |
| | | 3dP | 26647 | | | | | |
| SSr | r | base | 2072 | 36912 | Float | -1999...9999 | <input type="checkbox"/> | Measured current with SSr [A]. The heating current (SSR) is short circuited, if there is a current flow even though the controller output is switched off. Suggested remedy: check heating current circuit, replace solid-state relay if necessary. |
| | | 1dP | 10264 | | | | | |
| | | 2dP | 18456 | | | | | |
| | | 3dP | 26648 | | | | | |
| St.Lim | r | base | 2170 | 37108 | Enum | Enum_LimStatus | | Limit value status: No alarm present or stored. |
| | | 1dP | 10362 | | | | | |
| | | 2dP | 18554 | | | | | |
| | | 3dP | 26746 | | | | | |

0 no alarm

1 latched alarm

2 A limit value has been exceeded.

6 Lim2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Fnc.2 | r/w | base | 2250 | 37268 | Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | 1dP | 10442 | | | | |
| | | 2dP | 18634 | | | | |
| | | 3dP | 26826 | | | | |

| | |
|---|--|
| 0 | No limit value monitoring. |
| 1 | measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is reset. |
| 2 | Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually reset. |
| 3 | Signal monitoring for rate of change (per minute). |
| 4 | Signal monitoring for rate of change (per minute) + storage of the alarm status. |

| Name | r/w | base | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Src.2 | r/w | base | 2251 | 37270 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10443 | | | | |
| | | 2dP | 18635 | | | | |
| | | 3dP | 26827 | | | | |

| | |
|----|---|
| 0 | Process value = absolute alarm |
| 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point $Weff$. For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| 3 | Measured value of the analog input INP1. |
| 4 | Measured value of the analog input INP2. |
| 5 | Measured value of the analog input INP3. |
| 6 | effective set-point $Weff$. For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| 7 | correcting variable y (controller output) |
| 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point $Wint$. For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|--------------|--|
| L.2 | r/w | base | 2200 | 37168 | Float | -1999...9999 | <input checked="" type="checkbox"/> Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10392 | | | | |
| | | 2dP | 18584 | | | | |
| | | 3dP | 26776 | | | | |

6 Lim2

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--|---|
| H.2 | r/w | base | 2201 | 37170 | Float | -1999...9999 <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10393 | | | | |
| | | 2dP | 18585 | | | | |
| | | 3dP | 26777 | | | | |
| HYS.2 | r/w | base | 2202 | 37172 | Float | 0...9999 <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10394 | | | | |
| | | 2dP | 18586 | | | | |
| | | 3dP | 26778 | | | | |
| dEL.2 | r/w | base | 2203 | 37174 | Float | 0...9999 <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10395 | | | | |
| | | 2dP | 18587 | | | | |
| | | 3dP | 26779 | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|------|----------------|---|
| St.Lim | r | base | 2270 | 37308 | Enum | Enum_LimStatus | Limit value status: No alarm present or stored. |
| | | 1dP | 10462 | | | | |
| | | 2dP | 18654 | | | | |
| | | 3dP | 26846 | | | | |

| | |
|---|----------------------------------|
| 0 | no alarm |
| 1 | latched alarm |
| 2 | A limit value has been exceeded. |

7 Lim3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Fnc.3 | r/w | base | 2350 | 37468 | Enum | Enum_Fcn | Activation and adjustment of the limit value alarm (e.g. for input circuit monitoring), e.g. with/without storage. |
| | | 1dP | 10542 | | | | |
| | | 2dP | 18734 | | | | |
| | | 3dP | 26926 | | | | |

| | |
|---|---|
| 0 | No limit value monitoring. |
| 1 | measured value monitoring. The alarm signal is generated, if the limit is exceeded. If the measured value is within the limits (including hysteresis) again, this alarm signal is resetted. |
| 2 | Measured value monitoring + alarm status latch. An alarm signal is generated, if the limit is exceeded. A latched alarm signal remains latched until it is manually resetted. |
| 3 | Signal monitoring for rate of change (per minute). |
| 4 | Signal monitoring for rate of change (per minute) + storage of the alarm status. |

7 Lim3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| Src.3 | r/w | base | 2351 | 37470 | Enum | Enum_Src | Source for limit value. Selection of which value is to be monitored. |
| | | 1dP | 10543 | | | | |
| | | 2dP | 18735 | | | | |
| | | 3dP | 26927 | | | | |
| | | | | | | 0 | Process value = absolute alarm |
| | | | | | | 1 | control deviation x_w (process value - set-point) = relative alarm Note: Monitoring with the effective set-point W_{eff} . For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| | | | | | | 2 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint changes. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again, at the latest after $10 \cdot T_n$. |
| | | | | | | 3 | Measured value of the analog input INP1. |
| | | | | | | 4 | Measured value of the analog input INP2. |
| | | | | | | 5 | Measured value of the analog input INP3. |
| | | | | | | 6 | effective set-point W_{eff} . For example the ramp-function changes the effective set-point until it matches the internal (target) set-point. |
| | | | | | | 7 | correcting variable y (controller output) |
| | | | | | | 8 | control variable deviation x_w (actual value - internal set-point) = deviation alarm to internal set-point Note: Monitoring with the internal set-point W_{int} . For example using a ramp it is the target setpoint, not the changing set-point of the ramp. |
| | | | | | | 9 | Difference $x_1 - x_2$ (e.g. in combination with the process value function "Mean value", applicable for detecting aged thermocouples), difference between first and second process value. |
| | | | | | | 11 | Control deviation X_w (= relative alarm) with suppression during start-up and setpoint change. Limit value monitoring is continued as soon as the control deviation comes within the alarm limits again. |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--|---|
| L.3 | r/w | base | 2300 | 37368 | Float | -1999...9999 <input checked="" type="checkbox"/> | Lower limit value. The alarm is triggered if the value falls below the limit, and is reset with lower limit value plus hysteresis. |
| | | 1dP | 10492 | | | | |
| | | 2dP | 18684 | | | | |
| | | 3dP | 26876 | | | | |
| H.3 | r/w | base | 2301 | 37370 | Float | -1999...9999 <input checked="" type="checkbox"/> | Upper limit value. The alarm is triggered if the value rises above the limit, and is reset with upper lower limit value plus hysteresis. |
| | | 1dP | 10493 | | | | |
| | | 2dP | 18685 | | | | |
| | | 3dP | 26877 | | | | |
| HYS.3 | r/w | base | 2302 | 37372 | Float | 0...9999 <input type="checkbox"/> | Hysteresis of the limit value. Switching difference for upper and lower limit value. The limit value must change by this amount (rise above upper limit or fall below lower limit) before the limit value alarm is reset. |
| | | 1dP | 10494 | | | | |
| | | 2dP | 18686 | | | | |
| | | 3dP | 26878 | | | | |
| dEL.3 | r/w | base | 2303 | 37374 | Float | 0...9999 <input type="checkbox"/> | Delayed alarm of a limit value. The alarm is only triggered after the defined delay time. It is only indicated, and possibly stored, if it is still present after the delay time has elapsed. |
| | | 1dP | 10495 | | | | |
| | | 2dP | 18687 | | | | |
| | | 3dP | 26879 | | | | |

7 Lim3

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|------|----------------|---|
| St.Lim | r | base | 2370 | 37508 | Enum | Enum_LimStatus | Limit value status: No alarm present or stored. |
| | | 1dP | 10562 | | | | |
| | | 2dP | 18754 | | | | |
| | | 3dP | 26946 | | | | |
| | | | | | | 0 | no alarm |
| | | | | | | 1 | latched alarm |
| | | | | | | 2 | A limit value has been exceeded. |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|---|
| L_r | r/w | base | 1051 | 34870 | Enum | Enum_dInP1 | Local / remote switchover (Remote: Adjustment of all values via the front panel is blocked). |
| | | 1dP | 9243 | | | | |
| | | 2dP | 17435 | | | | |
| | | 3dP | 25627 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always active |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| SP.2 | r/w | base | 1052 | 34872 | Enum | Enum_dInP4 | Source of the control signal for activating the second (safety) setpoint (SP.2=) W2. Note: W2 is not restricted by the setpoint limits. |
| | | 1dP | 9244 | | | | |
| | | 2dP | 17436 | | | | |
| | | 3dP | 25628 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| SP.E | r/w | base | 1053 | 34874 | Enum | Enum_dInP1 | Switching between internal set-point an external setpoint SP.E. The external SP.E is either the absolute set-point Wext or the offset to the set-point (dependent on instrument and configuration). |
| | | 1dP | 9245 | | | | |
| | | 2dP | 17437 | | | | |
| | | 3dP | 25629 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always active |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| Y2 | r/w | base | 1054 | 34876 | Enum | Enum_dInP3 | Source of the control signal for activating the second positioning output Y2. Activated Y2 = positioner control. Caution: The parameter 'positioning output Y2' must not be confused with the controller output Y2! |
| | | 1dP | 9246 | | | | |
| | | 2dP | 17438 | | | | |
| | | 3dP | 25630 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |
| Y.E | r/w | base | 1055 | 34878 | Enum | Enum_dInP2 | Signal for activating the external output value. The internal output value Ypid is the controllers reaction on the process, with external output value Y.E the controller output is controlled. |
| | | 1dP | 9247 | | | | |
| | | 2dP | 17439 | | | | |
| | | 3dP | 25631 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always activated (manual station) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |
| mAn | r/w | base | 1056 | 34880 | Enum | Enum_dInP2 | Source of the control signal for auto/manual switchover. In the automatic mode, the controller is in charge. In the manual mode, the outputs can be varied independently of the process. |
| | | 1dP | 9248 | | | | |
| | | 2dP | 17440 | | | | |
| | | 3dP | 25632 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 1 | always activated (manual station) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |
| C.off | r/w | base | 1057 | 34882 | Enum | Enum_dInP3 | Source of the control signal for disabling all the controller outputs. Note: Forcing has priority, and remains active; alarm processing also remains active. |
| | | 1dP | 9249 | | | | |
| | | 2dP | 17441 | | | | |
| | | 3dP | 25633 | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|--|
| m.Loc | r/w | base | 1058 | 34884 | Enum | Enum_dlnP4 | Source of the control signal to disable the auto/manual key. If the A/M key is disabled, switchover to manual operation is not possible. |
| | | 1dP | 9250 | | | | |
| | | 2dP | 17442 | | | | |
| | | 3dP | 25634 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| Err.r | r/w | base | 1059 | 34886 | Enum | Enum_dlnP3 | Source of the control signal for resetting all stored entries in the error list (the list contains all error messages and alarms). If an alarm is still present, i.e. the source of trouble has not been remedied, stored alarms cannot be acknowledged (reset). |
| | | 1dP | 9251 | | | | |
| | | 2dP | 17443 | | | | |
| | | 3dP | 25635 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| | | | | | | 6 | Auto/manual key switches (A/M key) |
| Pid.2 | r/w | base | 1061 | 34890 | Enum | Enum_dlnP4 | Source of the control signal for switchover between the two parameter sets. The second parameter set is complete, and comprises Pb (= proportional band), ti (= integral action time), and td (= derivative action time) for heating and for cooling. All other control parameters, e.g. the switching duty cycles, are valid for both parameter sets. |
| | | 1dP | 9253 | | | | |
| | | 2dP | 17445 | | | | |
| | | 3dP | 25637 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |
| P.run | r/w | base | 1062 | 34892 | Enum | Enum_dlnP6 | Source of the control signal for switching the programmer between Run and Stop. On units with a simple programmer (only 1 program), a stop immediately causes a reset, followed by a new start. With units that have been defined as program controllers (several programs), the program is stopped, and then continued. |
| | | 1dP | 9254 | | | | |
| | | 2dP | 17446 | | | | |
| | | 3dP | 25638 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| P.oFF | r/w | base | 1063 | 34894 | Enum | Enum_dlnP5 | Source of the control signal for switching off the programmer (if the programmer is switched off, the internal setpoint becomes effective). |
| | | 1dP | 9255 | | | | |
| | | 2dP | 17447 | | | | |
| | | 3dP | 25639 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |

8 LOGI

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|------------|---|
| I.Chg | r/w | base | 1064 | 34896 | Enum | Enum_dInP4 | Signal source for switching the effective process value between the first process value X1 and second process value X2. |
| | | 1dP | 9256 | | | | |
| | | 2dP | 17448 | | | | |
| | | 3dP | 25640 | | | | |
| | | | | | | | |
| | | | | | | 0 | no function (switch-over via interface is possible) |
| | | | | | | 2 | Digital Input DI1 switches |
| | | | | | | 3 | DI2 switches (only visible with OPTION) |
| | | | | | | 4 | DI3 switches (only visible with OPTION) |
| | | | | | | 5 | F-key switches. |

| Name | r/w | base | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| di.Fn | r/w | base | 1050 | 34868 | Enum | Enum_diFn | Function of digital inputs (valid for all inputs) |
| | | 1dP | 9242 | | | | |
| | | 2dP | 17434 | | | | |
| | | 3dP | 25626 | | | | |
| | | | | | | | |
| | | | | | | 0 | Basic setting 'Off': A permanent positive signal switches this function 'On', which is connected to the digital input. Removal of the signal switches the function 'Off' again. |
| | | | | | | 1 | Basic setting 'On': A permanent positive signal switches this function 'Off', which is connected to the digital input. Removal of the signal switches the function 'On' again. |
| | | | | | | 2 | Push-button function. Basic setting 'Off'. Only positive signals are effective. The first positive signal switches 'On'. Removal of the signal is necessary before the next positive signal can switch 'Off'. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-----|-----------|-------------------------------------|---|
| St.Di | r | base | 1070 | 34908 | Int | 0...7 | <input checked="" type="checkbox"/> | Status of the digital inputs or of push-buttons (binary coded). |
| | | 1dP | 9262 | | | | | |
| | | 2dP | 17454 | | | | | |
| | | 3dP | 25646 | | | | | |
| | | | | | | | | |
| | | | | | | | Bit 0 Input 1 | |
| | | | | | | | Bit 1 Input 2 | |
| | | | | | | | Bit 2 Input 3 | |
| | | | | | | | Bit 8 Status of 'F' key | |
| | | | | | | | Bit 9 Status of 'A/M' key | |
| | | | | | | | Bit 10 Status of 'Sel' key | |
| | | | | | | | Bit 11 Status of 'Down' key | |
| | | | | | | | Bit 12 Status of 'Up' key | |
| | | | | | | | Bit 13 Status of 'Loc' key | |
| L-R | r/w | base | 1080 | 34928 | Int | 0...1 | <input type="checkbox"/> | Remote operation. Remote means that all values can only be adjusted via the interface. Adjustments via the front panel are blocked. |
| | | 1dP | 9272 | | | | | |
| | | 2dP | 17464 | | | | | |
| | | 3dP | 25656 | | | | | |
| | | | | | | | | |
| W_W2 | r/w | base | 1081 | 34930 | Int | 0...1 | <input type="checkbox"/> | Signal for activating the second (safety) setpoint (SP.2=) W2. Note: Setpoint W2 is not restricted by the setpoint limits! |
| | | 1dP | 9273 | | | | | |
| | | 2dP | 17465 | | | | | |
| | | 3dP | 25657 | | | | | |
| | | | | | | | | |

8 LOGI

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|---------|-----|---------------------------|--------------------------------|-------|-----|-----------|---|
| Wi_We | r/w | base 1dP 2dP 3dP | 1082 9274 17466 25658 | 34932 | Int | 0...1 | <input type="checkbox"/> Signal for activating the external setpoint value. SP.E is the external setpoint, or dependent on the device and configuration of the setpoint shift. |
| Y_Y2 | r/w | base 1dP 2dP 3dP | 1083 9275 17467 25659 | 34934 | Int | 0...1 | <input type="checkbox"/> Signal for activating the 2nd output value Y2. With selected Y2, the output is operated as a positioner. Caution: Do not confuse the parameter 'fixed output Y2' with the controller output Y2! |
| Y_Y.E | r/w | base 1dP 2dP 3dP | 1084 9276 17468 25660 | 34936 | Int | 0...1 | <input type="checkbox"/> Signal for activating the external positioning value. The controller is operated as positioner. |
| A-M | r/w | base 1dP 2dP 3dP | 1085 9277 17469 25661 | 34938 | Int | 0...1 | <input type="checkbox"/> Signal for activating manual operation. In the manual mode, the controller provides output signals independent of the process. |
| C.Off | r/w | base 1dP 2dP 3dP | 1086 9278 17470 25662 | 34940 | Int | 0...1 | <input type="checkbox"/> Signal for disabling all the controller outputs. Note: Forcing has priority; alarm processing remains active. |
| L.AM | r/w | base 1dP 2dP 3dP | 1087 9279 17471 25663 | 34942 | Int | 0...1 | <input type="checkbox"/> Signal for disabling manual operation. Triggers a forced switchover to automatic mode, and disables the front panel A/M key (also if other functions have been assigned to the key). |
| Err.r | r/w | base 1dP 2dP 3dP | 1088 9280 17472 25664 | 34944 | Int | 0...1 | <input type="checkbox"/> Signal for resetting the entire error list. The error list contains all errors that are reported, e.g. device faults and limit values. It also contains queued as well as stored errors after their correction. The reset acknowledges all errors, whereby queued errors will reappear after the next error detection (measurement). |
| SSR.Res | r/w | base 1dP 2dP 3dP | 1089 9281 17473 25665 | 34946 | Int | 0...1 | <input type="checkbox"/> Reset of the alarm triggered by a solid-state relay (SSR). SSRs are mostly used for frequent switching of heating elements, because they have no mechanical contacts that can wear out. However, an unnoticed short circuit could lead to overheating of the machine. |
| Set1.2 | r/w | base 1dP 2dP 3dP | 1091 9283 17475 25667 | 34950 | Int | 0...1 | <input type="checkbox"/> Switch-over of parameter set. The 2nd parameter set contains one complete set each of Pb (= proportional band), ti (= integral action time), and td (= derivative action time) for heating and for cooling. All other control parameters, such as switching duty cycles, are valid for both parameter sets. |
| Prg.R.S | r/w | base 1dP 2dP 3dP | 1092 9284 17476 25668 | 34952 | Int | 0...1 | <input type="checkbox"/> Signal for starting the programmer. On units with a simple programmer (only 1 program), a stop immediately causes a reset, followed by a new start. With units that have been defined as program controllers (several programs), the program is stopped, and then continued. |
| Prg.Res | r/w | base 1dP 2dP 3dP | 1093 9285 17477 25669 | 34954 | Int | 0...1 | <input type="checkbox"/> Programmer reset switches the programmer off, and sets it back to the starting condition. Reset stops the currently active program, and activates the internal setpoint. A newly selected program becomes the active program. |

8 LOGI

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-----|-----------|--|
| F.Di | r/w | base | 1094 | 34956 | Int | 0...7 | <input type="checkbox"/> Forcing of digital inputs. Forcing involves the external operation of at least one input. The instrument takes over this input value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 9286 | | | | |
| | | 2dP | 17478 | | | | |
| | | 3dP | 25670 | | | | |
| | | | | | | | Bit 0 Forcing of digital input 1 |
| | | | | | | | Bit 1 Forcing of digital input 2 |
| | | | | | | | Bit 2 Forcing of digital input 3 |
| | | | | | | | Bit 3 Forcing of digital input 4 |
| | | | | | | | Bit 4 Forcing of digital input 5 |
| I.Chg | r/w | base | 1095 | 34958 | Int | 0...1 | <input type="checkbox"/> Signal for switching the effective process value between the first process value X1 and second process value X2. |
| | | 1dP | 9287 | | | | |
| | | 2dP | 17479 | | | | |
| | | 3dP | 25671 | | | | |

9 ohnE

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|----------|-----|------|---------|-------|-------|----------------|--|
| CDis3 | r/w | base | 126 | 33020 | Enum | Enum_ContrDis3 | Display 3 of controller Operating Level (only visible with Engineering Tool), e.g. text only, value display or bargraph. If text only is selected, this is fixed in the display. With the other settings, entering a text causes the display to switch cyclically from one to the other. |
| | | 1dP | 8318 | | | | |
| | | 2dP | 16510 | | | | |
| | | 3dP | 24702 | | | | |
| | | | | | | | 0 No value / only a fixed text. |
| | | | | | | | 1 value display |
| | | | | | | | 2 Output value as a bargraph. |
| | | | | | | | 3 Control deviation as a bargraph. |
| | | | | | | | 4 Process value as a bargraph. |
| ContStdS | r/w | base | 120 | 33008 | Float | 1...9999999 | <input checked="" type="checkbox"/> This address consists of 2 float data transferred always together: 1st data defines the number of operating hours after reaching InF.1 will be set. 2nd data defines the number of duty cycles after reaching InF.2 will be set. |
| | | 1dP | 8312 | | | | |
| | | 2dP | 16504 | | | | |
| | | 3dP | 24696 | | | | |

9 ohnE

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|----------|-----|---------------------------|-------------------------------|-------|-------|--------------|---|
| DigForc | r/w | base 1dP 2dP 3dP | 121 8313 16505 24697 | 33010 | Int | 0...255 | <input checked="" type="checkbox"/> This address consists of 2 bytes, which can only be transmitted together: 1st datum defines which inputs are to be forced. Bit 0 = analog Input 1 Bit 1 = analog Input 2 Bit 2 = analog Input 3 Bit 3 = not used Bit 4 = digital Input 1 Bit 5 = digital Input 2 Bit 6 = digital Input 3 Bit 7 = not used 2nd datum defines which outputs are to be forced. Bit 0 = Output 1 Bit 1 = Output 2 Bit 2 = Output 3 Bit 3 = Output 4 Bit 4 = Output 5 Bit 5 = Output 6 |
| ErwBedie | r/w | base 1dP 2dP 3dP | 124 8316 16508 24700 | 33016 | Int | 0...8000 | <input type="checkbox"/> This address consists of 9 words. The words can only be transmitted together. The first 8 words describe the data to be displayed in the extended Operating Level. The 9th word defines the datum to be shown in the 2nd display value (instead of the setpoint). The basic address is to be entered as the value. |
| Lin | r/w | base 1dP 2dP 3dP | 139 8331 16523 24715 | 33046 | Float | -9999...9999 | <input checked="" type="checkbox"/> 16 float values for linearization table with 16 entries structure: input1, output1 input2, output2 ... Input values must be strictly monotonous rising. Starting from input3 a switching off value can be given. |
| LocBedie | r/w | base 1dP 2dP 3dP | 123 8315 16507 24699 | 33014 | Int | 0...255 | <input type="checkbox"/> This address consists of 2 resp. 3 bytes defining the release of operating levels. They can only be transferred together. byte 1 blocking of operating level standard device: byte 2 blocking of operating level programmer: byte 2 blocking of programmer level byte 3 blocking of operating level (content on request) |
| Pass | r/w | base 1dP 2dP 3dP | 125 8317 16509 24701 | 33018 | Int | 0...9999 | <input checked="" type="checkbox"/> Password. 4-digit number for the password-protected access to blocked operating functions such as e.g. the Calibrating Level. |
| PDis3 | r/w | base 1dP 2dP 3dP | 130 8322 16514 24706 | 33028 | Int | 0...5 | <input type="checkbox"/> Display 3 of the programmer Operating Level. Selection from a combination of important (time) counters for displaying the program status, e.g. segment number or remaining program time. |
| T.dis3 | r/w | base 1dP 2dP 3dP | 900 9092 17284 25476 | 34568 | Text | 0...255 | <input type="checkbox"/> This address contains 8 bytes for the text that is to appear in Display 3. No text: 1st byte 0x00. |

9 ohnE

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|----------|-----|---------------------------|-------------------------------|-------|------|---|---|
| T.Inf | r/w | base 1dP 2dP 3dP | 901 9093 17285 25477 | 34570 | Text | 0...255 <input type="checkbox"/> | This address contains 16 bytes. Bytes 1 – 8: user-defined text for message Inf.1 Bytes 9 – 16: user-defined text for message Inf.2 No text: 1st byte 0x00 |
| T.Prog | r/w | base 1dP 2dP 3dP | 902 9094 17286 25478 | 34572 | Text | 0...255 <input type="checkbox"/> | This address contains 128 bytes. These data contain the user-defined texts for the programs. Bytes 1 - 8 user-defined text for program 1 Bytes 9 - 16 user-defined text for program 2 Bytes 17 - 24 user-defined text for program 3 Bytes 25 - 32 user-defined text for program 4 Bytes 33 - 40 user-defined text for program 5 Bytes 41 - 48 user-defined text for program 6 Bytes 49 - 56 user-defined text for program 7 Bytes 57 - 64 user-defined text for program 8 Bytes 65 - 72 user-defined text for program 9 Bytes 73 - 80 user-defined text for program 10 Bytes 81 - 88 user-defined text for program 11 Bytes 89 - 96 user-defined text for program 12 Bytes 97 - 104 user-defined text for program 13 Bytes 105 - 112 user-defined text for program 14 Bytes 113 - 120 user-defined text for program 15 Bytes 121 - 128 user-defined text for program 16 |
| Tdis3 | r/w | base 1dP 2dP 3dP | 128 8320 16512 24704 | 33024 | Int | 2...60 <input type="checkbox"/> | Display cycle for Display 3 in seconds. If a value or a bargraph is shown in Display 3, an additional text can be selected. The text is displayed briefly after every cycle time instead of the value or bargraph. |
| ValuDis3 | r/w | base 1dP 2dP 3dP | 127 8319 16511 24703 | 33022 | Int | 0...8000 <input type="checkbox"/> | Address, which defines the display value in Display 3. |
| VisibelM | r/w | base 1dP 2dP 3dP | 903 9095 17287 25479 | 34574 | Int | 0...255 <input checked="" type="checkbox"/> | This address consists of 55 bytes, which define the visibility mask. They can be transferred only together. The mask defines the configurations and parameter represented in the operation (contents on request). |

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|---------------------------|-----------------------------|-------|-----|--------------------------------|--|
| Conf | r/w | base 1dP 2dP 3dP | 1 8193 16385 24577 | 32770 | Int | 0...2 <input type="checkbox"/> | Start/Stop and abortion of the configuration mode 0 = End of configuration 1 = Start of configuration 2 = Abort configuration |

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|---------------------|---|
| UPD | r/w | base | 95 | 32958 | Enum | Enum_Aenderungsflag | Status message indicating that parameter / configuration have been changed via the front panel. |
| | | 1dP | 8287 | | | | |
| | | 2dP | 16479 | | | | |
| | | 3dP | 24671 | | | | |
| | | | | | | 0 | No change via the front panel keys. |
| | | | | | | 1 | A change has been made via the front panel keys, which must be processed. |

| | | | | | | | | |
|----------|---|------|-------|-------|------|-----------|-------------------------------------|--|
| Hw.Opt | r | base | 200 | 33168 | Int | 0...65535 | <input checked="" type="checkbox"/> | |
| | | 1dP | 8392 | | | | | |
| | | 2dP | 16584 | | | | | |
| | | 3dP | 24776 | | | | | |
| Sw.Op | r | base | 201 | 33170 | Int | 0...255 | <input type="checkbox"/> | Software version XY Major and Minor Release (e.g. 21 = Version 2.1). The software version specifies the firmware in the unit. For the correct interaction of E-Tool and device, it must match the operating version (OpVersion) in the E-Tool. |
| | | 1dP | 8393 | | | | | |
| | | 2dP | 16585 | | | | | |
| | | 3dP | 24777 | | | | | |
| Bed.V | r | base | 202 | 33172 | Int | 0...255 | <input type="checkbox"/> | Operating version (numeric value). For the correct interaction of E-Tool and device, the software version and operating version must match. |
| | | 1dP | 8394 | | | | | |
| | | 2dP | 16586 | | | | | |
| | | 3dP | 24778 | | | | | |
| Unit | r | base | 203 | 33174 | Int | 0...255 | <input type="checkbox"/> | Identification of the device. |
| | | 1dP | 8395 | | | | | |
| | | 2dP | 16587 | | | | | |
| | | 3dP | 24779 | | | | | |
| S.Vers | r | base | 204 | 33176 | Int | 100...255 | <input type="checkbox"/> | The sub-version number is given as an additional index for precise definition of software version. |
| | | 1dP | 8396 | | | | | |
| | | 2dP | 16588 | | | | | |
| | | 3dP | 24780 | | | | | |
| Uident | r | base | 910 | 34588 | Text | ... | <input type="checkbox"/> | Device identification. Via this Modbus address, up to 14 data units (28 bytes) can be defined. Bytes 1 - 15 order number of the device Bytes 16 - 19 Ident number 1 Bytes 20 + 21 Ident number 2 Bytes 22 - 25 OEM number Bytes 26 - 28 Software order number |
| | | 1dP | 9102 | | | | | |
| | | 2dP | 17294 | | | | | |
| | | 3dP | 25486 | | | | | |
| IntUnitD | r | base | 911 | 34590 | Text | ... | <input type="checkbox"/> | Internal device data |
| | | 1dP | 9103 | | | | | |
| | | 2dP | 17295 | | | | | |
| | | 3dP | 25487 | | | | | |

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-----|-----------|---|
| St.Ala | r | base | 250 | 33268 | Int | 0...31 | <input type="checkbox"/> Alarm status: Bit-wise coded status of the individual alarms, e.g. exceeded limit value or Loop. |
| | | 1dP | 8442 | | | | |
| | | 2dP | 16634 | | | | |
| | | 3dP | 24826 | | | | |

Bit 0 Existing/stored exceeded limit 1
 Bit 1 Existing/stored exceeded limit 2
 Bit 2 Existing/stored exceeded limit 3
 Bit 3 Not used
 Bit 4 Existing/stored loop alarm
 Bit 5 Existing/stored heating current alarm
 Bit 6 Existing/stored SSR alarm
 Bit 7 Not used
 Bit 8 Existing exceeded limit 1
 Bit 9 Existing exceeded limit 2
 Bit 10 Existing exceeded limit 3
 Bit 11 Not used
 Bit 12 Existing loop alarm
 Bit 13 Existing heating current alarm
 Bit 14 Existing SSR alarm
 Bit 15 Not used

| | | | | | | | |
|--------|---|------|-------|-------|-----|--------|--|
| St.Do | r | base | 251 | 33270 | Int | 0...31 | <input type="checkbox"/> Status of the digital outputs Bit 0 digital output 1 Bit 1 digital output 2 Bit 2 digital output 3 Bit 3 digital output 4 Bit 4 digital output 5 Bit 5 digital output 6 |
| | | 1dP | 8443 | | | | |
| | | 2dP | 16635 | | | | |
| | | 3dP | 24827 | | | | |
| St.Ain | r | base | 252 | 33272 | Int | 0...7 | <input type="checkbox"/> Bit-coded status of the analog input (fault, e.g. short circuit) |
| | | 1dP | 8444 | | | | |
| | | 2dP | 16636 | | | | |
| | | 3dP | 24828 | | | | |

Bit 0 Break at Input 1
 Bit 1 Reversed polarity at Input 1
 Bit 2 Short circuit at Input 1
 Bit 3 Not used
 Bit 4 Break at Input 2
 Bit 5 Reversed polarity at Input 2
 Bit 6 Short-circuit at Input 2
 Bit 7 Not used
 Bit 8 Break at Input 3 (only KS 90)
 Bit 9 Reversed polarity at Input 3 (only KS 90)
 Bit 10 Short-circuit at Input 3 (only KS 90)
 Bit 11 Not used

9 ohnE

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-----|-----------|--|
| St.Di | r | base | 253 | 33274 | Int | 0...7 | <input type="checkbox"/> Status of the digital inputs or of push-buttons (binary coded). |
| | | 1dP | 8445 | | | | |
| | | 2dP | 16637 | | | | |
| | | 3dP | 24829 | | | | |
| | | | | | | | Bit 0 Input 1 Bit 1 Input 2 Bit 2 Input 3 Bit 8 Status of 'F' key Bit 9 Status of 'A/M' key Bit 10 Status of 'Sel' key Bit 11 Status of 'Down' key Bit 12 Status of 'Up' key Bit 13 Status of 'Loc' key |
| F.Di | r/w | base | 303 | 33374 | Int | 0...1 | <input type="checkbox"/> Forcing of digital inputs. Forcing involves the external operation of at least one input. The instrument takes over this input value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8495 | | | | |
| | | 2dP | 16687 | | | | |
| | | 3dP | 24879 | | | | |
| | | | | | | | Bit 0 Forcing of digital input 1 Bit 1 Forcing of digital input 2 Bit 2 Forcing of digital input 3 Bit 3 Forcing of digital input 4 Bit 4 Forcing of digital input 5 |
| F.Do | r/w | base | 304 | 33376 | Int | 0...15 | <input type="checkbox"/> Forcing of digital outputs. Forcing involves the external operation of at least one output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 8496 | | | | |
| | | 2dP | 16688 | | | | |
| | | 3dP | 24880 | | | | |

10 ohnE1

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|--|
| In.1 | r | base | 232 | 33232 | Float | -1999...9999 | <input type="checkbox"/> Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8424 | | | | |
| | | 2dP | 16616 | | | | |
| | | 3dP | 24808 | | | | |
| In.1r | r | base | 240 | 33248 | Float | -1999...9999 | <input type="checkbox"/> Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8432 | | | | |
| | | 2dP | 16624 | | | | |
| | | 3dP | 24816 | | | | |
| F.Inp | r/w | base | 300 | 33368 | Float | -1999...9999 | <input type="checkbox"/> Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8492 | | | | |
| | | 2dP | 16684 | | | | |
| | | 3dP | 24876 | | | | |

11 ohnE2

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| In.2 | r | base | 233 | 33234 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8425 | | | | | |
| | | 2dP | 16617 | | | | | |
| | | 3dP | 24809 | | | | | |
| In.2r | r | base | 241 | 33250 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8433 | | | | | |
| | | 2dP | 16625 | | | | | |
| | | 3dP | 24817 | | | | | |
| F.Inp | r/w | base | 301 | 33370 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8493 | | | | | |
| | | 2dP | 16685 | | | | | |
| | | 3dP | 24877 | | | | | |

12 ohnE3

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| In.3 | r | base | 234 | 33236 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value after the measurement value correction (e.g. with offset or 2-point correction, and scaling). |
| | | 1dP | 8426 | | | | | |
| | | 2dP | 16618 | | | | | |
| | | 3dP | 24810 | | | | | |
| In.3r | r | base | 242 | 33252 | Float | -1999...9999 | <input type="checkbox"/> | Measurement value before the measurement value correction (unprocessed). |
| | | 1dP | 8434 | | | | | |
| | | 2dP | 16626 | | | | | |
| | | 3dP | 24818 | | | | | |
| F.Inp | r/w | base | 302 | 33372 | Float | -1999...9999 | <input type="checkbox"/> | Forcing the value for an analog input INP. Forcing involves the external operation of an input. The instrument takes over the value at this input like a measurement value (preset value for inputs from a superordinate system, e.g. for a function test.) |
| | | 1dP | 8494 | | | | | |
| | | 2dP | 16686 | | | | | |
| | | 3dP | 24878 | | | | | |
| F.Out1 | r/w | base | 305 | 33378 | Float | 0...120 | <input type="checkbox"/> | Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 8497 | | | | | |
| | | 2dP | 16689 | | | | | |
| | | 3dP | 24881 | | | | | |

13 ohnE4

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--------|-----|------|---------|-------|-------|-----------|--------------------------|--|
| F.Out2 | r/w | base | 306 | 33380 | Float | 0...120 | <input type="checkbox"/> | Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 8498 | | | | | |
| | | 2dP | 16690 | | | | | |
| | | 3dP | 24882 | | | | | |

14 othr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|------|--------------------|---|---|
| bAud | r/w | base | 180 | 33128 | Enum | Enum_Baud | Bit rate of the interface (only visible with OPTION). The bit rate determines the transmission speed. | |
| | | 1dP | 8372 | | | | | |
| | | 2dP | 16564 | | | | | |
| | | 3dP | 24756 | | | | | |
| | | | | | | | | |
| | | | | | | 0 | 2400 Baud | |
| | | | | | | | 1 | 4800 Baud |
| | | | | | | | 2 | 9600 Baud |
| | | | | | | | 3 | 19200 Baud |
| Addr | r/w | base | 181 | 33130 | Int | 1...247 | <input type="checkbox"/> Address on the interface (only visible with OPTION) | |
| | | 1dP | 8373 | | | | | |
| | | 2dP | 16565 | | | | | |
| | | 3dP | 24757 | | | | | |
| | | | | | | | | |
| PrtY | r/w | base | 182 | 33132 | Enum | Enum_Parity | Parity of data on the interface (only visible with OPTION). Simple possibility of checking that transferred data is correct. | |
| | | 1dP | 8374 | | | | | |
| | | 2dP | 16566 | | | | | |
| | | 3dP | 24758 | | | | | |
| | | | | | | | | |
| | | | | | | | 0 | No parity, with 2 stop bits. |
| | | | | | | | 1 | even parity |
| | | | | | | | 2 | odd parity |
| | | | | | | | 3 | no parity (1 stop bit) |
| dELY | r/w | base | 183 | 33134 | Int | 0...200 | <input type="checkbox"/> Response delay [ms] (only visible with OPTION). Additional delay time before the received message may be answered on the Modbus. (Might be necessary, if the same line is used for transmit/receive.) | |
| | | 1dP | 8375 | | | | | |
| | | 2dP | 16567 | | | | | |
| | | 3dP | 24759 | | | | | |
| | | | | | | | | |
| dp.Ad | r/w | base | 195 | 33158 | Int | 0...126 | <input type="checkbox"/> Address of the device on the PROFIBUS. The address identifies the device clearly. | |
| | | 1dP | 8387 | | | | | |
| | | 2dP | 16579 | | | | | |
| | | 3dP | 24771 | | | | | |
| | | | | | | | | |
| bc.uP | r/w | base | 196 | 33160 | Enum | Enum_BackupControl | behaviour as backup controller. The control function is done by the master. The instrument provides the display, reads the measured values and outputs the correcting variable. If bus communication (or the master) fails, the controller changes to normal operation. | |
| | | 1dP | 8388 | | | | | |
| | | 2dP | 16580 | | | | | |
| | | 3dP | 24772 | | | | | |
| | | | | | | | | |
| | | | | | | | 0 | The backup function is not active. |
| | | | | | | | 1 | With backup function. Operates in the positioner mode as long as bus communication is functional. If bus communication (or the master) fails, the controller changes to normal operation. |
| Unit | r/w | base | 170 | 33108 | Enum | Enum_Unit | Physical unit (temperature), f.e. °C | |
| | | 1dP | 8362 | | | | | |
| | | 2dP | 16554 | | | | | |
| | | 3dP | 24746 | | | | | |
| | | | | | | | | |
| | | | | | | | 0 | without unit |
| | | | | | | | 1 | °C |
| | | | | | | | 2 | °F |

14 othr

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|--|
| dP | r/w | base | 171 | 33110 | Enum | Enum_dP | Decimal point (max. no of decimals). Format of the measured value display. |
| | | 1dP | 8363 | | | | |
| | | 2dP | 16555 | | | | |
| | | 3dP | 24747 | | | | |
| | | | | | | 0 | no digit behind the decimal point |
| | | | | | | 1 | Display has one decimal. |
| | | | | | | 2 | Display has two decimals. |
| | | | | | | 3 | Display has three decimals. |

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|--|
| LEd | r/w | base | 190 | 33148 | Enum | Enum_Led | Meaning of the signalling LEDs. Selection of a combination of the displayable signals. |
| | | 1dP | 8382 | | | | |
| | | 2dP | 16574 | | | | |
| | | 3dP | 24766 | | | | |
| | | | | | | 10 | The digital outputs OUT1, OUT2, OUT3, and OUT4 are displayed. |
| | | | | | | 11 | Display of controller output y1 (heating / open), alarm1, alarm2, alarm3 |
| | | | | | | 12 | Display of controller output y1 (heating / open), controller output y2 (cooling / close), alarm1, alarm2 |
| | | | | | | 13 | Display of controller output y2 (cooling / close), controller output y1 (heating / open), alarm1, alarm2 |
| | | | | | | 20 | Display of controller output y1 (heating / open), controller output y2 (cooling / close), and the programmer outputs Track, Track2. |
| | | | | | | 21 | Display of controller output y2 (cooling / close), controller output y1 (heating / open), and the programmer outputs Track1, Track2. |
| | | | | | | 22 | Display of the programmer outputs Track1, Track2, Track3, and Track4. |

| | | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|--------------------------|--|
| dISP | r/w | base | 172 | 33112 | Int | 0...10 | <input type="checkbox"/> | Brightness of the display. |
| | | 1dP | 8364 | | | | | |
| | | 2dP | 16556 | | | | | |
| | | 3dP | 24748 | | | | | |
| C.dEL | r/w | base | 184 | 33136 | Int | 0...200 | <input type="checkbox"/> | For both interfaces, Modbus only. Additional acceptable delay time between 2 received bytes, before "end of message" is assumed. This time is needed if data is not transmitted continuously by the modem. |
| | | 1dP | 8376 | | | | | |
| | | 2dP | 16568 | | | | | |
| | | 3dP | 24760 | | | | | |
| FrEq | r/w | base | 150 | 33068 | Enum | Enum_FrEq | | Switchover of the applied mains frequency 50 / 60 Hz, thereby better adaptation of the input filter for hum suppression. |
| | | 1dP | 8342 | | | | | |
| | | 2dP | 16534 | | | | | |
| | | 3dP | 24726 | | | | | |
| | | | | | | 0 | | Mains frequency is 50 Hz. |
| | | | | | | 1 | | Mains frequency is 60 Hz. |

| | | | | | | | | |
|------|-----|------|-------|-------|------|-----------|--|---|
| MASt | r/w | base | 185 | 33138 | Enum | Enum_MASt | | Device works as Modbus master. The communication is executed according to the master/slave principle, whereby the device can be operated as master or as slave. Operation as master must be configured here. |
| | | 1dP | 8377 | | | | | |
| | | 2dP | 16569 | | | | | |
| | | 3dP | 24761 | | | | | |
| | | | | | | 0 | | No, the unit is operated as a Modbus slave. |
| | | | | | | 1 | | Yes, the unit is operated as a Modbus master. |

14 othr

• ConF

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description | |
|-------|-----|---------------------------|-------------------------------|-------|-----------|------------------------------------|--|
| Cycl | r/w | base 1dP 2dP 3dP | 186 8378 16570 24762 | 33140 | Int | 0...200 <input type="checkbox"/> | Cycle time (in seconds) during which the Modbus master transmits its message on the bus. |
| AdrO | r/w | base 1dP 2dP 3dP | 187 8379 16571 24763 | 33142 | Int | 1...65535 <input type="checkbox"/> | Target address to which the data specified with AdrU are output on the bus. |
| AdrU | r/w | base 1dP 2dP 3dP | 188 8380 16572 24764 | 33144 | Int | 1...65535 <input type="checkbox"/> | Modbus address of the data output on the bus by the Modbus master. |
| Numb | r/w | base 1dP 2dP 3dP | 189 8381 16573 24765 | 33146 | Int | 0...100 <input type="checkbox"/> | Quantity of data that are to be transmitted from the Modbus master. |
| dp.ra | r/w | base 1dP 2dP 3dP | 197 8389 16581 24773 | 33162 | Int | 0...8191 <input type="checkbox"/> | Addresses of the data that are to be read out of the device via the PROFIBUS (57 values). |
| dp.wr | r/w | base 1dP 2dP 3dP | 198 8390 16582 24774 | 33164 | Int | 0...8191 <input type="checkbox"/> | Addresses of the data that are to be written into the device via the PROFIBUS (57 values). |

• Signal

| Name | r/w | Adr. Integer | real | Typ | Value/off | Description | |
|------|-----|---------------------------|-------------------------------|-------|-----------|-------------|---|
| E.1 | r/w | base 1dP 2dP 3dP | 210 8402 16594 24786 | 33188 | Enum | Defect | Err 1 (internal error) Contact Service. |
| | | | | | | 0 | No fault exists (Reset). |
| | | | | | | 2 | The device is defective. |
| E.2 | r/w | base 1dP 2dP 3dP | 211 8403 16595 24787 | 33190 | Enum | Problem | Err 2 (internal error, resettable) (As a process value via fieldbus interface not writable!) |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A fault has occurred and has been stored. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|--|--|---------|-------|------|-----------|---|
| FbF.1 | r/w | base | 212 | 33192 | Enum | Break | Sensor break at input INP1. Typical causes and suggested remedies: Sensor fault: replace INP1 sensor. Wiring fault: check connections of INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8404 | | | | |
| | | 2dP | 16596 | | | | |
| | | 3dP | 24788 | | | | |
| 0 | No fault, | resetting of the sensor break alarm possible (Reset). | | | | | |
| 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. | | | | | | |
| 2 | Sensor break: The sensor is defective or there is a wiring fault. | | | | | | |
| Sht.1 | r/w | base | 213 | 33194 | Enum | Short | Short circuit at input INP1. Typical causes and suggested remedies: Sensor fault: replace INP1 sensor. Wiring fault: check connections of INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8405 | | | | |
| | | 2dP | 16597 | | | | |
| | | 3dP | 24789 | | | | |
| 0 | No fault, | resetting of the short-circuit alarm possible (Reset). | | | | | |
| 1 | A short-circuit fault has occurred and has been stored. | | | | | | |
| 2 | A short-circuit fault has occurred. | | | | | | |
| POL.1 | r/w | base | 214 | 33196 | Enum | Polarity | Incorrect polarity at input INP1. Suggested remedy: reverse the polarity at INP1. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8406 | | | | |
| | | 2dP | 16598 | | | | |
| | | 3dP | 24790 | | | | |
| 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). | | | | | | |
| 1 | An incorrect polarity fault has occurred and has been stored. | | | | | | |
| 2 | Incorrect polarity. The wiring of the input circuit is not correct. | | | | | | |
| FbF.2 | r/w | base | 215 | 33198 | Enum | Break | Sensor break at input INP2. Typical causes and suggested remedies: Sensor fault: replace INP2 sensor. Wiring fault: check connections of INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8407 | | | | |
| | | 2dP | 16599 | | | | |
| | | 3dP | 24791 | | | | |
| 0 | No fault, | resetting of the sensor break alarm possible (Reset). | | | | | |
| 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. | | | | | | |
| 2 | Sensor break: The sensor is defective or there is a wiring fault. | | | | | | |
| Sht.2 | r/w | base | 216 | 33200 | Enum | Short | Short circuit at input INP2. Typical causes and suggested remedies: Sensor fault: replace INP2 sensor. Wiring fault: check connections of INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8408 | | | | |
| | | 2dP | 16600 | | | | |
| | | 3dP | 24792 | | | | |
| 0 | No fault, | resetting of the short-circuit alarm possible (Reset). | | | | | |
| 1 | A short-circuit fault has occurred and has been stored. | | | | | | |
| 2 | A short-circuit fault has occurred. | | | | | | |
| POL.2 | r/w | base | 217 | 33202 | Enum | Polarity | Incorrect polarity at input INP2. Suggested remedy: reverse the polarity at INP2. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8409 | | | | |
| | | 2dP | 16601 | | | | |
| | | 3dP | 24793 | | | | |
| 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). | | | | | | |
| 1 | An incorrect polarity fault has occurred and has been stored. | | | | | | |
| 2 | Incorrect polarity. The wiring of the input circuit is not correct. | | | | | | |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|--|------|---------|-------|------|-----------|---|
| HCA | r/w | base | 218 | 33204 | Enum | HeatCurr | Heating current alarm. Possible faults are an open heating current circuit with current $I <$ heating current limit, or current $I >$ heating current limit (depending on configuration), or defective heater band. Suggested remedy: check heating current circuit, replace heater band if necessary. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8410 | | | | |
| | | 2dP | 16602 | | | | |
| | | 3dP | 24794 | | | | |
| | | | | | | | |
| 0 | No fault, resetting of the heating current alarm possible (Reset). | | | | | | |
| 1 | A heating current fault has occurred and has been stored. | | | | | | |
| SSr | r/w | base | 219 | 33206 | Enum | Short | Alarm message: SSr Possible causes: a current flow in the heating circuit although controller is 'off', or the SSR is defective. Suggested remedy: check heating current circuit, replace the solid-state relay, if necessary. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8411 | | | | |
| | | 2dP | 16603 | | | | |
| | | 3dP | 24795 | | | | |
| | | | | | | | |
| 0 | No fault, resetting of the short-circuit alarm possible (Reset). | | | | | | |
| 1 | A short-circuit fault has occurred and has been stored. | | | | | | |
| 2 | A short-circuit fault has occurred. | | | | | | |
| Loop | r/w | base | 220 | 33208 | Enum | LoopAlarm | Alarm message: Loop Possible causes: faulty or incorrectly connected input circuit, or output not connected correctly. Suggested remedy: check heating or cooling circuit, check sensor function and replace if necessary, check controller and output switching actuator. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8412 | | | | |
| | | 2dP | 16604 | | | | |
| | | 3dP | 24796 | | | | |
| | | | | | | | |
| 0 | No fault, resetting of the loop alarm possible (Reset). | | | | | | |
| 1 | A control loop fault has occurred and has been stored. | | | | | | |
| 2 | A control loop fault has occurred, there was no clear process response following a step change of the output. | | | | | | |
| AdA.H | r/w | base | 221 | 33210 | Enum | Tune | Error message from "heating" self-tuning and reason for aborted tuning attempt. Hints for trouble-shooting: Check operating sense of actuator. Is the loop closed? Is there an output limit? Adapt the setpoint. Increase step output for Yopt. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8413 | | | | |
| | | 2dP | 16605 | | | | |
| | | 3dP | 24797 | | | | |
| | | | | | | | |
| 0 | no error | | | | | | |
| 3 | Process responds in the wrong direction. Possible remedy: Check the output signal sense (inverse <-> direct), and re-configure the controller if necessary (inverse <-> direct). | | | | | | |
| 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. | | | | | | |
| 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). | | | | | | |
| 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. Possible remedy: Repeat the attempt with an increased setpoint reserve. | | | | | | |
| 7 | The step output change is not large enough (minimum change $> 5\%$). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). | | | | | | |
| 8 | Setpoint reserve must be given before generating the step output change. Possible remedy: decrease set-point range, change set-point, or change process value. | | | | | | |
| 9 | The pulse response attempt has failed. No useful parameters were determined. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. | | | | | | |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| AdA.C | r/w | base | 222 | 33212 | Enum | Tune | Error message from "cooling" self-tuning and reason for aborted tuning attempt. Hints for trouble-shooting: Check operating sense of actuator. Is the loop closed? Is there an output limit? Adapt the setpoint. Increase step output for Yopt. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8414 | | | | |
| | | 2dP | 16606 | | | | |
| | | 3dP | 24798 | | | | |

| | |
|---|---|
| 0 | no error |
| 3 | Process responds in the wrong direction. Possible remedy: Check the output signal sense (inverse <-> direct), and re-configure the controller if necessary (inverse <-> direct). |
| 4 | No response from the process. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |
| 5 | The process value turning point of the step response is too low. Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 6 | Self-tuning was aborted due to the risk of an exceeded setpoint. Possible remedy: Repeat the attempt with an increased setpoint reserve. |
| 7 | The step output change is not large enough (minimum change > 5 %). Possible remedy: Increase the permitted step output range, i.e. increase the parameter Y.Hi ('heating') or reduce the parameter Y.Lo ('cooling'). |
| 8 | Setpoint reserve must be given before generating the step output change. Possible remedy: decrease set-point range, change set-point, or change process value. |
| 9 | The pulse response attempt has failed. No useful parameters were determined. Perhaps the control loop is open. Possible remedy: Check sensor, connections, and process. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.1 | r/w | base | 223 | 33214 | Enum | Limit | Limit value 1 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8415 | | | | |
| | | 2dP | 16607 | | | | |
| | | 3dP | 24799 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.2 | r/w | base | 224 | 33216 | Enum | Limit | Limit value 2 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8416 | | | | |
| | | 2dP | 16608 | | | | |
| | | 3dP | 24800 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------|---|
| Lim.3 | r/w | base | 225 | 33218 | Enum | Limit | Limit value 3 exceeded. Hint for trouble-shooting: check the process. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8417 | | | | |
| | | 2dP | 16609 | | | | |
| | | 3dP | 24801 | | | | |

| | |
|---|---|
| 0 | No fault, resetting of the limit value alarm possible (Reset). |
| 1 | The limit value has been exceeded, and the fault has been stored. |
| 2 | The limit value has been exceeded; the monitored (measurement) value is outside the set limits. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| InF.1 | r/w | base | 226 | 33220 | Enum | Time | Message from the operating hours counter that the preset no. of hours for this maintenance period has been reached. The op-hours counter for the maintenance period is reset when this message is acknowledged. Counting the operating hours is used for preventive maintenance. - Acknowledge the error to reset it. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8418 | | | | |
| | | 2dP | 16610 | | | | |
| | | 3dP | 24802 | | | | |
| | | | | | | 0 | No signal, resetting of the time limit signal possible (Reset). |
| | | | | | | 1 | Operating hours - limit value (maintenance period) reached: please acknowledge. |
| InF.2 | r/w | base | 227 | 33222 | Enum | Switch | Message from the switching cycle counter that the preset no. of switch cycles for this maintenance period has been reached. The cycle counter for the maintenance period is reset when this message is acknowledged. Counting the switching cycles is used for preventive maintenance. - Acknowledge the error to reset it. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8419 | | | | |
| | | 2dP | 16611 | | | | |
| | | 3dP | 24803 | | | | |
| | | | | | | 0 | No error message, resetting of the switching cycle counter possible (Reset). |
| | | | | | | 1 | Set limit of the switching cycle counter (maintenance period) has been reached: please acknowledge. |
| E.4 | r/w | base | 228 | 33224 | Enum | Problem | Hardware fault.Cause: Code number and hardware are not identical. Remedy: Contact Service. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8420 | | | | |
| | | 2dP | 16612 | | | | |
| | | 3dP | 24804 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A fault has occurred and has been stored. |
| FbF.3 | r/w | base | 400 | 33568 | Enum | Break3 | Sensor break at input INP3. Typical causes and suggested remedies: Sensor fault: replace INP3 sensor. Wiring fault: check connections of INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8592 | | | | |
| | | 2dP | 16784 | | | | |
| | | 3dP | 24976 | | | | |
| | | | | | | 0 | No fault, resetting of the sensor break alarm possible (Reset). |
| | | | | | | 1 | The sensor fault alarm has been triggered and stored; the fault is no longer present. The operator must acknowledge the error message in order to delete it from the error list. |
| | | | | | | 2 | Sensor break: The sensor is defective or there is a wiring fault. |
| Sht.3 | r/w | base | 401 | 33570 | Enum | Short3 | Short circuit at input INP3. Typical causes and suggested remedies: Sensor fault: replace INP3 sensor. Wiring fault: check connections of INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8593 | | | | |
| | | 2dP | 16785 | | | | |
| | | 3dP | 24977 | | | | |
| | | | | | | 0 | No fault, resetting of the short-circuit alarm possible (Reset). |
| | | | | | | 1 | A short-circuit fault has occurred and has been stored. |
| | | | | | | 2 | A short-circuit fault has occurred. |
| POL.3 | r/w | base | 402 | 33572 | Enum | Polarity3 | Incorrect polarity at input INP3. Suggested remedy: reverse the polarity at INP3. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8594 | | | | |
| | | 2dP | 16786 | | | | |
| | | 3dP | 24978 | | | | |
| | | | | | | 0 | No fault, resetting of the incorrect polarity alarm possible (Reset). |
| | | | | | | 1 | An incorrect polarity fault has occurred and has been stored. |
| | | | | | | 2 | Incorrect polarity. The wiring of the input circuit is not correct. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|---------------|---|
| E.3 | r/w | base | 403 | 33574 | Enum | ConfErr | configuration fault. Typical causes and suggested remedies: Missing or faulty configuration: check interactions in the configuration and parameter settings. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8595 | | | | |
| | | 2dP | 16787 | | | | |
| | | 3dP | 24979 | | | | |
| | | | | | | 0 | No configuration error |
| | | | | | | 2 | There is a configuration error. The configuration is missing or wrong, or it does not match the parameter settings. |
| dAc | r/w | base | 404 | 33576 | Enum | Enum_DacAlarm | DAC alarm, possibly with cause. On all controllers with position feedback Yp, the actuator can be monitored for incorrect operation, e.g. defective motor or excessive play due to wear. In all cases, the controller changes into manual operation and switches the outputs off. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8596 | | | | |
| | | 2dP | 16788 | | | | |
| | | 3dP | 24980 | | | | |
| | | | | | | 0 | no error |
| | | | | | | 3 | Output is blocked - check the drive for blockage After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 4 | Wrong method of operation - rong phasing, defect motor capacitor After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 5 | Fail at Yp measurement - check the connection to the Yp input After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| | | | | | | 6 | Calibration error - manual calibration necessary After solving the technical problem the DAC error can be acknowledged in the error list. Thereafter the controller works again in normal operation mode. |
| E.5 | r/w | base | 410 | 33588 | Enum | E5 | PROFIBUS fault. Problem (1): The fault occurrence has been stored. The fault is no longer present, but has not yet been acknowledged. Defect (2): The PROFIBUS communication is faulty. Please contact Service. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8602 | | | | |
| | | 2dP | 16794 | | | | |
| | | 3dP | 24986 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 1 | A Profibus error has occurred and has been stored. |
| | | | | | | 2 | Please contact Service. |
| dP.1 | r/w | base | 411 | 33590 | Enum | Problem_dp | PROFIBUS access fault. Possible causes: bus fault, connector problem or no connection to bus. Possible remedies: Check bus cable, check connector & leads. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8603 | | | | |
| | | 2dP | 16795 | | | | |
| | | 3dP | 24987 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |
| dP.2 | r/w | base | 412 | 33592 | Enum | Problem_dp | PROFIBUS configuration fault. Possible cause: incorrectly configured DP telegram. Suggested remedy: check DP telegram configuration in the master. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8604 | | | | |
| | | 2dP | 16796 | | | | |
| | | 3dP | 24988 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |

14 othr

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|------------|--|
| dP.3 | r/w | base | 413 | 33594 | Enum | Problem_dp | PROFIBUS parameter fault. Possible cause: incorrect parameters in DP telegram. Suggested remedy: check DP telegram parameters in the master (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8605 | | | | |
| | | 2dP | 16797 | | | | |
| | | 3dP | 24989 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |
| dP.4 | r/w | base | 414 | 33596 | Enum | Problem_dp | PROFIBUS data exchange fault. No exchange of user data. Possible causes: bus fault, address fault, master stopped. Suggested remedy: check cable connections, check address, check master setting. (As a process value via fieldbus interface not writable!) |
| | | 1dP | 8606 | | | | |
| | | 2dP | 16798 | | | | |
| | | 3dP | 24990 | | | | |
| | | | | | | 0 | No fault, resetting possible (Reset). |
| | | | | | | 2 | A Profibus fault has occurred, there is no communication. |

15 Out.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Act | r/w | base | 4150 | 41068 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12342 | | | | |
| | | 2dP | 20534 | | | | |
| | | 3dP | 28726 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4151 | 41070 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12343 | | | | |
| | | 2dP | 20535 | | | | |
| | | 3dP | 28727 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4152 | 41072 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12344 | | | | |
| | | 2dP | 20536 | | | | |
| | | 3dP | 28728 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4153 | 41074 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12345 | | | | |
| | | 2dP | 20537 | | | | |
| | | 3dP | 28729 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 1. |

15 Out. 1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|--|------|---------------|---|
| Lim.2 | r/w | base | 4154 | 41076 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12346 | | | | |
| | | 2dP | 20538 | | | | |
| | | 3dP | 28730 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output is activated by an alarm from limit value 2. | | | |
| Lim.3 | r/w | base | 4155 | 41078 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12347 | | | | |
| | | 2dP | 20539 | | | | |
| | | 3dP | 28731 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output is activated by an alarm from limit value 3. | | | |
| LP.AL | r/w | base | 4157 | 41082 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12349 | | | | |
| | | 2dP | 20541 | | | | |
| | | 3dP | 28733 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The loop alarm (= open loop alarm) is assigned to this output. | | | |
| HC.AL | r/w | base | 4158 | 41084 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12350 | | | | |
| | | 2dP | 20542 | | | | |
| | | 3dP | 28734 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The heating current alarm is assigned to this output. | | | |
| HC.SC | r/w | base | 4159 | 41086 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12351 | | | | |
| | | 2dP | 20543 | | | | |
| | | 3dP | 28735 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | Output activated by an SSR fault. | | | |
| P.End | r/w | base | 4161 | 41090 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12353 | | | | |
| | | 2dP | 20545 | | | | |
| | | 3dP | 28737 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | This output is activated by the message 'Program end'. | | | |
| FAi.1 | r/w | base | 4162 | 41092 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12354 | | | | |
| | | 2dP | 20546 | | | | |
| | | 3dP | 28738 | | | | |
| | | | | | | | |
| | | | 0 | not active | | | |
| | | | 1 | The output sends the error message 'INP1 fault'. | | | |

15 Out. 1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--|-----|------|---------|-------|------|-----------|---|
| FAi.2 | r/w | base | 4163 | 41094 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12355 | | | | |
| | | 2dP | 20547 | | | | |
| | | 3dP | 28739 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP2 fault'. | | | | | | | |
| FAi.3 | r/w | base | 4164 | 41096 | Enum | Enum_FAI3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12356 | | | | |
| | | 2dP | 20548 | | | | |
| | | 3dP | 28740 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP3 fault'. | | | | | | | |
| PrG.1 | r/w | base | 4165 | 41098 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12357 | | | | |
| | | 2dP | 20549 | | | | |
| | | 3dP | 28741 | | | | |
| 0 not active | | | | | | | |
| 1 Control output 1 is assigned to this output. | | | | | | | |
| PrG.2 | r/w | base | 4166 | 41100 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12358 | | | | |
| | | 2dP | 20550 | | | | |
| | | 3dP | 28742 | | | | |
| 0 not active | | | | | | | |
| 1 Control output 2 is assigned to this output. | | | | | | | |
| PrG.3 | r/w | base | 4167 | 41102 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12359 | | | | |
| | | 2dP | 20551 | | | | |
| | | 3dP | 28743 | | | | |
| 0 not active | | | | | | | |
| 1 Control output 3 is assigned to this output. | | | | | | | |
| PrG.4 | r/w | base | 4168 | 41104 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12360 | | | | |
| | | 2dP | 20552 | | | | |
| | | 3dP | 28744 | | | | |
| 0 not active | | | | | | | |
| 1 Control output 4 is assigned to this output. | | | | | | | |
| CALL | r/w | base | 4169 | 41106 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12361 | | | | |
| | | 2dP | 20553 | | | | |
| | | 3dP | 28745 | | | | |
| 0 not active | | | | | | | |
| 1 The output is switched by an operator call. | | | | | | | |

15 Out.1

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-------------|---|
| dP.Er | r/w | base | 4175 | 41118 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12367 | | | | |
| | | 2dP | 20559 | | | | |
| | | 3dP | 28751 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out1 | r | base | 4180 | 41128 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12372 | | | | |
| | | 2dP | 20564 | | | | |
| | | 3dP | 28756 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

| | | | | | | | |
|-------|-----|------|-------|-------|------|--------------|---|
| F.Do1 | r/w | base | 4181 | 41130 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12373 | | | | |
| | | 2dP | 20565 | | | | |
| | | 3dP | 28757 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Act | r/w | base | 4250 | 41268 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12442 | | | | |
| | | 2dP | 20634 | | | | |
| | | 3dP | 28826 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |

| | | | | | | | |
|-----|-----|------|-------|-------|------|---------|--|
| Y.1 | r/w | base | 4251 | 41270 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12443 | | | | |
| | | 2dP | 20635 | | | | |
| | | 3dP | 28827 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| Y.2 | r/w | base | 4252 | 41272 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12444 | | | | |
| | | 2dP | 20636 | | | | |
| | | 3dP | 28828 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4253 | 41274 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12445 | | | | |
| | | 2dP | 20637 | | | | |
| | | 3dP | 28829 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4254 | 41276 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12446 | | | | |
| | | 2dP | 20638 | | | | |
| | | 3dP | 28830 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4255 | 41278 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12447 | | | | |
| | | 2dP | 20639 | | | | |
| | | 3dP | 28831 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 3. |
| LP.AL | r/w | base | 4257 | 41282 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12449 | | | | |
| | | 2dP | 20641 | | | | |
| | | 3dP | 28833 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4258 | 41284 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12450 | | | | |
| | | 2dP | 20642 | | | | |
| | | 3dP | 28834 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The heating current alarm is assigned to this output. |
| HC.SC | r/w | base | 4259 | 41286 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12451 | | | | |
| | | 2dP | 20643 | | | | |
| | | 3dP | 28835 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | Output activated by an SSR fault. |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| P.End | r/w | base | 4261 | 41290 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12453 | | | | |
| | | 2dP | 20645 | | | | |
| | | 3dP | 28837 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output is activated by the message 'Program end'. |
| FAi.1 | r/w | base | 4262 | 41292 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12454 | | | | |
| | | 2dP | 20646 | | | | |
| | | 3dP | 28838 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4263 | 41294 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12455 | | | | |
| | | 2dP | 20647 | | | | |
| | | 3dP | 28839 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |
| FAi.3 | r/w | base | 4264 | 41296 | Enum | Enum_FAI3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12456 | | | | |
| | | 2dP | 20648 | | | | |
| | | 3dP | 28840 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| PrG.1 | r/w | base | 4265 | 41298 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12457 | | | | |
| | | 2dP | 20649 | | | | |
| | | 3dP | 28841 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 1 is assigned to this output. |
| PrG.2 | r/w | base | 4266 | 41300 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12458 | | | | |
| | | 2dP | 20650 | | | | |
| | | 3dP | 28842 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 2 is assigned to this output. |
| PrG.3 | r/w | base | 4267 | 41302 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12459 | | | | |
| | | 2dP | 20651 | | | | |
| | | 3dP | 28843 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 3 is assigned to this output. |

16 Out.2

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| PrG.4 | r/w | base | 4268 | 41304 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12460 | | | | |
| | | 2dP | 20652 | | | | |
| | | 3dP | 28844 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | Control output 4 is assigned to this output. |

| | | | | | | | |
|------|-----|------|-------|-------|------|-----------|---|
| CALL | r/w | base | 4269 | 41306 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12461 | | | | |
| | | 2dP | 20653 | | | | |
| | | 3dP | 28845 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is switched by an operator call. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------------|---|
| dP.Er | r/w | base | 4275 | 41318 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12467 | | | | |
| | | 2dP | 20659 | | | | |
| | | 3dP | 28851 | | | | |
| 0 | | | | | | | Not active |
| 1 | | | | | | | This output sends the Profibus fault. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out2 | r | base | 4280 | 41328 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12472 | | | | |
| | | 2dP | 20664 | | | | |
| | | 3dP | 28856 | | | | |
| 0 | | | | | | | off |
| 1 | | | | | | | on |

| | | | | | | | |
|-------|-----|------|-------|-------|------|--------------|---|
| F.Do2 | r/w | base | 4281 | 41330 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12473 | | | | |
| | | 2dP | 20665 | | | | |
| | | 3dP | 28857 | | | | |
| 0 | | | | | | | off |
| 1 | | | | | | | on |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.tYP | r/w | base | 4370 | 41508 | Enum | Enum_OtYP | Signal type selection OUT |
| | | 1dP | 12562 | | | | |
| | | 2dP | 20754 | | | | |
| | | 3dP | 28946 | | | | |
| | | | | | | | |
| | | | | | | 0 | Relay / logic |
| | | | | | | 1 | 0 ... 20 mA continuous |
| | | | | | | 2 | 4 ... 20 mA continuous |
| | | | | | | 3 | 0...10 V continuous |
| | | | | | | 4 | 2...10 V continuous |
| | | | | | | 5 | transmitter supply |
| O.Act | r/w | base | 4350 | 41468 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12542 | | | | |
| | | 2dP | 20734 | | | | |
| | | 3dP | 28926 | | | | |
| | | | | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4351 | 41470 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12543 | | | | |
| | | 2dP | 20735 | | | | |
| | | 3dP | 28927 | | | | |
| | | | | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4352 | 41472 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12544 | | | | |
| | | 2dP | 20736 | | | | |
| | | 3dP | 28928 | | | | |
| | | | | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4353 | 41474 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12545 | | | | |
| | | 2dP | 20737 | | | | |
| | | 3dP | 28929 | | | | |
| | | | | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4354 | 41476 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12546 | | | | |
| | | 2dP | 20738 | | | | |
| | | 3dP | 28930 | | | | |
| | | | | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is activated by an alarm from limit value 2. |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--|-----|------|---------|-------|------|---------------|---|
| Lim.3 | r/w | base | 4355 | 41478 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12547 | | | | |
| | | 2dP | 20739 | | | | |
| | | 3dP | 28931 | | | | |
| 0 not active | | | | | | | |
| 1 The output is activated by an alarm from limit value 3. | | | | | | | |
| LP.AL | r/w | base | 4357 | 41482 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12549 | | | | |
| | | 2dP | 20741 | | | | |
| | | 3dP | 28933 | | | | |
| 0 not active | | | | | | | |
| 1 The loop alarm (= open loop alarm) is assigned to this output. | | | | | | | |
| HC.AL | r/w | base | 4358 | 41484 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12550 | | | | |
| | | 2dP | 20742 | | | | |
| | | 3dP | 28934 | | | | |
| 0 not active | | | | | | | |
| 1 The heating current alarm is assigned to this output. | | | | | | | |
| HC.SC | r/w | base | 4359 | 41486 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12551 | | | | |
| | | 2dP | 20743 | | | | |
| | | 3dP | 28935 | | | | |
| 0 not active | | | | | | | |
| 1 Output activated by an SSR fault. | | | | | | | |
| P.End | r/w | base | 4361 | 41490 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12553 | | | | |
| | | 2dP | 20745 | | | | |
| | | 3dP | 28937 | | | | |
| 0 not active | | | | | | | |
| 1 This output is activated by the message 'Program end'. | | | | | | | |
| FAi.1 | r/w | base | 4362 | 41492 | Enum | Enum_FAI1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12554 | | | | |
| | | 2dP | 20746 | | | | |
| | | 3dP | 28938 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP1 fault'. | | | | | | | |
| FAi.2 | r/w | base | 4363 | 41494 | Enum | Enum_FAI2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12555 | | | | |
| | | 2dP | 20747 | | | | |
| | | 3dP | 28939 | | | | |
| 0 not active | | | | | | | |
| 1 The output sends the error message 'INP2 fault'. | | | | | | | |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-------------|---|
| FAi.3 | r/w | base | 4364 | 41496 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12556 | | | | |
| | | 2dP | 20748 | | | | |
| | | 3dP | 28940 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| PrG.1 | r/w | base | 4365 | 41498 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12557 | | | | |
| | | 2dP | 20749 | | | | |
| | | 3dP | 28941 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 1 is assigned to this output. |
| PrG.2 | r/w | base | 4366 | 41500 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12558 | | | | |
| | | 2dP | 20750 | | | | |
| | | 3dP | 28942 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 2 is assigned to this output. |
| PrG.3 | r/w | base | 4367 | 41502 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12559 | | | | |
| | | 2dP | 20751 | | | | |
| | | 3dP | 28943 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 3 is assigned to this output. |
| PrG.4 | r/w | base | 4368 | 41504 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12560 | | | | |
| | | 2dP | 20752 | | | | |
| | | 3dP | 28944 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 4 is assigned to this output. |
| CALL | r/w | base | 4369 | 41506 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12561 | | | | |
| | | 2dP | 20753 | | | | |
| | | 3dP | 28945 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by an operator call. |
| dP.Er | r/w | base | 4375 | 41518 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12567 | | | | |
| | | 2dP | 20759 | | | | |
| | | 3dP | 28951 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

17 Out.3

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description | |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|--|
| Out.0 | r/w | base | 4371 | 41510 | Float | -1999...9999 | <input type="checkbox"/> | Lower scaling limit of the analog output (corresponds to 0%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the lower scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12563 | | | | | |
| | | 2dP | 20755 | | | | | |
| | | 3dP | 28947 | | | | | |
| Out.1 | r/w | base | 4372 | 41512 | Float | -1999...9999 | <input type="checkbox"/> | Upper scaling limit of the analog output (corresponds to 100%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the upper scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12564 | | | | | |
| | | 2dP | 20756 | | | | | |
| | | 3dP | 28948 | | | | | |
| O.Src | r/w | base | 4373 | 41514 | Enum | Enum_OSrc | | Signal source of the analog output (visible not with all output signal types O.TYP). |
| | | 1dP | 12565 | | | | | |
| | | 2dP | 20757 | | | | | |
| | | 3dP | 28949 | | | | | |

| | |
|---|--|
| 0 | not used |
| 1 | Controller output y1 (continuous) |
| 2 | Controller output y2 (continuous) |
| 3 | process value |
| 4 | The effective setpoint Weff, which is used for control. Example: The gradient changes the effective setpoint until it reaches the internal (target) setpoint. |
| 5 | control deviation xw (process value - set-point)= relative alarm Note: Monitoring with the effective set-point Weff. For example using a ramp it is the changing set-point, not the target set-point of the ramp. |
| 6 | Position feedback signal Yp. |
| 7 | measured value INP1 |
| 8 | measured value INP2 |
| 9 | measured value INP3 |

| | | | | | | | |
|-------|-----|------|-------|-------|------|------------|----------------|
| O.FAI | r/w | base | 4374 | 41516 | Enum | Enum_OFail | fail behaviour |
| | | 1dP | 12566 | | | | |
| | | 2dP | 20758 | | | | |
| | | 3dP | 28950 | | | | |

| | |
|---|-----------|
| 0 | upscale |
| 1 | downscale |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out1 | r | base | 4380 | 41528 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12572 | | | | |
| | | 2dP | 20764 | | | | |
| | | 3dP | 28956 | | | | |

| | |
|---|-----|
| 0 | off |
| 1 | on |

17 Out.3

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-------|--------------|---|
| F.Do1 | r/w | base | 4381 | 41530 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12573 | | | | |
| | | 2dP | 20765 | | | | |
| | | 3dP | 28957 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Out1 | r/w | base | 4382 | 41532 | Float | 0...120 | <input type="checkbox"/> Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 12574 | | | | |
| | | 2dP | 20766 | | | | |
| | | 3dP | 28958 | | | | |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.tYP | r/w | base | 4470 | 41708 | Enum | Enum_OtYP | Signal type selection OUT |
| | | 1dP | 12662 | | | | |
| | | 2dP | 20854 | | | | |
| | | 3dP | 29046 | | | | |
| | | | | | | 0 | Relay / logic |
| | | | | | | 1 | 0 ... 20 mA continuous |
| | | | | | | 2 | 4 ... 20 mA continuous |
| | | | | | | 3 | 0...10 V continuous |
| | | | | | | 4 | 2...10 V continuous |
| | | | | | | 5 | transmitter supply |
| O.Act | r/w | base | 4450 | 41668 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12642 | | | | |
| | | 2dP | 20834 | | | | |
| | | 3dP | 29026 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4451 | 41670 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12643 | | | | |
| | | 2dP | 20835 | | | | |
| | | 3dP | 29027 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4452 | 41672 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12644 | | | | |
| | | 2dP | 20836 | | | | |
| | | 3dP | 29028 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--|-----|------|---------|-------|------|---------------|---|
| Lim.1 | r/w | base | 4453 | 41674 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12645 | | | | |
| | | 2dP | 20837 | | | | |
| | | 3dP | 29029 | | | | |
| 0 not active | | | | | | | |
| 1 The output is activated by an alarm from limit value 1. | | | | | | | |
| Lim.2 | r/w | base | 4454 | 41676 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12646 | | | | |
| | | 2dP | 20838 | | | | |
| | | 3dP | 29030 | | | | |
| 0 not active | | | | | | | |
| 1 The output is activated by an alarm from limit value 2. | | | | | | | |
| Lim.3 | r/w | base | 4455 | 41678 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12647 | | | | |
| | | 2dP | 20839 | | | | |
| | | 3dP | 29031 | | | | |
| 0 not active | | | | | | | |
| 1 The output is activated by an alarm from limit value 3. | | | | | | | |
| LP.AL | r/w | base | 4457 | 41682 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12649 | | | | |
| | | 2dP | 20841 | | | | |
| | | 3dP | 29033 | | | | |
| 0 not active | | | | | | | |
| 1 The loop alarm (= open loop alarm) is assigned to this output. | | | | | | | |
| HC.AL | r/w | base | 4458 | 41684 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12650 | | | | |
| | | 2dP | 20842 | | | | |
| | | 3dP | 29034 | | | | |
| 0 not active | | | | | | | |
| 1 The heating current alarm is assigned to this output. | | | | | | | |
| HC.SC | r/w | base | 4459 | 41686 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12651 | | | | |
| | | 2dP | 20843 | | | | |
| | | 3dP | 29035 | | | | |
| 0 not active | | | | | | | |
| 1 Output activated by an SSR fault. | | | | | | | |
| P.End | r/w | base | 4461 | 41690 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12653 | | | | |
| | | 2dP | 20845 | | | | |
| | | 3dP | 29037 | | | | |
| 0 not active | | | | | | | |
| 1 This output is activated by the message 'Program end'. | | | | | | | |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| FAi.1 | r/w | base | 4462 | 41692 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12654 | | | | |
| | | 2dP | 20846 | | | | |
| | | 3dP | 29038 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4463 | 41694 | Enum | Enum_FAi2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12655 | | | | |
| | | 2dP | 20847 | | | | |
| | | 3dP | 29039 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |
| FAi.3 | r/w | base | 4464 | 41696 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12656 | | | | |
| | | 2dP | 20848 | | | | |
| | | 3dP | 29040 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| PrG.1 | r/w | base | 4465 | 41698 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12657 | | | | |
| | | 2dP | 20849 | | | | |
| | | 3dP | 29041 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 1 is assigned to this output. |
| PrG.2 | r/w | base | 4466 | 41700 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12658 | | | | |
| | | 2dP | 20850 | | | | |
| | | 3dP | 29042 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 2 is assigned to this output. |
| PrG.3 | r/w | base | 4467 | 41702 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12659 | | | | |
| | | 2dP | 20851 | | | | |
| | | 3dP | 29043 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 3 is assigned to this output. |
| PrG.4 | r/w | base | 4468 | 41704 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12660 | | | | |
| | | 2dP | 20852 | | | | |
| | | 3dP | 29044 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 4 is assigned to this output. |

18 Out.4

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| CALL | r/w | base | 4469 | 41706 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12661 | | | | |
| | | 2dP | 20853 | | | | |
| | | 3dP | 29045 | | | | |

- 0 not active
1 The output is switched by an operator call.

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------------|---|
| dP.Er | r/w | base | 4475 | 41718 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12667 | | | | |
| | | 2dP | 20859 | | | | |
| | | 3dP | 29051 | | | | |

- 0 Not active
1 This output sends the Profibus fault.

| | | | | | | | | |
|-------|-----|------|-------|-------|-------|--------------|--------------------------|--|
| Out.0 | r/w | base | 4471 | 41710 | Float | -1999...9999 | <input type="checkbox"/> | Lower scaling limit of the analog output (corresponds to 0%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the lower scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12663 | | | | | |
| | | 2dP | 20855 | | | | | |
| | | 3dP | 29047 | | | | | |

| | | | | | | | | |
|-------|-----|------|-------|-------|-------|--------------|--------------------------|--|
| Out.1 | r/w | base | 4472 | 41712 | Float | -1999...9999 | <input type="checkbox"/> | Upper scaling limit of the analog output (corresponds to 100%). If current and voltage signals are used as output values, the display can be scaled to the output value in the Parameter Level. The output value of the upper scaling point is indicated in the respective electrical unit (mA / V). |
| | | 1dP | 12664 | | | | | |
| | | 2dP | 20856 | | | | | |
| | | 3dP | 29048 | | | | | |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|--|
| O.Src | r/w | base | 4473 | 41714 | Enum | Enum_OSrc | Signal source of the analog output (visible not with all output signal types O.TYP). |
| | | 1dP | 12665 | | | | |
| | | 2dP | 20857 | | | | |
| | | 3dP | 29049 | | | | |

- 0 not used
1 Controller output y1 (continuous)
2 Controller output y2 (continuous)
3 process value
4 The effective setpoint Weff, which is used for control.
Example: The gradient changes the effective setpoint until it reaches the internal (target) setpoint.
5 control deviation xw (process value - set-point)= relative alarm
Note: Monitoring with the effective set-point Weff. For example using a ramp it is the changing set-point, not the target set-point of the ramp.
6 Position feedback signal Yp.
7 measured value INP1
8 measured value INP2
9 measured value INP3

| | | | | | | | |
|-------|-----|------|-------|-------|------|------------|----------------|
| O.FAI | r/w | base | 4474 | 41716 | Enum | Enum_OFail | fail behaviour |
| | | 1dP | 12666 | | | | |
| | | 2dP | 20858 | | | | |
| | | 3dP | 29050 | | | | |

- 0 upscale
1 downscale

- Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|-----|------|---------|-------|-------|--------------|---|
| Out2 | r | base | 4480 | 41728 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12672 | | | | |
| | | 2dP | 20864 | | | | |
| | | 3dP | 29056 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Do2 | r/w | base | 4481 | 41730 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12673 | | | | |
| | | 2dP | 20865 | | | | |
| | | 3dP | 29057 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |
| F.Out2 | r/w | base | 4482 | 41732 | Float | 0...120 | <input type="checkbox"/> Forcing value of the analog output. Forcing involves the external operation of an output, i.e. the instrument has no influence on this output. (Used for the operation of free outputs e.g. by a supervisory PLC.) |
| | | 1dP | 12674 | | | | |
| | | 2dP | 20866 | | | | |
| | | 3dP | 29058 | | | | |

19 Out.5

- ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Act | r/w | base | 4550 | 41868 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12742 | | | | |
| | | 2dP | 20934 | | | | |
| | | 3dP | 29126 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |
| Y.1 | r/w | base | 4551 | 41870 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12743 | | | | |
| | | 2dP | 20935 | | | | |
| | | 3dP | 29127 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4552 | 41872 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12744 | | | | |
| | | 2dP | 20936 | | | | |
| | | 3dP | 29128 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output provides the controller output Y2. |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|---|
| Lim.1 | r/w | base | 4553 | 41874 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12745 | | | | |
| | | 2dP | 20937 | | | | |
| | | 3dP | 29129 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4554 | 41876 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12746 | | | | |
| | | 2dP | 20938 | | | | |
| | | 3dP | 29130 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4555 | 41878 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12747 | | | | |
| | | 2dP | 20939 | | | | |
| | | 3dP | 29131 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 3. |
| LP.AL | r/w | base | 4557 | 41882 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12749 | | | | |
| | | 2dP | 20941 | | | | |
| | | 3dP | 29133 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4558 | 41884 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12750 | | | | |
| | | 2dP | 20942 | | | | |
| | | 3dP | 29134 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The heating current alarm is assigned to this output. |
| HC.SC | r/w | base | 4559 | 41886 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12751 | | | | |
| | | 2dP | 20943 | | | | |
| | | 3dP | 29135 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | Output activated by an SSR fault. |
| P.End | r/w | base | 4561 | 41890 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12753 | | | | |
| | | 2dP | 20945 | | | | |
| | | 3dP | 29137 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | This output is activated by the message 'Program end'. |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| FAi.1 | r/w | base | 4562 | 41892 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12754 | | | | |
| | | 2dP | 20946 | | | | |
| | | 3dP | 29138 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4563 | 41894 | Enum | Enum_FAi2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12755 | | | | |
| | | 2dP | 20947 | | | | |
| | | 3dP | 29139 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |
| FAi.3 | r/w | base | 4564 | 41896 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12756 | | | | |
| | | 2dP | 20948 | | | | |
| | | 3dP | 29140 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| PrG.1 | r/w | base | 4565 | 41898 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12757 | | | | |
| | | 2dP | 20949 | | | | |
| | | 3dP | 29141 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 1 is assigned to this output. |
| PrG.2 | r/w | base | 4566 | 41900 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12758 | | | | |
| | | 2dP | 20950 | | | | |
| | | 3dP | 29142 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 2 is assigned to this output. |
| PrG.3 | r/w | base | 4567 | 41902 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12759 | | | | |
| | | 2dP | 20951 | | | | |
| | | 3dP | 29143 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 3 is assigned to this output. |
| PrG.4 | r/w | base | 4568 | 41904 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12760 | | | | |
| | | 2dP | 20952 | | | | |
| | | 3dP | 29144 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 4 is assigned to this output. |

19 Out.5

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|-----------|---|
| CALL | r/w | base | 4569 | 41906 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12761 | | | | |
| | | 2dP | 20953 | | | | |
| | | 3dP | 29145 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by an operator call. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------------|---|
| dP.Er | r/w | base | 4575 | 41918 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12767 | | | | |
| | | 2dP | 20959 | | | | |
| | | 3dP | 29151 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out3 | r | base | 4580 | 41928 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12772 | | | | |
| | | 2dP | 20964 | | | | |
| | | 3dP | 29156 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

| | | | | | | | |
|-------|-----|------|-------|-------|------|--------------|---|
| F.Do3 | r/w | base | 4581 | 41930 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12773 | | | | |
| | | 2dP | 20965 | | | | |
| | | 3dP | 29157 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|--|
| O.Act | r/w | base | 4650 | 42068 | Enum | Enum_OAct | Operating sense of the switching output. Direct: Active function (e.g. limit value) switches the output ON; Inverse: Active function (e.g. limit value) switches the output OFF. |
| | | 1dP | 12842 | | | | |
| | | 2dP | 21034 | | | | |
| | | 3dP | 29226 | | | | |
| | | | | | | 0 | direct / normally open |
| | | | | | | 1 | inverse / normally closed |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|--|
| Y.1 | r/w | base | 4651 | 42070 | Enum | Enum_Y1 | Output function: Controller output Y1 |
| | | 1dP | 12843 | | | | |
| | | 2dP | 21035 | | | | |
| | | 3dP | 29227 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | This output provides the controller output Y1. |
| Y.2 | r/w | base | 4652 | 42072 | Enum | Enum_Y2 | Output function: Controller output Y2. Caution: Do not confuse the controller output Y2 with the parameter 'Fixed output Y2' ! |
| | | 1dP | 12844 | | | | |
| | | 2dP | 21036 | | | | |
| | | 3dP | 29228 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | This output provides the controller output Y2. |
| Lim.1 | r/w | base | 4653 | 42074 | Enum | Enum_Lim1 | Output function: Signal limit 1 |
| | | 1dP | 12845 | | | | |
| | | 2dP | 21037 | | | | |
| | | 3dP | 29229 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 1. |
| Lim.2 | r/w | base | 4654 | 42076 | Enum | Enum_Lim2 | Output function: Signal limit 2 |
| | | 1dP | 12846 | | | | |
| | | 2dP | 21038 | | | | |
| | | 3dP | 29230 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 2. |
| Lim.3 | r/w | base | 4655 | 42078 | Enum | Enum_Lim3 | Output function: Signal limit 3 |
| | | 1dP | 12847 | | | | |
| | | 2dP | 21039 | | | | |
| | | 3dP | 29231 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The output is activated by an alarm from limit value 3. |
| LP.AL | r/w | base | 4657 | 42082 | Enum | Enum_OUT_LPAL | Output function: Signal Interruption alarm (LOOP) The overall control loop is monitored and the process value has to change with an output signal of maximum value, else loop alarm is generated. |
| | | 1dP | 12849 | | | | |
| | | 2dP | 21041 | | | | |
| | | 3dP | 29233 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The loop alarm (= open loop alarm) is assigned to this output. |
| HC.AL | r/w | base | 4658 | 42084 | Enum | Enum_OUT_HCAL | Output function: Signal Heat current alarm. Either break (= current I < heating current limit) can be monitored or overload (= current I > heating current limit), dependent on configuration. |
| | | 1dP | 12850 | | | | |
| | | 2dP | 21042 | | | | |
| | | 3dP | 29234 | | | | |
| 0 | | | | | | | not active |
| 1 | | | | | | | The heating current alarm is assigned to this output. |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| HC.SC | r/w | base | 4659 | 42086 | Enum | Enum_HCSC | Output function: Signal Solid-state relay (SSR) short circuit. The short circuit alarm of the SSR is triggered, if a current is detected in the heating circuit, although the controller output is switched off. |
| | | 1dP | 12851 | | | | |
| | | 2dP | 21043 | | | | |
| | | 3dP | 29235 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Output activated by an SSR fault. |
| P.End | r/w | base | 4661 | 42090 | Enum | Enum_PEnd | Output function: Signal Program end. This message is available when the program has been completed (only when configured as a program controller). |
| | | 1dP | 12853 | | | | |
| | | 2dP | 21045 | | | | |
| | | 3dP | 29237 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | This output is activated by the message 'Program end'. |
| FAi.1 | r/w | base | 4662 | 42092 | Enum | Enum_FAi1 | Output function: Signal INP1 fault. The fail signal is generated, if a fault occurs at the analog Input INP1. |
| | | 1dP | 12854 | | | | |
| | | 2dP | 21046 | | | | |
| | | 3dP | 29238 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP1 fault'. |
| FAi.2 | r/w | base | 4663 | 42094 | Enum | Enum_FAi2 | Output function: Signal INP2 fault. The fail signal is generated, if a fault occurs at the analog Input INP2. |
| | | 1dP | 12855 | | | | |
| | | 2dP | 21047 | | | | |
| | | 3dP | 29239 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP2 fault'. |
| FAi.3 | r/w | base | 4664 | 42096 | Enum | Enum_FAi3 | Output function: Signal INP3 fault. The fail signal is generated, if a fault occurs at the analog Input INP3. |
| | | 1dP | 12856 | | | | |
| | | 2dP | 21048 | | | | |
| | | 3dP | 29240 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output sends the error message 'INP3 fault'. |
| PrG.1 | r/w | base | 4665 | 42098 | Enum | Enum_PrG1 | Output function: Signal programmer's control output no. 1. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12857 | | | | |
| | | 2dP | 21049 | | | | |
| | | 3dP | 29241 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 1 is assigned to this output. |
| PrG.2 | r/w | base | 4666 | 42100 | Enum | Enum_PrG2 | Output function: Signal programmer's control output no. 2. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12858 | | | | |
| | | 2dP | 21050 | | | | |
| | | 3dP | 29242 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 2 is assigned to this output. |

20 Out.6

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| PrG.3 | r/w | base | 4667 | 42102 | Enum | Enum_PrG3 | Output function: Signal programmer's control output no. 3. T A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12859 | | | | |
| | | 2dP | 21051 | | | | |
| | | 3dP | 29243 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 3 is assigned to this output. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-----------|---|
| PrG.4 | r/w | base | 4668 | 42104 | Enum | Enum_PrG4 | Output function: Signal programmer's control output no. 4. A control output is one of the four digital signals that can be operated segment-wise by a program. |
| | | 1dP | 12860 | | | | |
| | | 2dP | 21052 | | | | |
| | | 3dP | 29244 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | Control output 4 is assigned to this output. |

| | | | | | | | |
|------|-----|------|-------|-------|------|-----------|---|
| CALL | r/w | base | 4669 | 42106 | Enum | Enum_CALL | Output: Operator call. At the end of a program segment, a contact is set, e.g. for an acoustic signal. This indicates to the operator that a certain program status has been reached, and operator action is required. Operator calling is used, if the program may only be continued after a check or some kind of operator action. |
| | | 1dP | 12861 | | | | |
| | | 2dP | 21053 | | | | |
| | | 3dP | 29245 | | | | |
| | | | | | | 0 | not active |
| | | | | | | 1 | The output is switched by an operator call. |

| | | | | | | | |
|-------|-----|------|-------|-------|------|-------------|---|
| dP.Er | r/w | base | 4675 | 42118 | Enum | Enum_DP_ERR | Output function: Signal Fault in the Profibus communication. This output is set when a fault in the Profibus communication occurs. There is no more communication with this device. |
| | | 1dP | 12867 | | | | |
| | | 2dP | 21059 | | | | |
| | | 3dP | 29251 | | | | |
| | | | | | | 0 | Not active |
| | | | | | | 1 | This output sends the Profibus fault. |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|------|--------------|------------------------------|
| Out4 | r | base | 4680 | 42128 | Enum | Enum_Ausgang | Status of the digital output |
| | | 1dP | 12872 | | | | |
| | | 2dP | 21064 | | | | |
| | | 3dP | 29256 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

| | | | | | | | |
|-------|-----|------|-------|-------|------|--------------|---|
| F.Do4 | r/w | base | 4681 | 42130 | Enum | Enum_Ausgang | Forcing of this digital output. Forcing involves the external operation of an output. The instrument has no influence on this output (use of free outputs by superordinate system). |
| | | 1dP | 12873 | | | | |
| | | 2dP | 21065 | | | | |
| | | 3dP | 29257 | | | | |
| | | | | | | 0 | off |
| | | | | | | 1 | on |

21 PAr.2

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|------------|--|
| Pb12 | r/w | base | 5030 | 42828 | Float | 0,1...9999 | <input type="checkbox"/> Proportional band 1 (heating) in engineering unit (e.g. °C) of the 2nd parameter set. The Pb defines the ratio between output value and control deviation. The smaller the value of Pb is, the stronger is the control response for a specific control deviation. Too large and too small values for Pb lead to process oscillations (hunting). |
| | | 1dP | 13222 | | | | |
| | | 2dP | 21414 | | | | |
| | | 3dP | 29606 | | | | |
| Pb22 | r/w | base | 5031 | 42830 | Float | 0,1...9999 | <input type="checkbox"/> Proportional band 2 (cooling) in engineering unit (e.g. °C) of the 2nd parameter set. The Pb defines the ratio between output value and control deviation. The smaller the value of Pb is, the stronger is the control response for a specific control deviation. Too large and too small values for Pb lead to process oscillations (hunting). |
| | | 1dP | 13223 | | | | |
| | | 2dP | 21415 | | | | |
| | | 3dP | 29607 | | | | |
| ti22 | r/w | base | 5033 | 42834 | Float | 0...9999 | <input checked="" type="checkbox"/> Integral action time 2 (cooling) [s]. Second parameter set. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13225 | | | | |
| | | 2dP | 21417 | | | | |
| | | 3dP | 29609 | | | | |
| ti12 | r/w | base | 5032 | 42832 | Float | 0...9999 | <input checked="" type="checkbox"/> Integral action time 1 (heating) [s]. Second parameter set. Ti is the time constant of the integral portion. The smaller Ti is, the faster is the response of the integral action. Ti too small: Control tends to oscillate. Ti too large: Control is sluggish and needs a long time to line out. |
| | | 1dP | 13224 | | | | |
| | | 2dP | 21416 | | | | |
| | | 3dP | 29608 | | | | |
| td12 | r/w | base | 5034 | 42836 | Float | 0...9999 | <input checked="" type="checkbox"/> Derivative action time 1 (heating) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| | | 1dP | 13226 | | | | |
| | | 2dP | 21418 | | | | |
| | | 3dP | 29610 | | | | |
| td22 | r/w | base | 5035 | 42838 | Float | 0...9999 | <input checked="" type="checkbox"/> Derivative action time 2 (cooling) [s], second parameter set. Td is the time constant of the derivative portion. The faster the process value changes, and the larger the value of Td is, the stronger will be the derivative action. Td too small: Very little derivative action. Td too large: Control tends to oscillate. |
| | | 1dP | 13227 | | | | |
| | | 2dP | 21419 | | | | |
| | | 3dP | 29611 | | | | |

22 ProG

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|-----------|---|
| t.bAS | r/w | base | 6030 | 44828 | Enum | Enum_tbAS | Definition of the programmer's time base in hours using minutes, or in minutes using seconds. |
| | | 1dP | 14222 | | | | |
| | | 2dP | 22414 | | | | |
| | | 3dP | 30606 | | | | |
| | | | | | | 0 | Hours [hh] : Minutes [mm] |
| | | | | | | 1 | Minutes [mm] : Seconds [ss] |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|------|---------------|--|
| Pr.no | r/w | base | 6000 | 44768 | Enum | Enum_PrgNoPar | Program number (nominal). The program number (nominal) determines which program is to be started next. Running programs are not affected. The selected program is only started after a reset or restart. |
| | | 1dP | 14192 | | | | |
| | | 2dP | 22384 | | | | |
| | | 3dP | 30576 | | | | |
| | | | | | | 1 | Prog. 01 |
| | | | | | | 2 | Prog. 02 |
| | | | | | | 3 | Prog. 03 |
| | | | | | | 4 | Prog. 04 |
| | | | | | | 5 | Prog. 05 |
| | | | | | | 6 | Prog. 06 |
| | | | | | | 7 | Prog. 07 |
| | | | | | | 8 | Prog. 08 |
| | | | | | | 9 | Prog. 09 |
| | | | | | | 10 | Prog. 10 |
| | | | | | | 11 | Prog. 11 |
| | | | | | | 12 | Prog. 12 |
| | | | | | | 13 | Prog. 13 |
| | | | | | | 14 | Prog. 14 |
| | | | | | | 15 | Prog. 15 |
| | | | | | | 16 | Prog. 16 |

| | | | | | | | | |
|------|-----|------|-------|-------|-------|-------------|-------------------------------------|--|
| b.Lo | r/w | base | 6100 | 44968 | Float | 0...9999 | <input checked="" type="checkbox"/> | Lower bandwidth limit. The bandwidth monitor is valid for all segments of an individual program. If the bandwidth is exceeded, the programmer is stopped. The program continues, if the process value returns within the defined monitoring limits. |
| | | 1dP | 14292 | | | | | |
| | | 2dP | 22484 | | | | | |
| | | 3dP | 30676 | | | | | |
| b.Hi | r/w | base | 6101 | 44970 | Float | 0...9999 | <input checked="" type="checkbox"/> | Upper bandwidth limit. The bandwidth monitor is valid for all segments of an individual program. If the bandwidth is exceeded, the programmer is stopped. The program continues, if the process value returns within the defined monitoring limits. |
| | | 1dP | 14293 | | | | | |
| | | 2dP | 22485 | | | | | |
| | | 3dP | 30677 | | | | | |
| d.00 | r/w | base | 6134 | 45036 | Enum | ENUM_Spuren | | Reset value for control outputs 1...4. A program can control up to four digital signals: the control outputs 1...4. The reset value of the control output contains the combination of these signals, which are output together with the controller's internal setpoint, if the programmer is not active. |
| | | 1dP | 14326 | | | | | |
| | | 2dP | 22518 | | | | | |
| | | 3dP | 30710 | | | | | |

| | |
|----|---------|
| 0 | 0-0-0-0 |
| 1 | 1-0-0-0 |
| 2 | 0-1-0-0 |
| 3 | 1-1-0-0 |
| 4 | 0-0-1-0 |
| 5 | 1-0-1-0 |
| 6 | 0-1-1-0 |
| 7 | 1-1-1-0 |
| 8 | 0-0-0-1 |
| 9 | 1-0-0-1 |
| 10 | 0-1-0-1 |
| 11 | 1-1-0-1 |
| 12 | 0-0-1-1 |
| 13 | 1-0-1-1 |
| 14 | 0-1-1-1 |
| 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6135 14327 22519 30711 | 45038 | Enum | Enum_SegTyp | Type of segment 1. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). Note: The 1st segment cannot be configured as the end segment. |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6102 14294 22486 30678 | 44972 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 1. This is the target setpoint that is reached at the end of the first segment. The target setpoint is approached from the previous valid setpoint (when starting the 1st segment, matching to process value!). When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6103 14295 22487 30679 | 44974 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 1. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6136 14328 22520 30712 | 45040 | Enum | ENUM_Spuren | Control outputs 1...4 - 1. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6137 14329 22521 30713 | 45042 | Enum | Enum_SegTyp | Segment type of segment 2. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6104 14296 22488 30680 | 44976 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 2. This is the target setpoint that is reached at the end of the second segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6105 14297 22489 30681 | 44978 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 2. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6138 14330 22522 30714 | 45044 | Enum | ENUM_Spuren | Control outputs 1...4 - 2. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|------|---------|-------|-------|--------------|---|
| tYPE | r/w | base | 6139 | 45046 | Enum | Enum_SegTyp | Segment type of segment 3. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | 1dP | 14331 | | | | |
| | | 2dP | 22523 | | | | |
| | | 3dP | 30715 | | | | |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base | 6106 | 44980 | Float | -1999...9999 | <input type="checkbox"/> End setpoint of segment 3. This is the target setpoint that is reached at the end of the third segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| | | 1dP | 14298 | | | | |
| | | 2dP | 22490 | | | | |
| | | 3dP | 30682 | | | | |
| Pt | r/w | base | 6107 | 44982 | Float | 0...9999 | <input type="checkbox"/> Segment time/gradient 3. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| | | 1dP | 14299 | | | | |
| | | 2dP | 22491 | | | | |
| | | 3dP | 30683 | | | | |
| d.Out | r/w | base | 6140 | 45048 | Enum | ENUM_Spuren | Control outputs 1...4 - 3. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | 1dP | 14332 | | | | |
| | | 2dP | 22524 | | | | |
| | | 3dP | 30716 | | | | |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6141 14333 22525 30717 | 45050 | Enum | Enum_SegTyp | Segment type of segment 4. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6108 14300 22492 30684 | 44984 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 4. This is the target setpoint that is reached at the end of the fourth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6109 14301 22493 30685 | 44986 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 4. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6142 14334 22526 30718 | 45052 | Enum | ENUM_Spuren | Control outputs 1...4 - 4. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6143 14335 22527 30719 | 45054 | Enum | Enum_SegTyp | Segment type of segment 5. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6110 14302 22494 30686 | 44988 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 5. This is the target setpoint that is reached at the end of the fifth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6111 14303 22495 30687 | 44990 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 5. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6144 14336 22528 30720 | 45056 | Enum | ENUM_Spuren | Control outputs 1...4 - 5. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6145 14337 22529 30721 | 45058 | Enum | Enum_SegTyp | Segment type of segment 6. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6112 14304 22496 30688 | 44992 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 6. This is the target setpoint that is reached at the end of the sixth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6113 14305 22497 30689 | 44994 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 6. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6146 14338 22530 30722 | 45060 | Enum | ENUM_Spuren | Control outputs 1...4 - 6. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6147 14339 22531 30723 | 45062 | Enum | Enum_SegTyp | Segment type of segment 7. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6114 14306 22498 30690 | 44996 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 7. This is the target setpoint that is reached at the end of the seventh segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6115 14307 22499 30691 | 44998 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 7. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6148 14340 22532 30724 | 45064 | Enum | ENUM_Spuren | Control outputs 1...4 - 7. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6149 14341 22533 30725 | 45066 | Enum | Enum_SegTyp | Segment type of segment 8. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6116 14308 22500 30692 | 45000 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 8. This is the target setpoint that is reached at the end of the eighth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6117 14309 22501 30693 | 45002 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 8. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6150 14342 22534 30726 | 45068 | Enum | ENUM_Spuren | Control outputs 1...4 - 8. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|---|
| tYPE | r/w | base 1dP 2dP 3dP | 6151 14343 22535 30727 | 45070 | Enum | Enum_SegTyp | Segment type of segment 9. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6118 14310 22502 30694 | 45004 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 9. This is the target setpoint that is reached at the end of the ninth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6119 14311 22503 30695 | 45006 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 9. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6152 14344 22536 30728 | 45072 | Enum | ENUM_Spuren | Control outputs 1...4 - 9. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6153 14345 22537 30729 | 45074 | Enum | Enum_SegTyp | Segment type of segment 10. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6120 14312 22504 30696 | 45008 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 10. This is the target setpoint that is reached at the end of the tenth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6121 14313 22505 30697 | 45010 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 10. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6154 14346 22538 30730 | 45076 | Enum | ENUM_Spuren | Control outputs 1...4 - 10. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|--------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6155 14347 22539 30731 | 45078 | Enum | Enum_SegTyp | Segment type of segment 11. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6122 14314 22506 30698 | 45012 | Float | -1999...9999 | <input type="checkbox"/> End setpoint of segment 11. This is the target setpoint that is reached at the end of the eleventh segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6123 14315 22507 30699 | 45014 | Float | 0...9999 | <input type="checkbox"/> Segment time/gradient 11. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6156 14348 22540 30732 | 45080 | Enum | ENUM_Spuren | Control outputs 1...4 - 11. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6157 14349 22541 30733 | 45082 | Enum | Enum_SegTyp | Segment type of segment 12. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6124 14316 22508 30700 | 45016 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 12. This is the target setpoint that is reached at the end of the twelfth segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6125 14317 22509 30701 | 45018 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 12. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6158 14350 22542 30734 | 45084 | Enum | ENUM_Spuren | Control outputs 1...4 - 12. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6159 14351 22543 30735 | 45086 | Enum | Enum_SegTyp | Segment type of segment 13. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6126 14318 22510 30702 | 45020 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 13. This is the target setpoint that is reached at the end of the 13th segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6127 14319 22511 30703 | 45022 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 13. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6160 14352 22544 30736 | 45088 | Enum | ENUM_Spuren | Control outputs 1...4 - 13. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6161 14353 22545 30737 | 45090 | Enum | Enum_SegTyp | Segment type of segment 14. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6128 14320 22512 30704 | 45024 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 14. This is the target setpoint that is reached at the end of the 14th segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6129 14321 22513 30705 | 45026 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 14. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6162 14354 22546 30738 | 45092 | Enum | ENUM_Spuren | Control outputs 1...4 - 14. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6163 14355 22547 30739 | 45094 | Enum | Enum_SegTyp | Segment type of segment 15. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6130 14322 22514 30706 | 45028 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 15. This is the target setpoint that is reached at the end of the 15th segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6131 14323 22515 30707 | 45030 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 15. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6164 14356 22548 30740 | 45096 | Enum | ENUM_Spuren | Control outputs 1...4 - 15. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|-------|-----|---------------------------|---------------------------------|-------|-------|---------------------------------------|--|
| tYPE | r/w | base 1dP 2dP 3dP | 6165 14357 22549 30741 | 45098 | Enum | Enum_SegTyp | Segment type of segment 16. The segment type defines the setpoint behaviour for this segment. The setpoint can be held constant or be changed with a ramp or a step function. Continuation to next segment is automatic or manual (define a hold time). |
| | | | | | | 0 | time to set-point |
| | | | | | | 1 | rate to set-point |
| | | | | | | 2 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. |
| | | | | | | 3 | step to set-point |
| | | | | | | 4 | time to set-point and wait |
| | | | | | | 5 | rate to set-point and wait |
| | | | | | | 6 | The final setpoint of the previous segment is kept constant for the duration 'Pt'. At the end of a segment, the programmer enters the Stop mode (Run LED is off), and can be restarted by pressing the Start/Stop key (more than 3 s), via the interface, or a digital input. |
| | | | | | | 7 | step to set-point and wait |
| | | | | | | 8 | The last segment in a program is the end segment. When the end segment has been reached, the last setpoint is maintained. |
| SP | r/w | base 1dP 2dP 3dP | 6132 14324 22516 30708 | 45032 | Float | -1999...9999 <input type="checkbox"/> | End setpoint of segment 16. This is the target setpoint that is reached at the end of the 16th segment. The target setpoint is approached from the previous valid setpoint. When the program is completed, the controller continues with the last target setpoint reached. |
| Pt | r/w | base 1dP 2dP 3dP | 6133 14325 22517 30709 | 45034 | Float | 0...9999 <input type="checkbox"/> | Segment time/gradient 16. The duration of a segment can be defined directly, or by using the segment time and the setpoint difference (SP – segment starting setpoint). Whether the setting is for segment time or the gradient, is defined by means of the segment type parameter (tYPE). |
| d.Out | r/w | base 1dP 2dP 3dP | 6166 14358 22550 30742 | 45100 | Enum | ENUM_Spuren | Control outputs 1...4 - 16. A program can control up to four digital signals: the control outputs 1...4. A combination of these signals can be assigned to every segment, whereby the signals are operated while the segment is running. For access to the controller's outputs, the signals must be assigned accordingly. |
| | | | | | | 0 | 0-0-0-0 |
| | | | | | | 1 | 1-0-0-0 |
| | | | | | | 2 | 0-1-0-0 |
| | | | | | | 3 | 1-1-0-0 |
| | | | | | | 4 | 0-0-1-0 |
| | | | | | | 5 | 1-0-1-0 |
| | | | | | | 6 | 0-1-1-0 |
| | | | | | | 7 | 1-1-1-0 |
| | | | | | | 8 | 0-0-0-1 |
| | | | | | | 9 | 1-0-0-1 |
| | | | | | | 10 | 0-1-0-1 |
| | | | | | | 11 | 1-1-0-1 |
| | | | | | | 12 | 0-0-1-1 |
| | | | | | | 13 | 1-0-1-1 |
| | | | | | | 14 | 0-1-1-1 |
| | | | | | | 15 | 1-1-1-1 |

22 ProG

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|--|-----|---------------------------|---------------------------------|-------|-------|--------------|-------------------------------------|---|
| St.Prog | r | base 1dP 2dP 3dP | 6050 14242 22434 30626 | 44868 | Int | 0...255 | <input type="checkbox"/> | The programmer's status contains bit-wise coded data, e.g. which point of the program sequence the program has reached. |
| Bit 0,1,2 Type of segment 0: rising 1: falling 2: hold (dwell) Bit 3 Program 'Run' Bit 4 Program 'End' Bit 5 Program 'Reset' Bit 6 Program 'StartFlankMissing' Bit 7 Program 'BandHold + FailHold' Bit 8 Program active | | | | | | | | |
| SP.Pr | r | base 1dP 2dP 3dP | 6051 14243 22435 30627 | 44870 | Float | -1990...9999 | <input type="checkbox"/> | The programmer's setpoint is displayed as the effective setpoint while the program is running. |
| T1.Pr | r | base 1dP 2dP 3dP | 6052 14244 22436 30628 | 44872 | Float | 0...9999 | <input type="checkbox"/> | Only with a running program. The net (elapsed) time of the programmer is shown in a simplified form as time elapsed since program start. Caution: Stop times are not counted! If the first segment is defined as a gradient, the program starts at the process value, whereby the offset is defined as the time that the controller would have needed with the gradient beginning at the setpoint valid at program start. |
| T3.Pr | r | base 1dP 2dP 3dP | 6053 14245 22437 30629 | 44874 | Float | 0...9999 | <input type="checkbox"/> | Only with running program. The remaining programmer time is given by the sum of the currently running segment plus the times of the remaining program segments (without hold times). |
| T2.Pr | r | base 1dP 2dP 3dP | 6054 14246 22438 30630 | 44876 | Float | 0...9999 | <input type="checkbox"/> | Only while program is running. The net segment time corresponds to the elapsed segment time. Caution: Stop times are not counted! If the first segment has been defined as a gradient, the start commences at process value, and the offset specified for the first segment corresponds to the time that the controller would have required with a gradient beginning at the actual process value when the program was started. |
| T4.Pr | r | base 1dP 2dP 3dP | 6055 14247 22439 30631 | 44878 | Float | 0...9999 | <input type="checkbox"/> | Only with running program. The remaining time of the running program segment (without hold times). |
| SG.Pr | r | base 1dP 2dP 3dP | 6056 14248 22440 30632 | 44880 | Int | 0...16 | <input type="checkbox"/> | A program consists of one or more segments which are arranged and defined by means of the segment numbers. By means of the segment number(s), the program can be changed quickly and specifically at the required point. |
| Pr.SG | r/w | base 1dP 2dP 3dP | 6060 14252 22444 30636 | 44888 | Int | 1...16 | <input checked="" type="checkbox"/> | Segment number for Preset. Preset involves starting the selected program with a different segment than the normal (1st) start segment. The starting setpoint of the preset segment becomes effective immediately, i.e. the program is not started. To use the Preset function, the programmer must be in the Stop or Reset state. |

22 ProG

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| Pr.EF | r | base | 6057 | 44882 | Int | 0...16 | <input type="checkbox"/> | Number of the active program. The program remains active until a reset or a new start is triggered. |
| | | 1dP | 14249 | | | | | |
| | | 2dP | 22441 | | | | | |
| | | 3dP | 30633 | | | | | |
| SP.En | r | base | 6058 | 44884 | Float | -1999...9999 | <input type="checkbox"/> | |
| | | 1dP | 14250 | | | | | |
| | | 2dP | 22442 | | | | | |
| | | 3dP | 30634 | | | | | |

23 SEtP

• PArA

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|-------------------------------------|---|
| SP.LO | r/w | base | 3100 | 38968 | Float | -1999...9999 | <input type="checkbox"/> | Lower setpoint limit. The setpoint is raised to this value automatically, if a lower setpoint is adjusted. BUT: The (safety) setpoint W2 is not restricted by the setpoint limits! The setpoint reserve for the step function is 10% of SPHi - SPLo. |
| | | 1dP | 11292 | | | | | |
| | | 2dP | 19484 | | | | | |
| | | 3dP | 27676 | | | | | |
| SP.Hi | r/w | base | 3101 | 38970 | Float | -1999...9999 | <input type="checkbox"/> | Upper setpoint limit. The setpoint is reduced to this value automatically, if a higher setpoint is adjusted. BUT: The (safety) setpoint W2 is not restricted by the setpoint limits! The setpoint reserve for the step function is 10% of SPHi - SPLo. |
| | | 1dP | 11293 | | | | | |
| | | 2dP | 19485 | | | | | |
| | | 3dP | 27677 | | | | | |
| SP.2 | r/w | base | 3102 | 38972 | Float | -1999...9999 | <input type="checkbox"/> | Second (safety) setpoint. Ramp function as with other setpoints (effective, external). However, SP2 is not restricted by the setpoint limits. |
| | | 1dP | 11294 | | | | | |
| | | 2dP | 19486 | | | | | |
| | | 3dP | 27678 | | | | | |
| r.SP | r/w | base | 3103 | 38974 | Float | 0,01...9999 | <input checked="" type="checkbox"/> | Setpoint gradient [/min] or ramp. Max. rate of change in order to avoid step changes of the setpoint. The gradient acts in the positive and negative directions. Note for self-tuning: with activated gradient function, the setpoint gradient is started from the process value, so that there is no sufficient setpoint reserve. |
| | | 1dP | 11295 | | | | | |
| | | 2dP | 19487 | | | | | |
| | | 3dP | 27679 | | | | | |

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | | Description |
|-------|-----|------|---------|-------|-------|--------------|--------------------------|---|
| SP.EF | r | base | 3170 | 39108 | Float | -1999...9999 | <input type="checkbox"/> | Effective setpoint. The value reached at the end of setpoint processing, after taking W2, external setpoint, gradient, boost function, programmer settings, start-up function, and limit functions into account. Comparison with the effective process value leads to the control deviation, from which the necessary controller response is derived. |
| | | 1dP | 11362 | | | | | |
| | | 2dP | 19554 | | | | | |
| | | 3dP | 27746 | | | | | |
| Diff | r | base | 3171 | 39110 | Float | -1999...9999 | <input type="checkbox"/> | Difference between the effective setpoint and setpoint 2. |
| | | 1dP | 11363 | | | | | |
| | | 2dP | 19555 | | | | | |
| | | 3dP | 27747 | | | | | |

23 SETP

• Signal

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|------|-----|------|---------|-------|-------|--------------|--|
| SP | r/w | base | 3180 | 39128 | Float | -1999...9999 | <input type="checkbox"/> Setpoint for the interface (without the additional function 'Controller off'). SetplInterface acts on the internal setpoint before the setpoint processing stage. Note: The value in RAM is always updated. To protect the EEPROM, storage of the value in the EEPROM is timed (at least one value per half hour). |
| | | 1dP | 11372 | | | | |
| | | 2dP | 19564 | | | | |
| | | 3dP | 27756 | | | | |
| SP.d | r/w | base | 3181 | 39130 | Float | -1999...9999 | <input type="checkbox"/> The effective setpoint is shifted by this value. In this way, the setpoints of several controllers can be shifted together, regardless of the individually adjusted effective setpoints. |
| | | 1dP | 11373 | | | | |
| | | 2dP | 19565 | | | | |
| | | 3dP | 27757 | | | | |

24 Tool

• ConF

| Name | r/w | Adr. | Integer | real | Typ | Value/off | Description |
|--------|--------------|------|---------|-------|------|-----------|--|
| U.LinT | r/w | base | 634 | 34036 | Enum | Enum_Unit | Engineering unit of linearization table (temperature). |
| | | 1dP | 8826 | | | | |
| | | 2dP | 17018 | | | | |
| | | 3dP | 25210 | | | | |
| 0 | without unit | | | | | | |
| 1 | °C | | | | | | |
| 2 | °F | | | | | | |



Subject to alterations without notice.
Bei Änderungen erfolgt keine Mitteilung.
Modifications sans avertissement réservées.

© PMA Prozeß- und Maschinen-Automation GmbH
Postfach 310 229, D - 34058 Kassel
Printed in Germany 9499 040 65311 (02/2005)

A4, unbind, SW-Druck Normalpapier weiß 80g/m²